


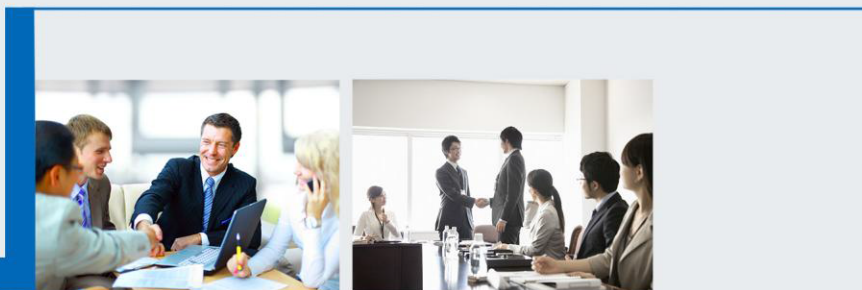

# Htek IP Phones UC924E User Manual



**Version 2.0.4.4.24**  
**Feb. 2018**

## Notices Information

### Copyright

Copyright © 2005 - 2018 Nanjing Hanlong Technology CO., LTD. All rights reserved.

Nanjing Hanlong Technology Co., LTD. owns all the rights to modify and copy this document at any time. And all the illustrations and text in this document are copyright protected. Therefore, no parts of this document may be used or reproduced, transmitted by the third parties for any purposes without the express written permission of Nanjing Hanlong Technology CO., LTD.

When this document is made available on [www.htek.com](http://www.htek.com), Nanjing Hanlong Technology Co., LTD. gives its right to download and print copies of this content only for private use as a user manual. No parts shall have the right to alter, modify or use as commercial means without prior written permission from Nanjing Hanlong Technology Co., LTD.

### Safety Instructions

- To use the Phone, please follow the instructions in this user manual.
- Use the power adapter supplied with your phone. Other power adapters may damage the phone.
- This phone is only for indoor use. And also avoid in high humidity, water and some other liquids.
- Do not use the phone during thunderstorms.
- CE
- FCC

### WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

### Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might

damage the surface or internal electronics of the phone.

## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

\*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## Summary of changes

This section describes the changes to this user manual for each release and user manual version.

### Change for Release x.0.4.0.10, Manual version

#### x.0.4.0.10

Major updates have occurred to the following sections:

- [Label Scroll](#)

### Change for Release x.0.4.0, Manual version x.0.4.0

Major updates have occurred to the following sections:

- [IPv6](#)
- [IPv4&IPv6](#)

### Change for Release x.0.3.98.O, Manual version

#### x.0.3.98.O

Major updates have occurred to the following sections:

- [Reboot in Talking](#)

### Change for Release x.0.3.98.A, Manual version

#### x.0.3.98.A

Major updates have occurred to the following sections:

- [Auto Logout Time](#)

### Change for Release x.0.3.98, Manual version x.0.3.98

Major updates have occurred to the following sections:

- [Daylight Saving Time](#)

## Change for Release x.0.3.93, Manual version x.0.3.93

Major updates have occurred to the following sections:

- [Check-Syn With Authenticate](#)
- [Call Back](#)

## Change for Release x.0.3.88, Manual version x.0.3.88

Major updates have occurred to the following sections:

- [Visual Alert for BLF Pickup](#)
- [Detect IP Conflict](#)

## Change for Release x.0.3.72, Manual version x.0.3.72

Major updates have occurred to the following sections:

- [Voice Mail Tone](#)
- [Backup NTP Server](#)
- [Intercom Barge](#)

## Change for Release x.0.3.65, Manual version x.0.3.65

Major updates have occurred to the following sections:

- [Redial Mode](#)

## Change for Release x.0.3.63, Manual version x.0.3.63

Major updates have occurred to the following sections:

- [Suppress DTMF Display](#)
- [Suppress DTMF Display Delay](#)

## Change for Release x.0.3.62, Manual version x.0.3.62

Major updates have occurred to the following sections:

- [Auto Redial](#)

# Table of Content

Notices Information .....	2
Copyright.....	2
Safety Instructions.....	2
WEEE Warning.....	2
Cleaning.....	2
FCC Statement.....	3
Summary of changes .....	4
Change for Release x.0.4.0.10,Manual version x.0.4.0.10 .....	4
Change for Release x.0.4.0,Manual version x.0.4.0.....	4
Change for Release x.0.3.98.O,Manual version x.0.3.98.O .....	4
Change for Release x.0.3.98.A,Manual version x.0.3.98.A.....	4
Change for Release x.0.3.98,Manual version x.0.3.98.....	4
Change for Release x.0.3.93,Manual version x.0.3.93.....	5
Change for Release x.0.3.88,Manual version x.0.3.88.....	5
Change for Release x.0.3.72,Manual version x.0.3.72.....	5
Change for Release x.0.3.65,Manual version x.0.3.65.....	5
Change for Release x.0.3.63,Manual version x.0.3.63.....	5
Change for Release x.0.3.62,Manual version x.0.3.62.....	5
Table of Content .....	6
Getting Started.....	11
Packing List.....	11
Phone Installation.....	13
1. Attach the Foot stand.....	13
2. Connect the Handset and optional Headset.....	14
3. Connect the Network and Power .....	14
Initialization .....	15
Status .....	16
Registration.....	19
Idle Screen.....	23
Getting Familiar with Your Phone.....	24
Hardware Components Preview .....	24
Icon Preview .....	26
LED Instruction.....	30
Power Indicator LED.....	30
Line LED:(Line or Line Key set as Line).....	30
BLF or BLF List Key LED :( Line/Line Key set as BLF).....	31
Shared Line LED: .....	31
Other Key Led .....	32
User Interface .....	32
Line Key Function Overview .....	34
Basic Setting Configuration.....	36

General Settings	36
Web Login	36
Administrator Password	37
Display Mode	38
Language	39
Wallpaper	41
Screen Saver	43
Backlight	46
Time and Date	47
LED Status Setting	54
Key as Send	55
Network Setting	56
IPv4	56
IPv6	60
IPv4&IPv6	63
PC Port	64
Contact Setting	66
Local Directory	67
Remote Phonebook	73
LDAP Phonebook	73
Search Contact	76
Call History Setting	78
Call History	78
Audio Settings	82
Volume	82
Ring Tone	84
Voice Mail Tone	87
Play Hold Tone	87
Play Hold Tone Delay	88
System Settings	88
Dial Plan	88
Dial-Now Timeout	89
No Key Entry Timeout	90
Emergency Call	91
Label Scroll	91
Show Missed Calls	92
Auto Logout Time	92
Reboot in Talking	92
Detect IP Conflict	93
Redial Mode	93
Keypad Lock	93
Suppress DTMF Display	95
Suppress DTMF Display Delay	96
Check-Syn With Authenticate	96

Other features settings .....	96
Action URL .....	96
Softkey Layout.....	97
Programmable Key.....	98
Exp Key.....	99
Basic Call Features .....	99
Place a Call .....	99
End a Call.....	101
Redial a Call.....	102
Receive a Call.....	102
Incoming Call Show Mode .....	103
Auto Answer .....	104
Call Hold.....	104
Call Transfer .....	105
Call Conference.....	109
Call Forward .....	110
Call Return.....	115
Call Back .....	116
Call Waiting Tone .....	117
Hide Caller ID.....	118
Reject Anonymous.....	119
Call Mute .....	120
DND .....	121
Hot Line.....	121
Auto Redial.....	123
Function Key Features Settings.....	125
Line.....	125
Speed Dial .....	126
BLF .....	127
Visual Alert for BLF Pickup.....	129
Audio Alert for BLF Pickup .....	130
BLF List.....	131
Voice Message .....	133
Direct Pickup .....	135
Group Pickup.....	136
Call Park.....	137
Intercom .....	138
Intercom Barge.....	140
DTMF .....	140
Prefix.....	142
Local Group.....	143
XML Group.....	144
LDAP.....	145
XML Browser .....	146



Broadsoft Group	147
Conference	148
Forward	148
Transfer	149
Hold	150
Group Listening	151
DND	151
Redial	152
SMS	153
Send SMS	153
Set SMS Line Key	154
Record	154
URL Record	155
Paging	156
Shared Line	157
Public Hold	159
Private Hold	160
Share line	161
Hot Desking	162
ACD	163
Zero Touch	164
Multicast Paging	165
Sending RTP Stream	166
Receiving RTP Stream	166
BT Feature	168
WIFI Feature	177
Upgrade	185
Factory Reset	185
Pcap Feature	186
System Log	187
Upgrade	187
Configuration File	189
Troubleshooting	191
Why is the phone LCD screen blank?	191
Why does the phone display "Network Unavailable"?	191
Why can't I get a dial tone?	191
Where to set the tone?	191
How to download XML Configuration?	192
How to Import Trusted CA certificate?	192
How to Import Server CA certificate?	193
How to use Vlan?	193
How to use LLDP?	193
How to Set LCD and Web GUI?	193
How to Upgrade via FTP?	194

---


How to make Ringtone? -----	194
How to use Open VPN? -----	194
Provisioning Guide on Free PBX-----	194
Redundancy Server -----	194
How to Use Auto Provision Phonebook? -----	194
All Documents -----	194

# Getting Started


## Packing List

The package contains the following parts, please check if all the items are not missed:

1. The phone device

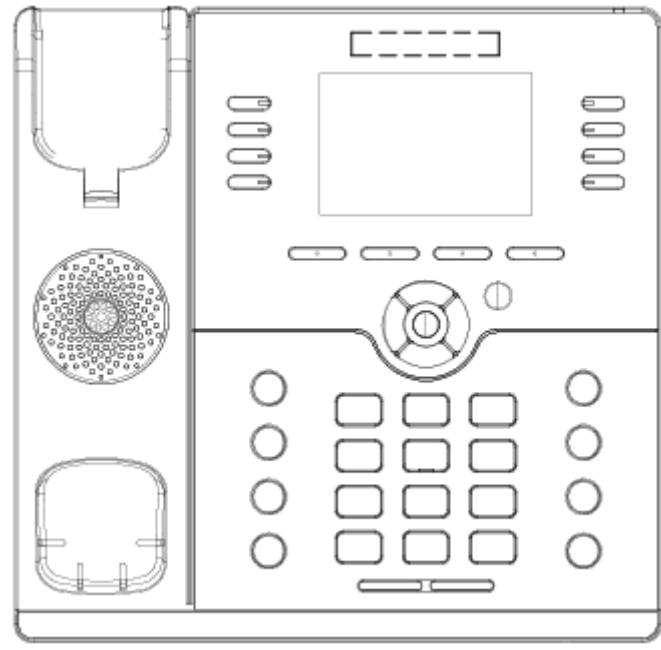


2. The footstand

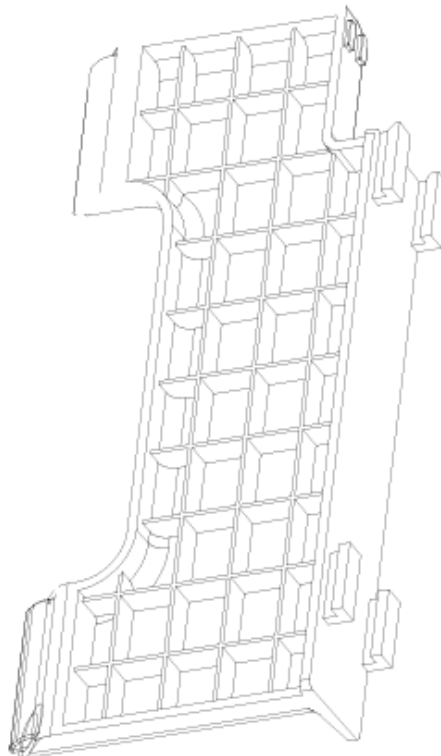


3. Handset




4. Headset cord

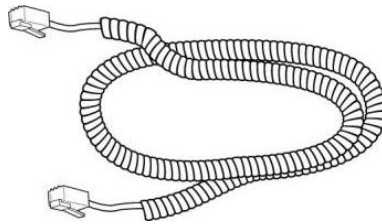


5. Power adapter

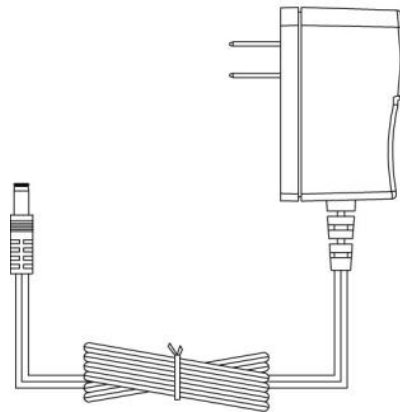

6. Ethernet cable

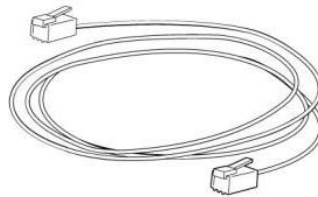


7. Quick installation reference

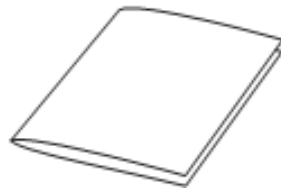


## Phone Installation


### 1. Attach the Foot stand

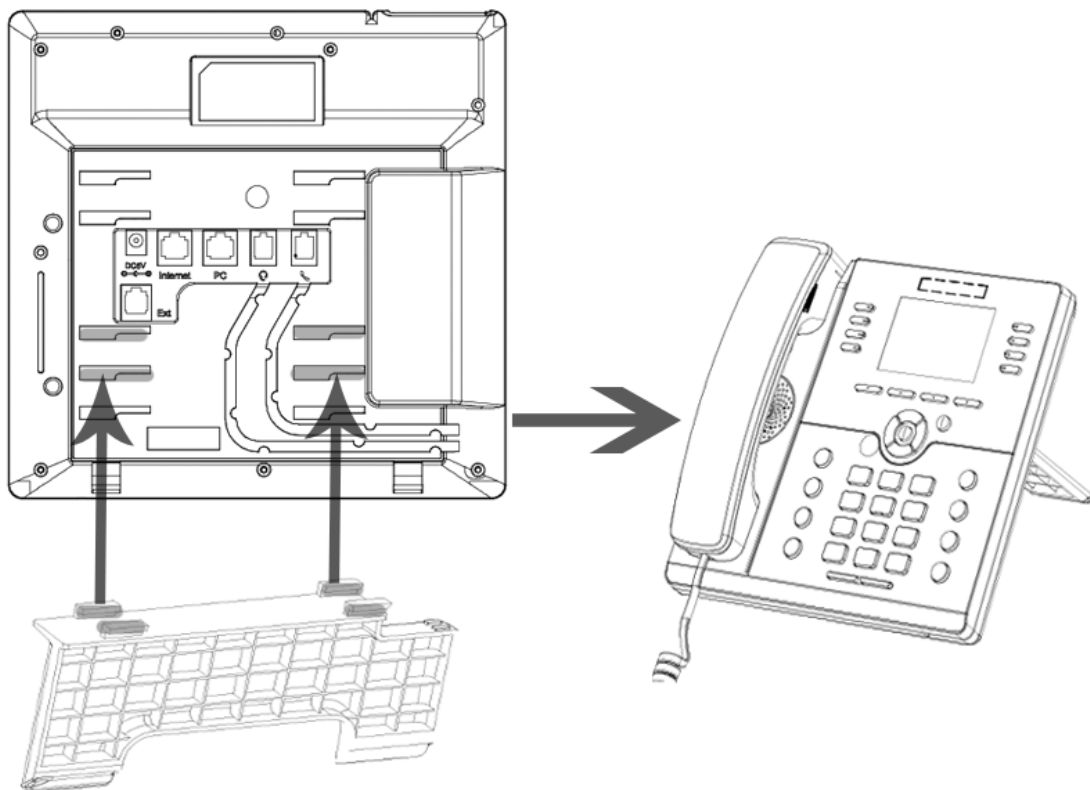

## 2. Connect the Handset and optional Headset

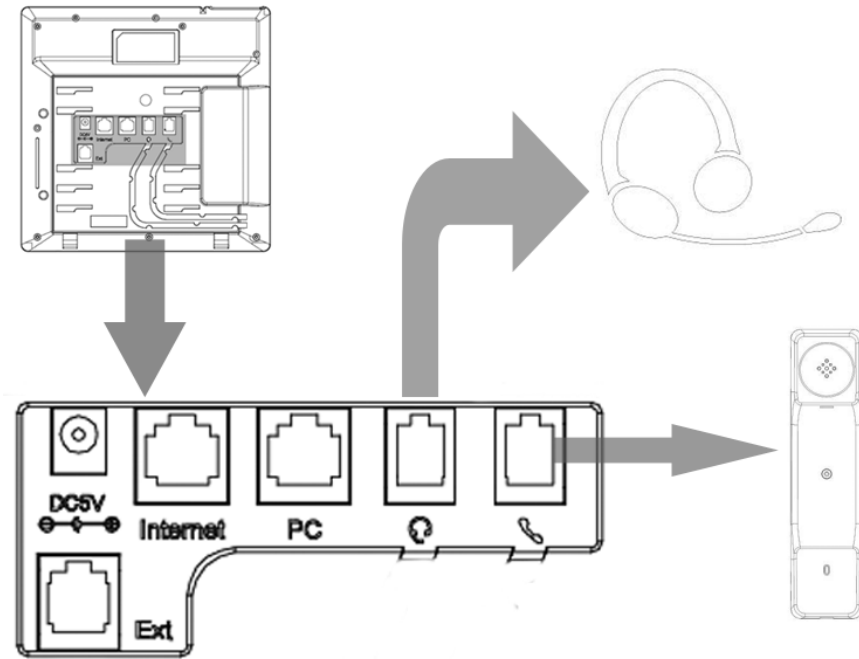

## 3. Connect the Network and Power

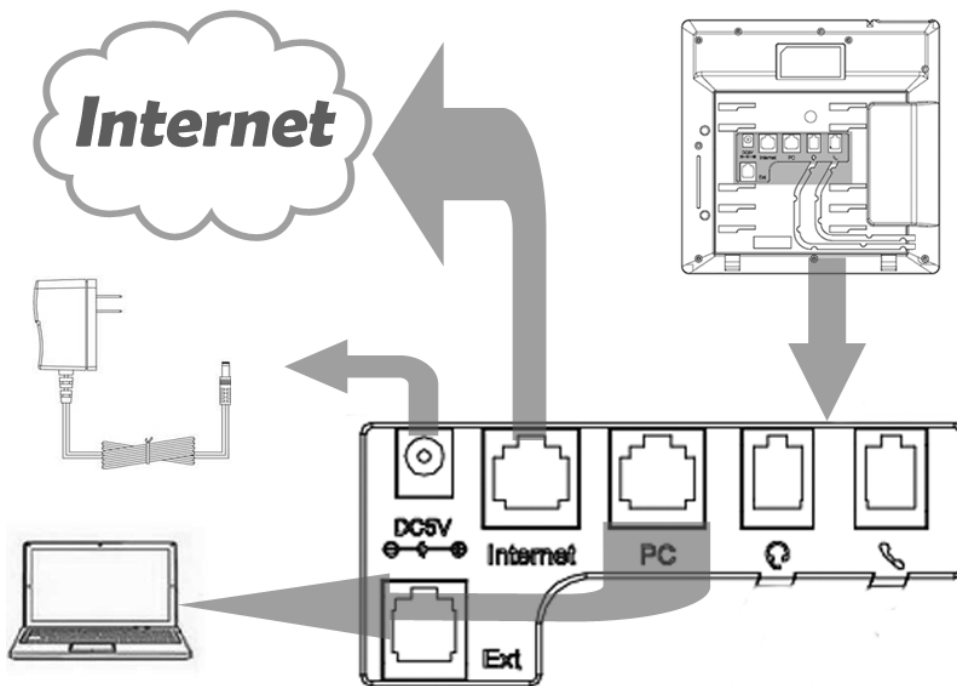

## Initialization


After your phone has been powered up, the system boots up and performs the following steps:

### Automatic Phone Initialization


The phone finishes the initialization process by loading the saved configuration. The phone LCD screen will display “Booting”




And then show “Initializing” during the initialization.

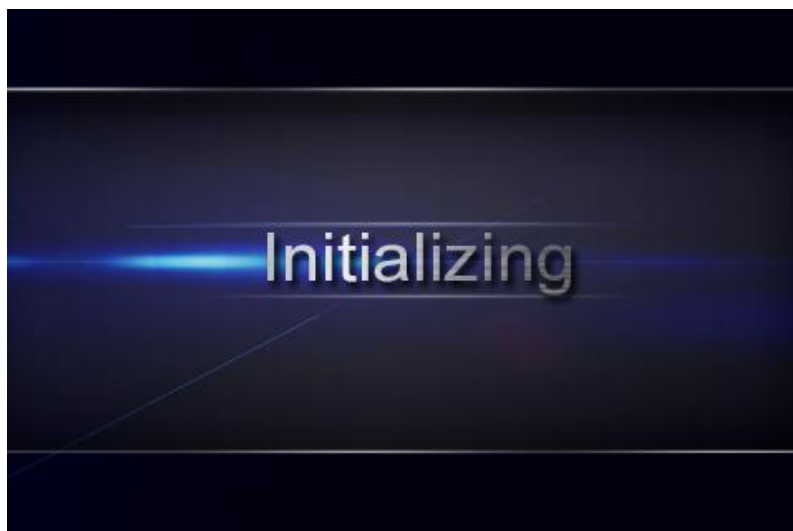

The IP Phone will upgrade the firmware if there is a new firmware on your server. And the IP Phone will show “Check firmware, please waitg...” after initialization.

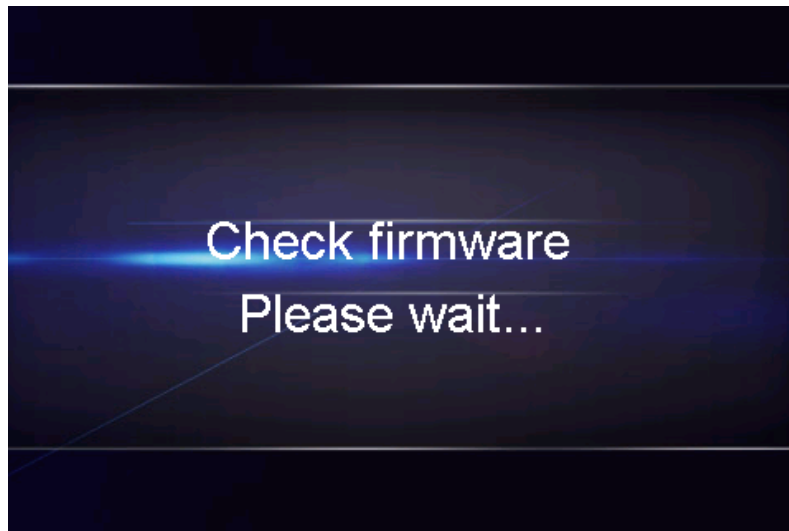

Then IP Phone will show Reboot information:

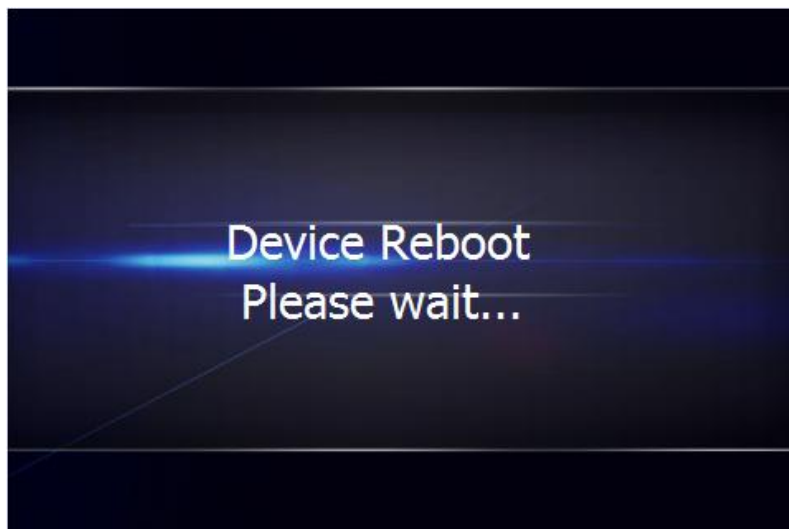

By default the phone attempts to contact a DHCP server in your network in order to obtain its valid network settings, e.g. IP address, subnet mask, default gateway, DNS server.

## Status

You can view the system status of your phone via phone user interface or web user interface. The information of phone status includes: Information (e.g., Model, IP, MAC, Firmware, Hardware), Network (e.g., WAN Type, IP, Mask, LAN Type, Gateway, DNS ...), Account (e.g., register status of accounts)

**To view the phone status via phone interface:**

1. Press Menu → Status → Information Network/ Account



Information	
1.Model:	UC924
2.IP:	192.168.1.29
3.MAC:	00:1f:c1:1b:4e:0b
4.Firmware(IMG):	<i>i</i> 2.0.3.98.AB(2016-07-28..
5.Firmware(BOOT):	<i>i</i> 2.0.3.38(2016-07-27 14..


Back

2. Press Menu →Status →Network


Network	
1.IPV4	
2.IPV6	
3.IP Port Mode:	IPV4&IPV6
4.LAN Type:	Bridge mode
5.MAC:	00:1f:c1:1a:8b:c4

Back Enter


3. Press Menu →Status →Network→IPV4

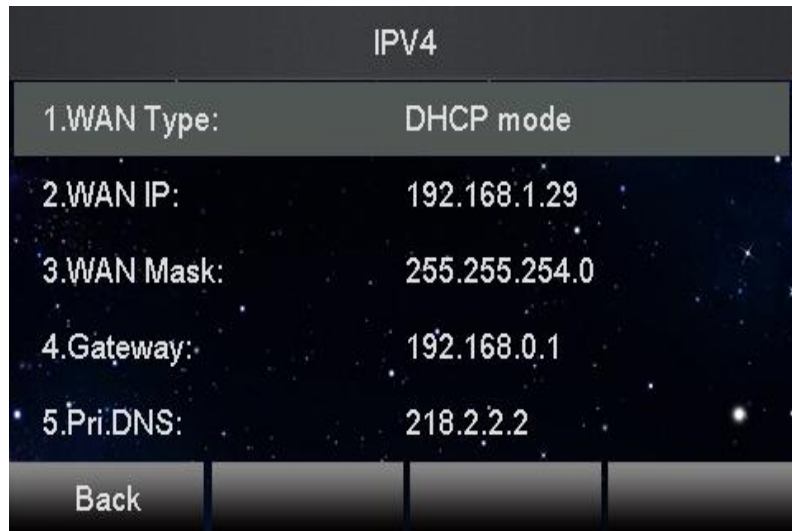

4. Press Menu →Status →Network→IPV6

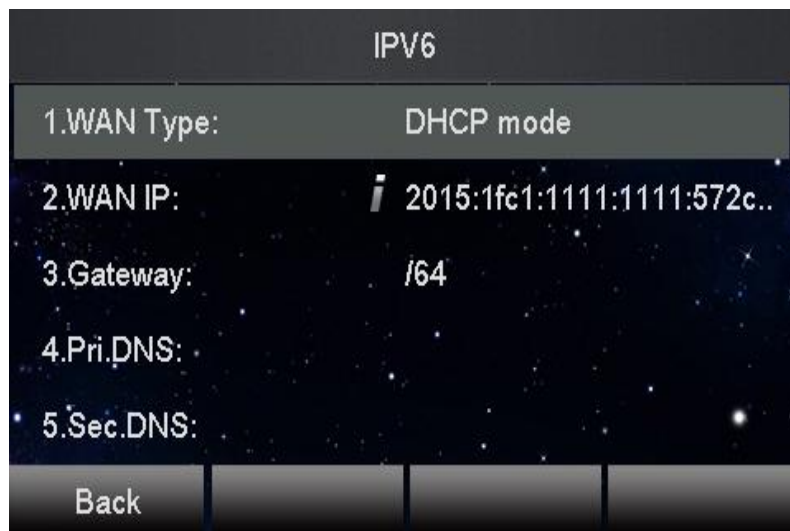

5. Press Menu →Status →Account(UC924E support four accounts)

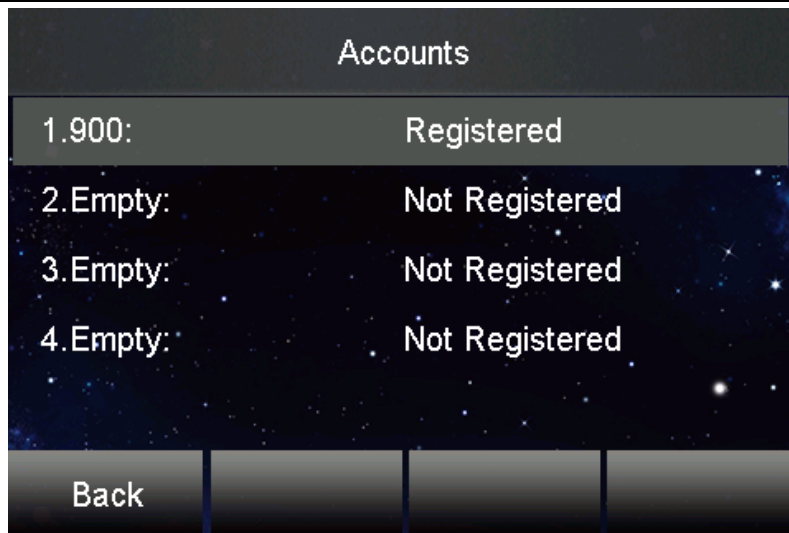

To view the phone status via Web interface :

Login webpage ( For How to login, please refer to [Web Login](#))

View the information of Version, Account and Network.

**Status**

**Version**

Product Model	UC924
Firmware Version	BOOT--2.0.3.36(2016-01-23 10:15:00) IMG--2.0.3.98(2016-04-21 15:06:00) ROM--2.0.3.98(2016-04-21 15:58:00) DSP--9.0.3(Patch 1.0.0)

**Account Status**

Account1	Registered
Account2	Registered
Account3	Disabled
Account4	Disabled

**Network**

WAN Port Type	DHCP
WAN IP Address	192.168.0.148
Subnet Mask	255.255.255.0
Gateway	192.168.0.1
Primary DNS	218.2.2.2
Secondary DNS	218.4.4.4
MAC Address	00:1f:c1:1b:54:2e
Device Type	Bridge

**NOTE**

**Version:**  
It shows product type and the version of firmware.

**Account Status:**  
It shows the registered status of accounts.

**Network:**  
It shows the detail information of WAN port and LAN port.


**System Up Time:**  
It shows the running time after device power up.

**Restart:**  
Restart the voip application

## Registration

To register via phone interface :

1. Press Menu→ Setting→Advanced setting (default password: admin)→Accounts
2. Select the desired account
3. Select Enable for Account active
4. Filled the SIP Server
5. Filled the Failover SIP server if need (Optional)
6. Filled the Outbound Proxy (Optional)
7. Filled the SIP User ID, Authenticate ID
8. Filled the password, Name (shown on LCD) and Ringtone.
9. Press Save to save the configuration.

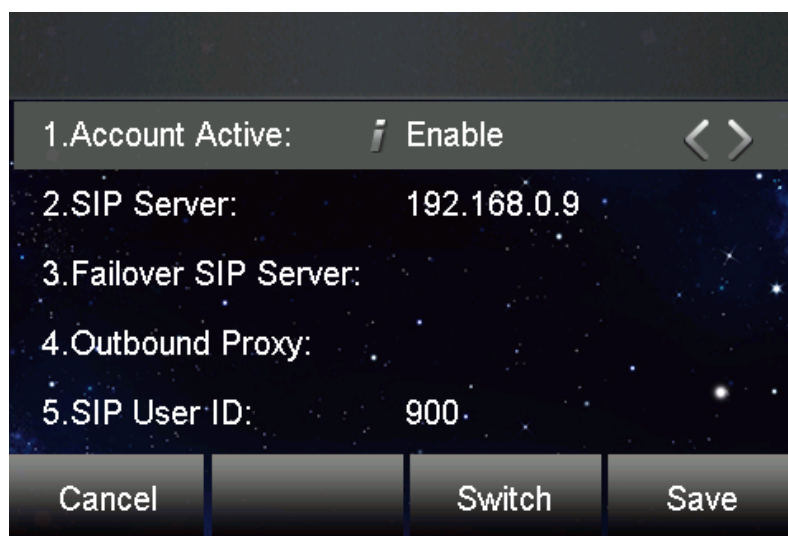

**Note:**

If there is a port of sip server, you need to press “1” on the keypad, then you will find the “.”.

**Additional Information:**

When the current input method is ABC/abc/2ab,

Pressing “1”, you will find “, . ?:;”


Pressing “0”, you will find “ < >(){}[]”

Pressing “\*”, you will find “\*/!@\$”

Pressing “#”, you will find “#’%&\*|”

**To register via web interface:**

1. Login webpage and Click Account→Basic
2. Select the desired Account
3. Select Yes for Account Active
4. Filled the Primary SIP SERVER and other account information
5. Click  to save the configuration.

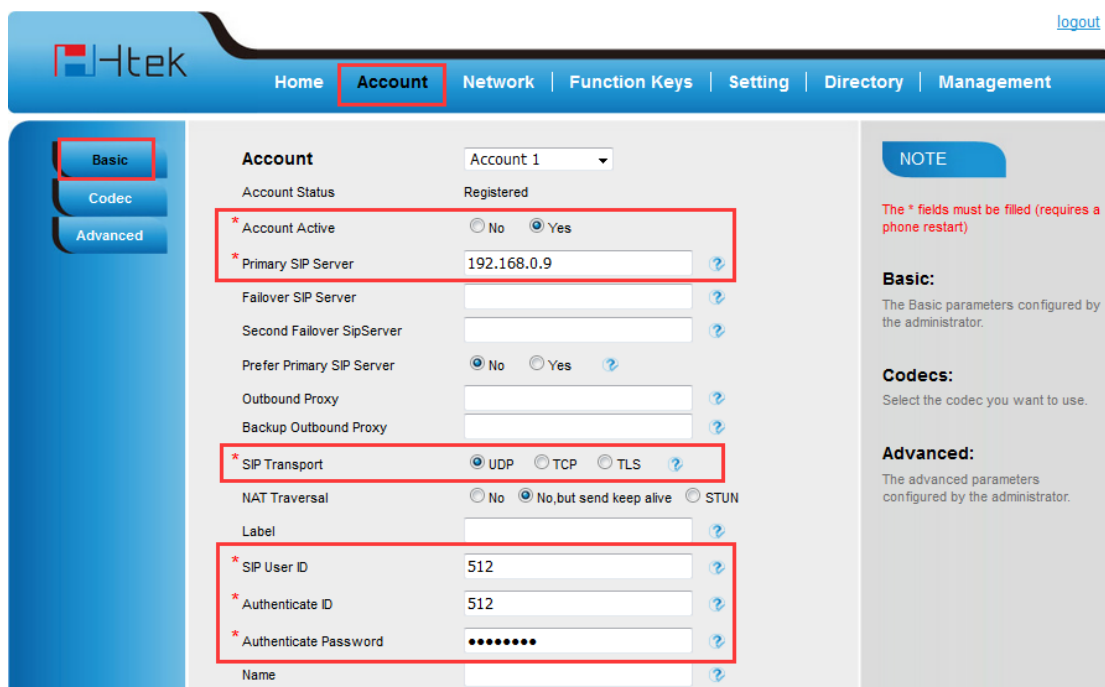

**Account** Account 1

Account Status Registered

\* Account Active  No  Yes

\* Primary SIP Server 192.168.0.9 ?

Fallover SIP Server ?

Second Fallover SipServer ?

Prefer Primary SIP Server  No  Yes ?

Outbound Proxy ?

Backup Outbound Proxy ?

\* SIP Transport  UDP  TCP  TLS ?

NAT Traversal  No  No, but send keep alive  STUN

Label ?

\* SIP User ID 512 ?

\* Authenticate ID 512 ?

\* Authenticate Password \*\*\*\*\* ?

Name ?

**NOTE**

The \* fields must be filled (requires a phone restart)

**Basic:**  
The Basic parameters configured by the administrator.

**Codecs:**  
Select the codec you want to use.

**Advanced:**  
The advanced parameters configured by the administrator.

**To register via DHCP SIP Server:**

1. Login web page and Click Account→Basic
2. Select Yes for Account Active
3. Select Yes for the DHCP SIP Server
4. Filled account information
5. Click  to save the configuration.

<b>Basic</b>	<b>Account</b> <span>Account 1</span>	
<b>Codec</b>	Account Status: Registered	
<b>Advanced</b>	* Account Active: <input type="radio"/> No <input checked="" type="radio"/> Yes	
	* Primary SIP Server: <input type="text"/>	<a href="#">?</a>
	Fallover SIP Server: <input type="text"/>	<a href="#">?</a>
	Second Fallover SipServer: <input type="text"/>	<a href="#">?</a>
	Prefer Primary SIP Server: <input checked="" type="radio"/> No <input type="radio"/> Yes <a href="#">?</a>	
	Current SIP Server: 192.168.0.9	
	DHCP SIP Server: <input type="radio"/> No <input checked="" type="radio"/> Yes	
	192.168.0.9	
	Outbound Proxy: <input type="text"/>	<a href="#">?</a>
	Backup Outbound Proxy: <input type="text"/>	<a href="#">?</a>
	* SIP Transport: <input checked="" type="radio"/> UDP <input type="radio"/> TCP <input type="radio"/> TLS <a href="#">?</a>	
	NAT Traversal: <input type="radio"/> No <input checked="" type="radio"/> No, but send keep alive <input type="radio"/> STUN	
	Label: <input type="text"/>	<a href="#">?</a>
	* SIP User ID: <input type="text" value="810"/>	<a href="#">?</a>
	* Authenticate ID: <input type="text" value="810"/>	<a href="#">?</a>
	* Authenticate Password: <input type="password" value="••••••"/>	<a href="#">?</a>
	Name: <input type="text"/>	<a href="#">?</a>

**NOTE**

The \* fields must be filled (requires a phone restart)

**Basic:**  
The Basic parameters configured by the administrator.


**Codecs:**  
Select the codec you want to use.

**Advanced:**  
The advanced parameters configured by the administrator.

**Note:**

1. All fields with \* must be filled. If changed, it requires a phone restart.
2. Account Status says the account registered successfully or not.


## Idle Screen

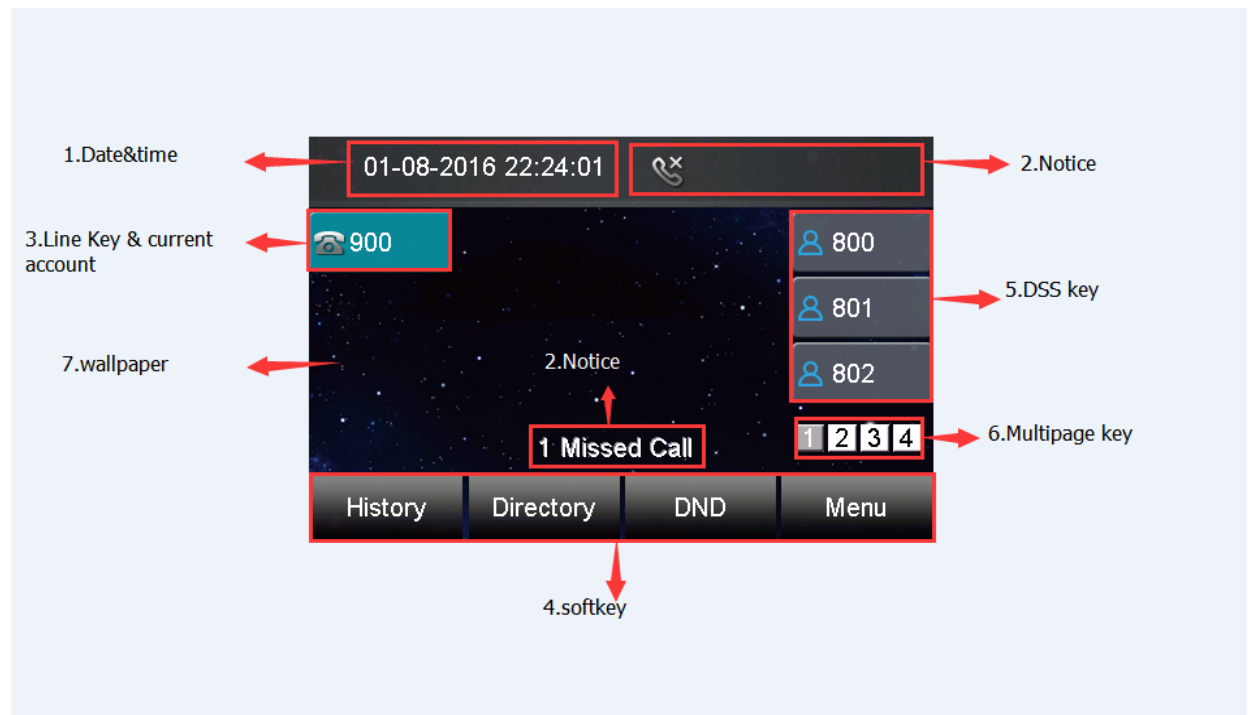

Name	Description
1. Date&Time	It shows the phone's time & date. For Date&time setting, see <a href="#">Time&amp;Date</a>
2. Notice	It shows the phone features status and detail status, More see <a href="#">Icon Preview</a>
3. Line Keys	This area shows the line key labels. The current account is highlighted. you can switch the account by pressing right or left navigation key. The Line keys are also can be used as other function keys. For more information you can refer to <a href="#">Line Keys</a>
4. Soft Key	This area shows the soft key labels. The default soft key labels are "History", "Directory", "DND" and "Menu". More to see <a href="#">Programmable Key</a>
5. DSS key	The Line keys are can be used as other function keys(e.g.: BLF)
6. Multipage key	UC924E support 28 keys,you can configure different type.you can view and use these keys by pressing the multipage key.
7. Wallpaper	This shows the backgrounds picture. You can also change it. For more information you can refer to <a href="#">Wallpaper</a> .





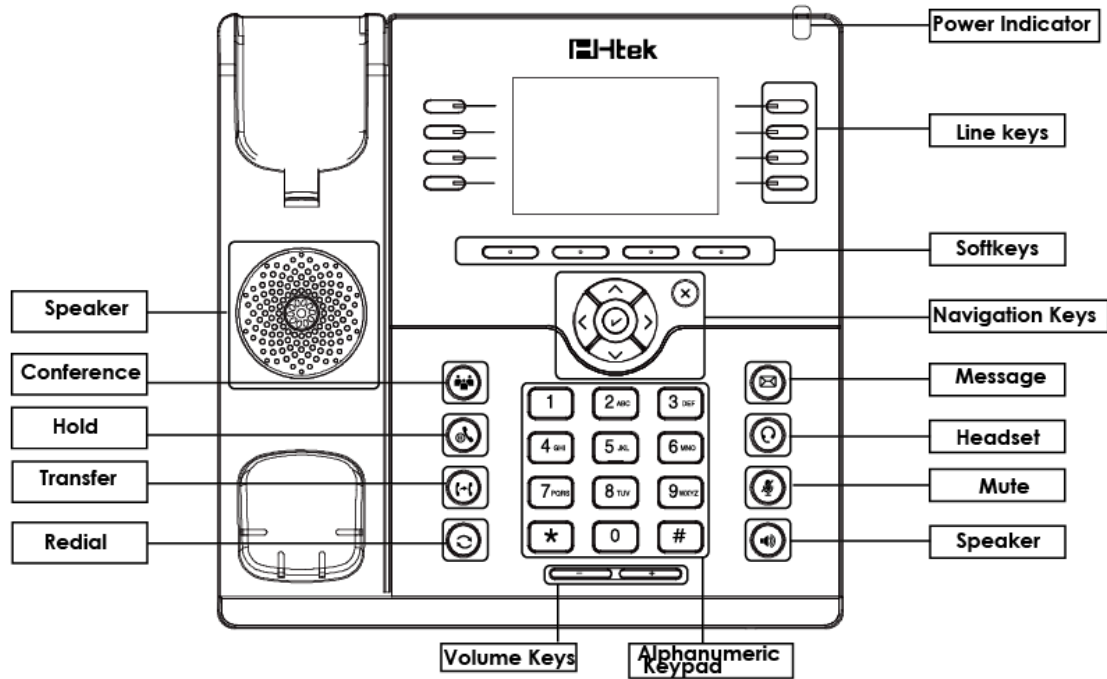



# Getting Familiar with Your Phone









## Hardware Components Preview




Item	Description
LCD screen	To Presentation all information about the date& time, accounts, soft keys, messages, calls and other some information.
Power Indicator LED	To indicate the power status
Line keys	The phone supported up to 4 accounts 1. Steady green: idle interface, during a call.. 2. Blink red: a call incoming
Soft keys	Labels automatically to identity their context-sensitive features.



























<p>Navigation keys</p>	<p> 1. OK.</p> <p> <b>Up arrow key:</b> To move up of the selection shows on the screen.</p> <p> <b>Right arrow key:</b> To move right of the selection shows on the screen.</p> <p> <b>Left arrow key:</b> To move left of the selection shows on the screen.</p> <p> <b>Down arrow key:</b> To move down of the selection shows on the screen.</p> <p> 1. To return to idle screen. 2. To cancel the information or call on the screen.</p>
<p>Mute key</p>	<p> 1. To mute the voice during the call (Red light). 2. To un-mute the call.</p>
<p>Conference</p>	<p> To place a conference call</p>
<p>Line Keys</p>	<p>To be configured as different function as:</p> <ol style="list-style-type: none"> <li>1. Line</li> <li>2. Speed Dial</li> <li>3. BLF</li> <li>4. BLF List</li> <li>5. Voice mail</li> <li>6. Direct Pickup</li> <li>7. Group Pickup</li> <li>8. Call Park</li> <li>9. Intercom</li> <li>10. DTMF</li> <li>11. Prefix</li> <li>12. Hold</li> <li>13. Conference</li> <li>14. DND</li> <li>15. Redial</li> <li>16. Transfer</li> <li>17. SMS</li> <li>18. Hot -desking</li> <li>19. Call Return</li> <li>20. Paging</li> <li>21. Record</li> <li>22. Shared Line</li> </ol> <p>The LED lights status when set as Shared line:</p>














	<p>Stay green: Idle          Stay red: Busy          Blinked green: Ring Back          Blinked red: A call incoming          Steady orange: During a call          Blinked orange: Public Hold          Blinked green: Private Hold          Light Drown: Unregistered</p> <p>23. Hot desking          24. ACD          25. Zero Touch          26. Multicast paging</p>
Speaker	 Press this button to place a call in hands-free mode.
Redial	 <p>To dial the previous dialed number.          To act as send key.</p>
Volume	 <p>To decrease the volume.</p>  <p>To increase the volume.</p>
Hold	 To hold or to resume a call during a conversation.
Transfer	 <p>To transfer a call to a third party.          To enable or disable Forward feature during the idle page.</p>
Alphanumeric keypad	To enter the phone numbers, letters and so on.
Message	 To indicator the New message, and press to read.
Headset	 To indicate that the phone is or not in Headset mode.


### Icon Preview





Icon	Description
	Network down

	Line(Registered succeed)
	Line (Unregistered)
	Line(Ringing)
	Speed Dial
	BLF
	BLF(Ringing)
	BLF(Talking)
	Speakerphone mode
	Handset mode
	Headset mode
	Voice messages

	Text message
	Mute
	Do Not Disturb
	Volume is 0
	SRTP
	Hold
	Dialed calls
	Received calls
	Missed calls
	Forward calls
	Conference
	Keypad locked
	Keypad unlocked
	Pick up

	Call Park
	<b>Intercom/Paging</b>
	DTMF
	Prefix
	XML Group
	Local Group
	XML Browser
	LDAP
	Broadsoft Group
	Conference
	Forward
	Transfer
	Hold
	Line on Hold
	DND
	Redial
	Call Return

	SMS
	Record

	<b>Recording</b>
	Group Listening
	Shared Line
	Other Functions

## LED Instruction

This part mainly instructs the LED status. The Power LED Status describe on the premise that the LED setting all set as Yes. For LED status setting, please refer to: [LED Status Setting](#)

### Power Indicator LED

LED Status	Description
Blinked green	Ringling or have missed call
Steady Green	Idle status(Power on)
Off	Powered off.

### Line LED:(Line or Line Key set as Line)

LED Status	Description
Steady Green	Hold

Steady Green	Off hook or during a conversation.
Blinked red	Ringing.
Off	Idle status

**BLF or BLF List Key LED :( Line/Line Key set as BLF)**

LED Status	Description
Steady Green	Idle status for the monitored line
Steady Red	The monitored line is calling or during a call
Blinked red	The monitored line is ringing.
Off	All other unknown status

**Shared Line LED:**

LED Status	Description
off	Idle status
Stay green	a member of the SCA group in off-hook status
Stay red	Other member of the SCA group's led status when a member of the SCA group in off-hook status
Blinked green every 500ms	a member of the SCA group in Private hold status.
Stay red	Other member of the SCA group's led status when a member of the SCA group in Private hold status
Blinked green every 500ms	a member of the SCA group in public hold status
Blinked red every 500ms	Other member of the SCA group's led status when a member of the SCA group in public hold status
Blinked green every 500ms	a member of the SCA group in progressing status
Stay red	Other member of the SCA group's led

	status when a member of the SCA group in progressing status
Blinked red every 100ms	Alerting
Stay green	a member of the SCA group in active status when there is an incoming call designated for the SCA group
Stay red	Other member of the SCA group's led status when a member of the SCA group in active status

## Other Key Led

Key	Description
Headset Key	When use in headset mode, the led is steady green or the LED is off.
Message Key	Blinked green when there is a new message or the LED is off.
Mute Key	Red when the mute the call, or the LED is off.

## User Interface

There are two ways to customize specific configurations on your IP phone:

- The user interface on the IP phone
- The user interface in a web browser on your PC

The hardware components keypad and LCD screen constitute the phone user interface, which allows the user to execute all call operation tasks and basic configuration changes directly on the phone. In addition, you can use the web user interface to access all configuration settings. In many instances, it is possible to use both the phone user interface and the web user interface to operate the phone and change settings. However, in some instances, it is only possible to use the phone or the web user interface.

### Phone Interface Overview

Option	
Status	Model



	IP
	MAC
	Firmware(IMG,BOOT,ROM)
	Device Cert
	Language
	Expansion Module
	EHS Version
	Network
	Account
Features	Call Forward
	Function Key(Line and Line Key setting) More Key see <a href="#">Line Key Overview</a>
	Key as Send
	Hot Line
	Anonymous Call
	DND Code
	History Setting
Directory	All Contacts
	Local Contacts
	Blacklist Contacts
History	Local History
	Network CallLog
Message	Voice Mail set and View.
	Text Message view and set.
Basic Settings	Language
	Time & Date
	Time & Date Format
	DHCP Time
	Ring tone
	Headset
Advanced Settings	Account
	Network
	Phone Setting
	Auto provision
Display	Display Mode
	Wallpaper
	Screensaver
Others	Factory Function
	System Restart
	Device Reboot

	Pcap Feature
--	--------------

## Line Key Function Overview

<a href="#">Line</a>
<a href="#">Speed Dial</a>
<a href="#">BLF</a>
<a href="#">BLF List</a>
<a href="#">Voice Mail</a>
<a href="#">Direct Pick Up</a>
<a href="#">Group Pick Up</a>
<a href="#">Call Park</a>
<a href="#">Intercom</a>
<a href="#">DTMF</a>
<a href="#">Prefix</a>
<a href="#">Local Group</a>
<a href="#">XML group</a>
<a href="#">LDAP</a>
<a href="#">XML Browser</a>
<a href="#">Broadsoft group</a>
<a href="#">Conference</a>

<a href="#">Forward</a>
<a href="#">Transfer</a>
<a href="#">Hold</a>
<a href="#">Group Listening</a>
<a href="#">DND</a>
<a href="#">Redial</a>
<a href="#">Call Return</a>
<a href="#">SMS</a>
<a href="#">Record</a>
<a href="#">URL Record</a>
<a href="#">Paging</a>
<a href="#">Shared Line</a>
<a href="#">Public Hold</a>
<a href="#">Private Hold</a>
Hot Desking
<a href="#">ACD</a>
Zero Touch
<a href="#">Multicast</a> Paging


## Basic Setting Configuration



This part will mainly introduce the basic configuration as the Time, Language, and Volume...

### General Settings

### Web Login

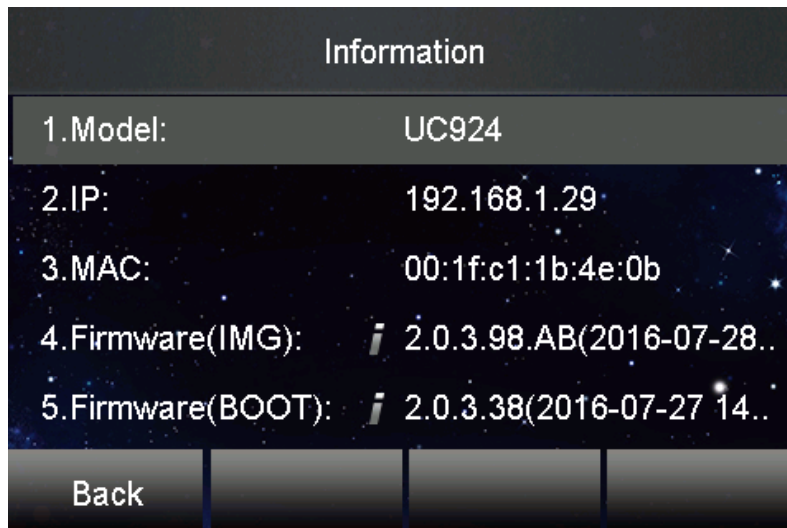
1. Get the IP address: Press Menu →Status →Information.



Information	
1. Model:	UC924
2. IP:	192.168.1.29
3. MAC:	00:1f:c1:1b:4e:0b
4. Firmware(IMG):	 2.0.3.98.AB(2016-07-28..
5. Firmware(BOOT):	 2.0.3.38(2016-07-27 14..

Back

2. Input the IP Address in the web browser.
3. Input the user name (default is admin), password (default is admin).
4. Login successfully.


logout

Home
Account
Network
Function Keys
Setting
Directory
Management

Status

- **Version** ?

Product Model	UC924
Firmware Version	BOOT--2.0.3.36(2016-01-23 10:15:00) IMG--2.0.3.98(2016-04-21 15:06:00) ROM--2.0.3.98(2016-04-21 15:58:00) DSP--9.0.3(Patch 1.0.0)

- **Account Status** ?

Account1	Registered
Account2	Registered
Account3	Disabled
Account4	Disabled

NOTE

**Version:**  
It shows product type and the version of firmware.

**Account Status:**  
It shows the registered status of accounts.

**Network:**  
It shows the detail information of WAN port and LAN port.

**System Up Time:**  
It shows the running time after

**Note:**


The PC and phone should be in the same segment.


When register the accounts in web and the server port is not "5060", then "SIP Server" should be set as "SIP Server's IP address: server port.", for example, "192.168.0.122: 5090".

## Administrator Password


The password is mainly used for login the web interface or set the advanced settings through phone interface. And the default password of the administrator is: **admin**


### To change to password via Phone Interface

1. Press Menu → setting → Advanced settings → password (default admin) →  
 Phone Setting → Set Password
2. Enter the current PWD (password), new password and confirm the new password.
3. Press save soft key or  to save the new password.

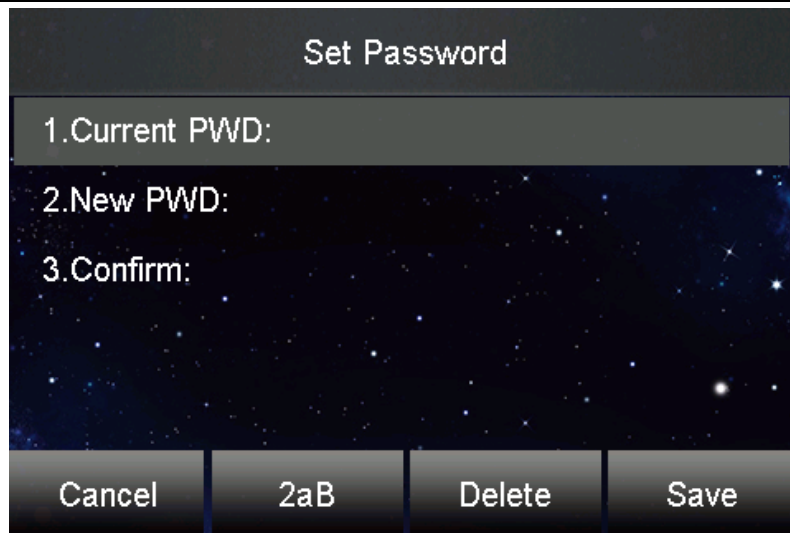

### To change to password via Web Interface

1. Management → Password
2. Fill the value
3. Click  to save the configuration.

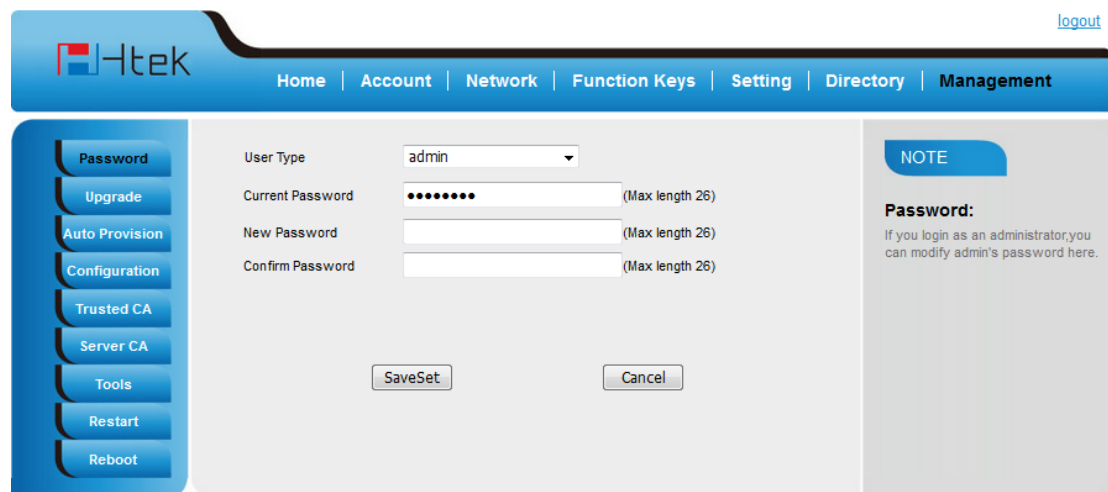

#### Note:

When you use the web interface: user name: admin      password: admin(default)

## Display Mode

This phone support two Display mode: Text and Icon.

**Icon Mode:** all Items are shown same as the main with Icon.


**Text Mode:** Only the 8 main items will be shown as icon, and others all text description.


**To Configure Display mode via phone interface:**

1. Press Menu→ Display→Display Mode
2. Select Text or Icon
3. Press Save soft key to save the configuration.

**To Configure Display mode via web interface:**

1. Login web interface, and click Setting→ Preference

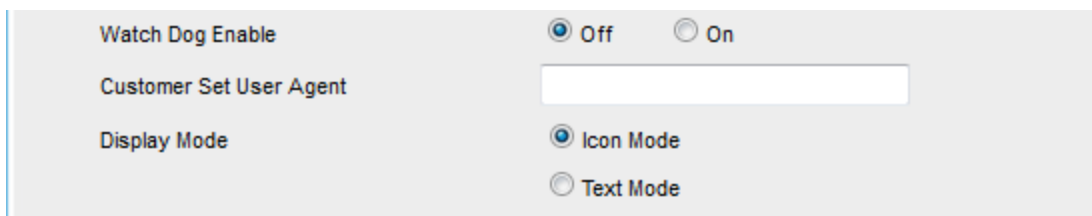



2. Select Icon Mode or Text Mode for the Display mode
3. Click  to save the configuration.


## Language


The default Phone interface language is English.

**To change the language via Phone interface**

1. Press Menu → Setting → Basic Settings → Language.

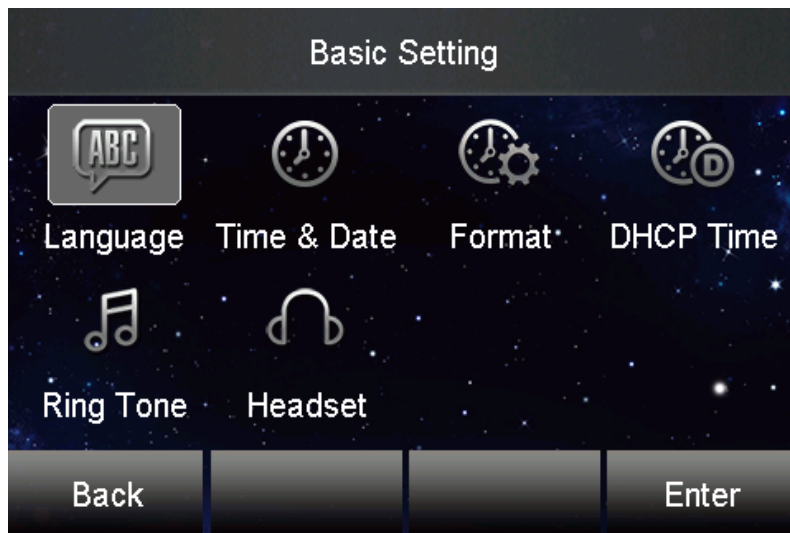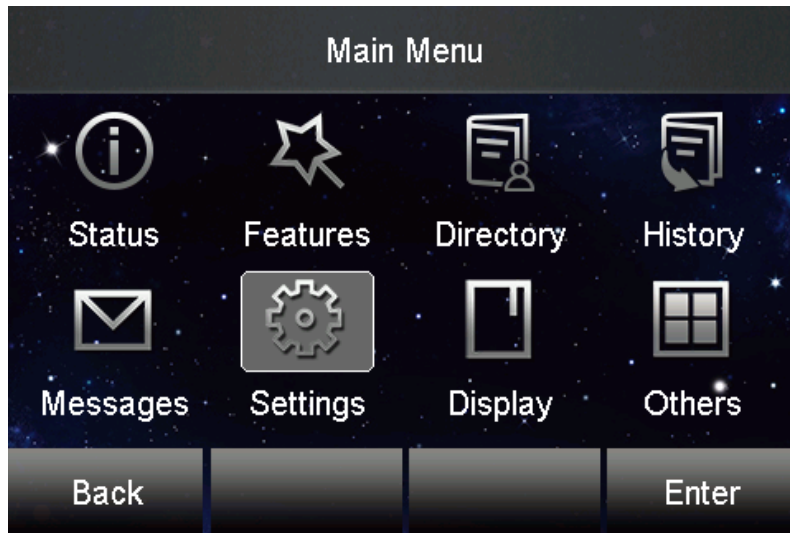


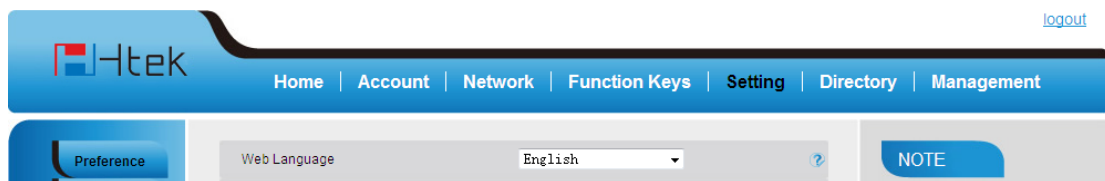
2. Press  or Save soft key to save the configuration.

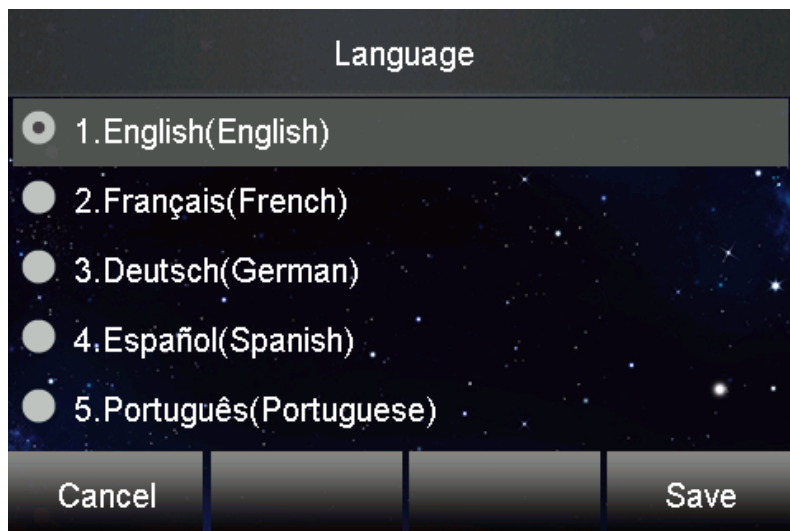



### To change the language via Web Interface

1. Setting → Preference → Web Language
2. Select the necessary one.
3. Press  to save the configuration.






#### Note:

All languages may not be available for selection. The available languages depend on the language packs currently loaded to the IP phone.

## Wallpaper

To change the preferred one picture for you by the following steps:


### To change the wallpaper via phone interface:

1. To press Menu → Display → wallpaper
2. Press  and  or press Switch soft key to display the different pictures.
3. Press  or Save soft key to save the selected picture as the wallpaper.




**To change the wallpaper via web interface:**

1. Click Setting→Preference
2. Select the desired wallpaper picture to upload.
3. Click  to save the setting.

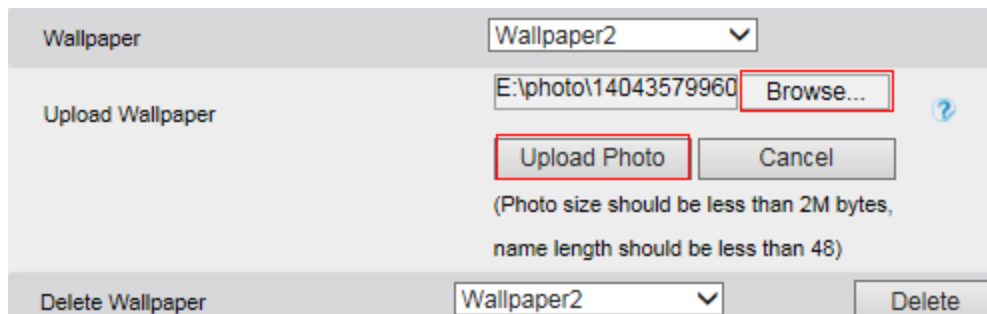

**To delete the wallpaper via web interface:**

1. Click Setting→Preference
2. Select the desired wallpaper to delete.
3. Click  to save the setting.

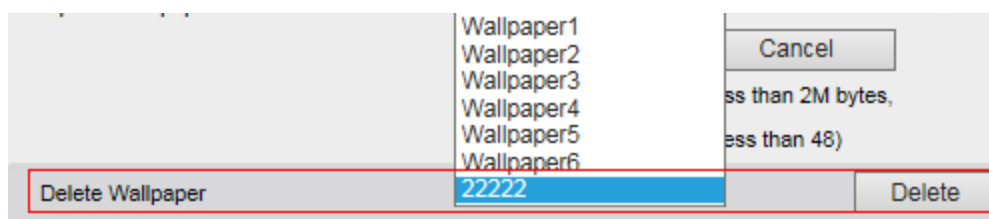

**Note:**

System wallpaper (Wallpaper1-Wallpaper6) cannot be deleted and only color IP Phone support upload wallpaper.

## Screen Saver

There are three types of screen saver: Time & Logo, Photo Switch and Photo.




**Time & Logo:** when the screensaver works, it will show Time and logo in turns.


**Photo Switch:** all screensaver pictures display one by one.

**Phone:** Only the select phone display as screensaver.




**Text logo:** It works with the **Time & Logo**, when enter the value, it will display the time and the entered value in turns.


### To enable screen saver via Phone interface:

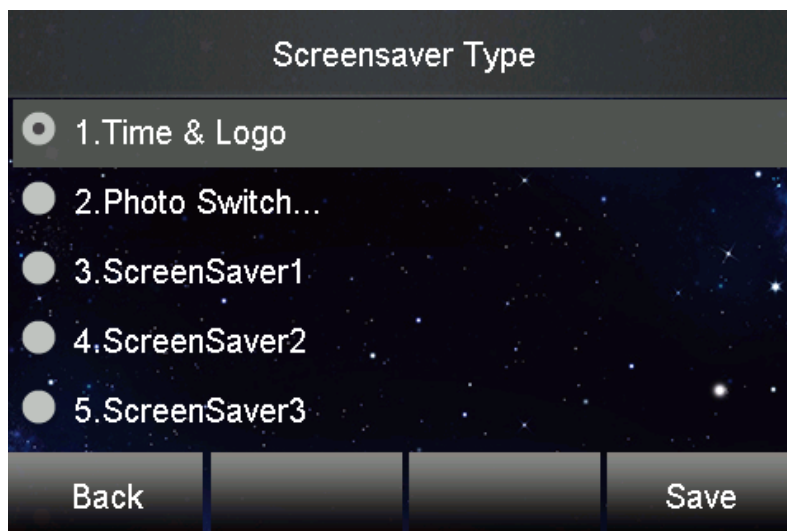1. To press Menu → Display → Screensaver...
2. Press  and  or press Switch soft key to Choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the Screensaver Type to choose one of the type: Backlight off, Time & Logo and Photo
4. Press  or Save soft key to save the selected configuration.




### To disable screen saver via Phone interface

1. To press Menu → Display → Screensaver...
2. Press  and  or press Switch soft key to Choose the Time-out as off.
3. Press  or Save soft key to save the selected configuration.

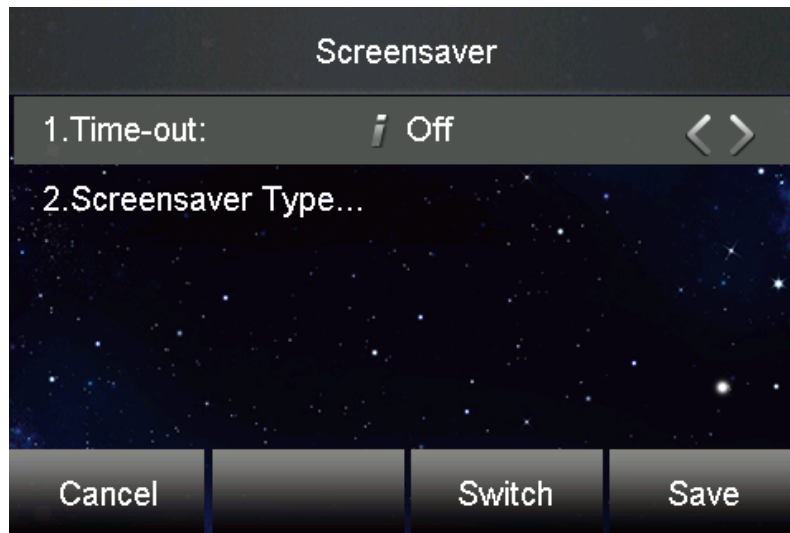


**To upload screen saver via Web interface:**

1. Setting → Preference
2. Choose the picture wanted to use as screen saver
3. Click  to save the upload picture

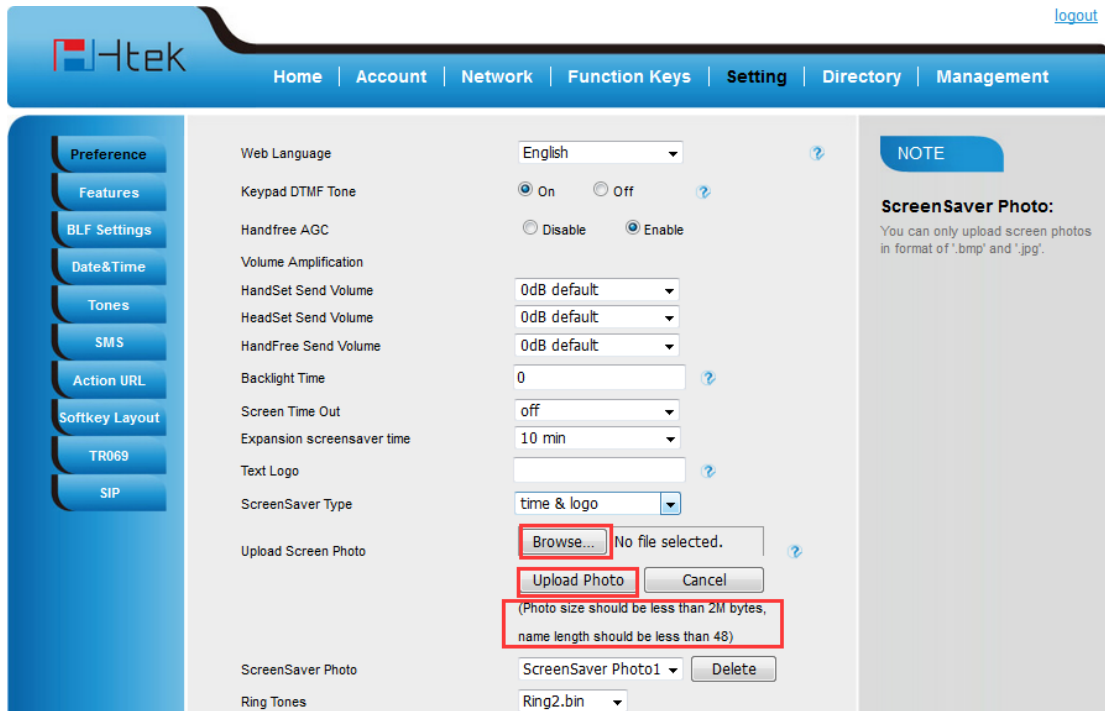

**To delete upload screen saver phone via Web interface :**

1. Setting → Preference
2. Select the photo that to delete.
3. Click Delete to delete the photo.

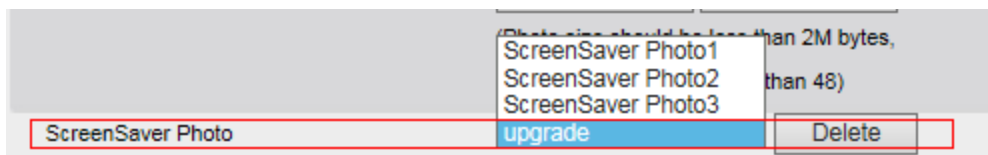

**Note:**  
**System Screen Photo (ScreenSaver1-ScreenSaver3) cannot be deleted and only color IP Phone support upload wallpaper.**

**To custom text logo via web interface :**

1. Click Setting→Preference.
2. choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the desired value in the Text Logo field.
4. Click Saveset to save the configuration.

Screen Time Out	1 min	▼
Text Logo	welcome	?

it will work when screensaver type is time & logo or logo only, and '\n' represents the newline

To wake up screen saver via Web interface:

1. Setting → Preference
2. Choose Dial First Digit: Screensaver Wakes up or Screensaver Wakes up and Dial


Dial First Digit	<input checked="" type="radio"/> Screensaver Wakes up
	<input type="radio"/> Screensaver Wakes up and Dial

**Note:**

1. The upload Photo size should be less than 2M bytes, name length should be less than 48, and the File name should be letters, numbers or underline '\_' and photo number should be less than 9.
2. The default screensaver photos cannot be deleted.
3. You can only upload screen photos in format of '.bmp' and '.jpg'.

## Backlight

To set Backlight via web interface:

1. Click setting→Preference
2. Enter the time for Backlight time (In seconds).
3. Click  to save the configuration.

The default is 0, which means Backlight is always on.


The screenshot shows the Htek web interface with the 'Setting' menu selected. The 'Backlight Time' is highlighted with a red box and set to 0. A 'NOTE' box on the right contains the text: 'ScreenSaver Photo: You can only upload screen photos in format of '.bmp' and '.jpg'.'

## Time and Date




The time and date showed on the idle page can be set manually or automatically synchronized to NTP server.


### To configure the time and Date by SNTP setting via phone interface

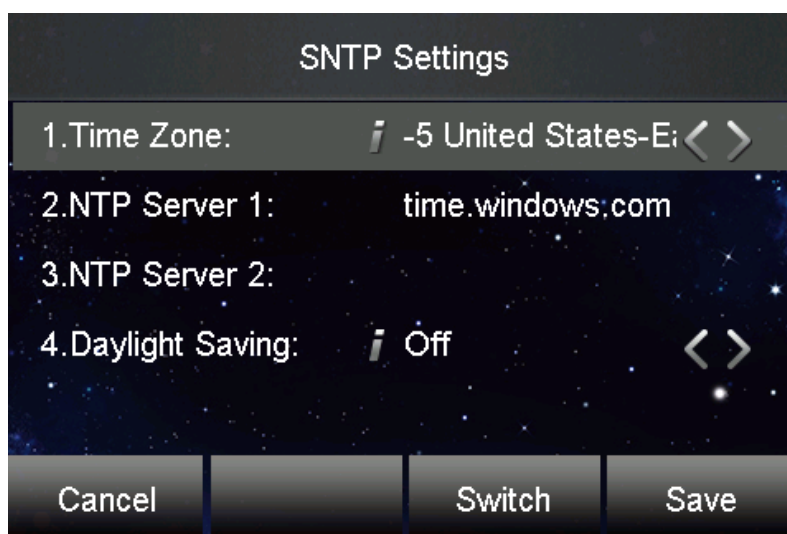




1. To press Menu → Setting → Basic setting → Time & Date → SNTP Settings
2. Press or to change the Time zone.
3. Fill the NTP server1, NTP Server2, and Daylight Saving.
4. Press or Save soft key to save the configuration.

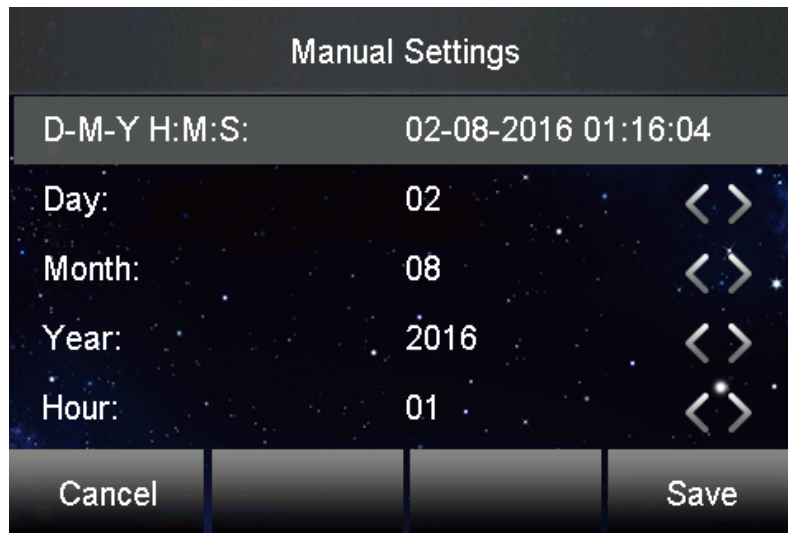


**To configure time and date manually via phone interface**

1. To press Menu → Setting → Basic setting → Time & Date → Manual Settings
2. Press  and  or change time, or you can input the right time.
3. Press  or Save soft key to save the configuration.




**To configure the Time & Date Format via phone interface**


1. To press Menu → Setting → Basic setting → Time & Date Format
2. Press  and  to change between 12 Hour or 24 Hour.
3. Press  and  to change among Y-M-D(year-month-day), M-D-Y(month-day-year), D-M-Y(day-month-year).
4. Press  or Save soft key to save the configuration.

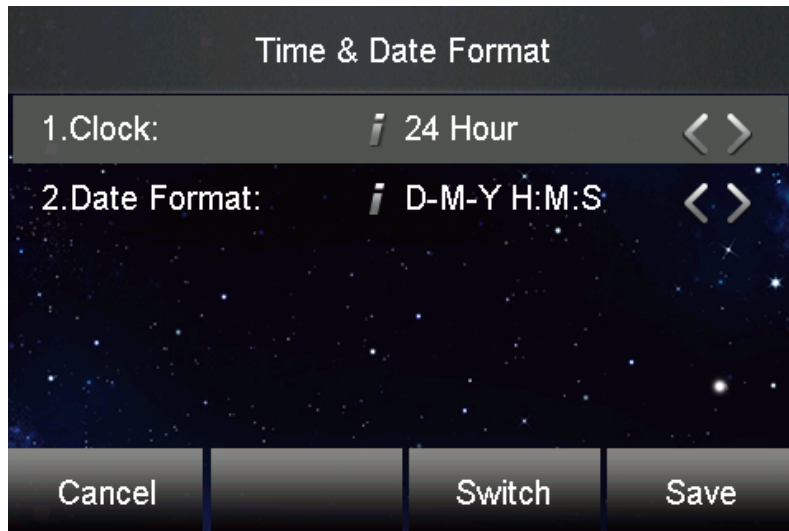




#### To configure the DHCP time via phone interface

1. To press Menu → Setting → Basic setting → DHCP time
2. Press  and  to change between Disable and Enable.
3. Press  or Save soft key to save the configuration.

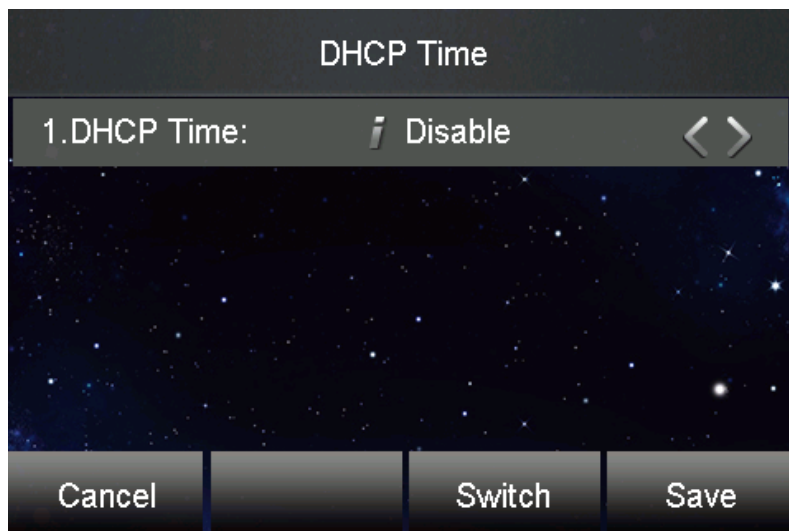

#### To configure the DHCP Option 100

1. To press Menu → Setting → Date&Times → DHCP Option 100
2. Select Yes for the DHCP SIP Server
3. Click  to save the configuration

[logout](#)

Htek [Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | **Setting** | [Directory](#) | [Management](#)

Preference

Features

BLF Settings

**Date&Time**

Tones

SMS

Action URL

Softkey Layout

TR069

SIP

DHCP Option 100	<input type="radio"/> No <input checked="" type="radio"/> Yes	?
	CET-1CEST,M3.5.0,M10.1.0/3	
DHCP Time	<input type="radio"/> No <input checked="" type="radio"/> Yes	?
Time Zone	+8 China(Beijing)	?
NTP Server is Covered with DHCP	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
NTP Server	time.windows.com	?
Backup NTP Server		?
SIP Date Override Time	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
Account	Account 1	?
Daylight Saving Time	<input checked="" type="radio"/> Disable <input type="radio"/> Enable <input type="radio"/> Auto	?
Time Format	<input checked="" type="radio"/> 24 Hour <input type="radio"/> 12 Hour	?

**NOTE**

**Time Zone:**  
Select the time zone of your location.

**NTP Server**  
The server which is used to synchronize the clock of the phone.

**To configure the NTP Server by web interface**

1. Login  
Login name: admin, password: admin(default)
2. Setting → Date & Time → NTP Server
3. Fill the value in the blank.

[logout](#)

Htek [Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | **Setting** | [Directory](#) | [Management](#)

Preference

Features

BLF Settings

**Date&Time**

Tones

SMS

Action URL

Softkey Layout

TR069

SIP

DHCP Time	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
Time Zone	-5 United States-Eastern Time	?
NTP Server is Covered with DHCP	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
NTP Server	time.windows.com	?
Backup NTP Server		?
SIP Date Override Time	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
Account	Account 1	?
Daylight Saving Time	<input checked="" type="radio"/> Disable <input type="radio"/> Enable <input type="radio"/> Auto	?
Time Format	<input checked="" type="radio"/> 24 Hour <input type="radio"/> 12 Hour	?
Date Display Format	<input type="radio"/> Year - Month - Day <input type="radio"/> Month - Day - Year <input checked="" type="radio"/> Day - Month - Year	?

 
**NOTE**


**Time Zone:**  
Select the time zone of your location.

**NTP Server**  
The server which is used to synchronize the clock of the phone.


Copyright © 2005-2016 All Rights Reserved

**To configure the Backup NTP Server by web interface**

1. Setting → Date &Time →Backup NTP Server
2. Fill the value in the blank.
3. Click  to save the configuration

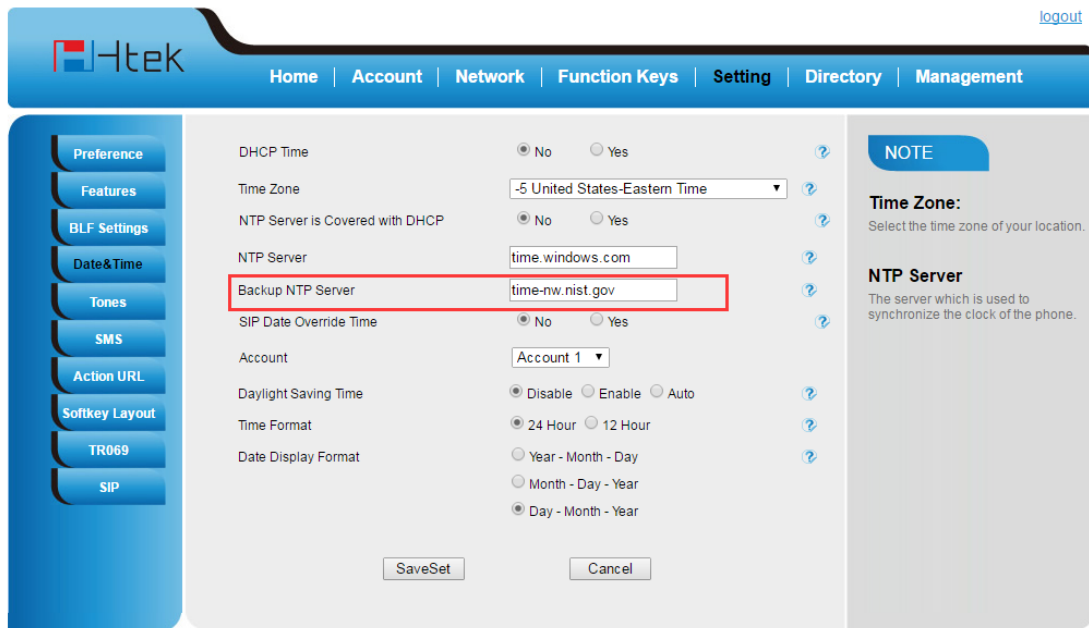


**To change the Time Zone and Date Display Format via web interface**

 
1. Setting → Date &Time
2. Select your time zone.
3. Press  to save the configuration.


Copyright © 2005-2016 All Rights Reserved

**To change the SIP Date Override Time via web interface**

 
1. Setting → Date & Time → Account
2. Select On or Off for SIP Date Override Time .
3. Click  to save the configuration.


**To change the Account via web interface**

1. Setting → Date & Time → Account.
2. Select desired Account.
3. Click  to save the configuration.

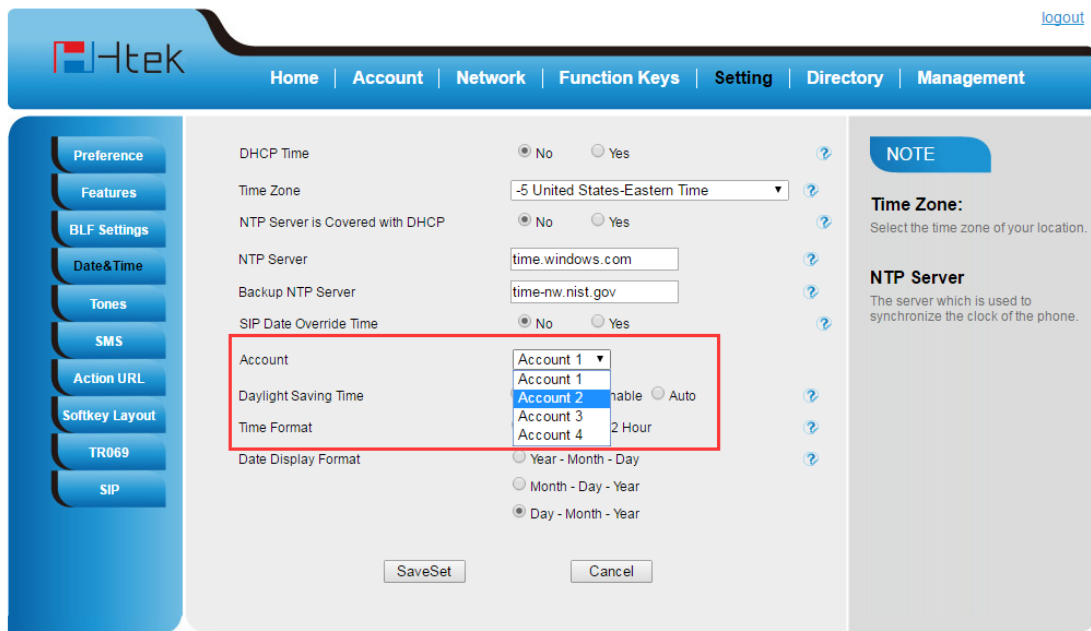

### To change the Daylight Saving Time via web interface

1. Setting → Date & Time → Daylight Saving Time
2. Select Disable or Enable or Auto for Daylight Saving Time.
3. Click  to save the configuration.

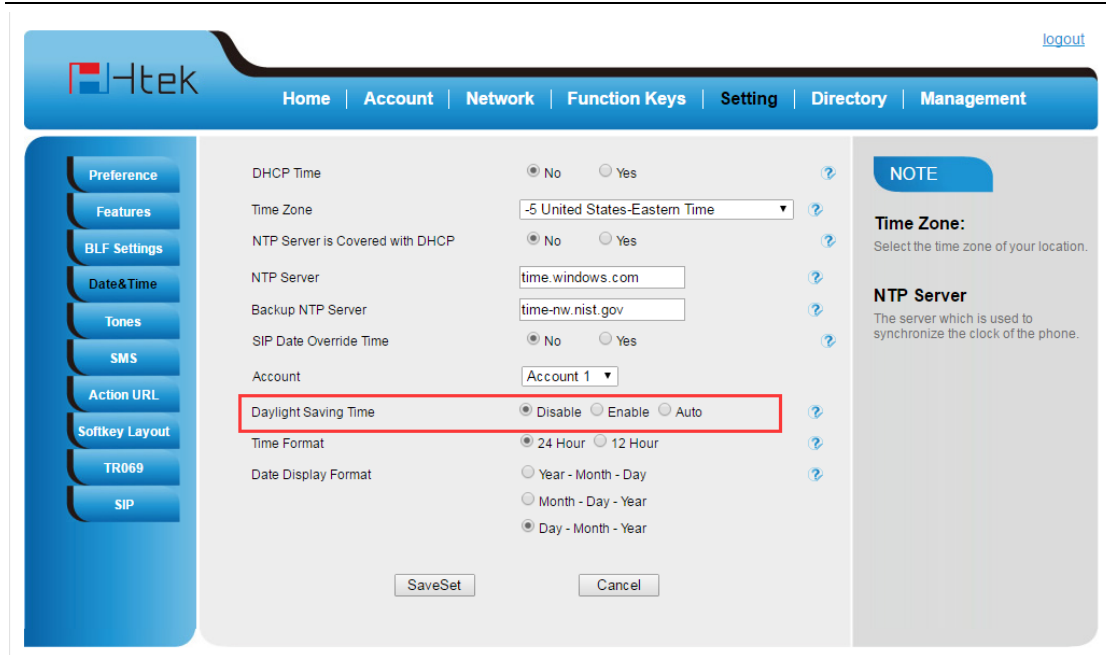

The screenshot shows the Htek web interface for basic setting configuration. The 'Date & Time' section is active, with the 'Daylight Saving Time' option highlighted by a red box. The configuration includes options for DHCP Time, Time Zone (set to -5 United States-Eastern Time), NTP Server (time.windows.com), Backup NTP Server (time-nw.nist.gov), SIP Date Override Time, Account (Account 1), Daylight Saving Time (Disable, Enable, Auto), Time Format (24 Hour, 12 Hour), and Date Display Format (Year - Month - Day, Month - Day - Year, Day - Month - Year). A 'NOTE' section on the right explains the Time Zone and NTP Server settings.

**Note:**

If the IP Phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP) server, please contact your system administrator for more information.


### Daylight Saving Time

Daylight Saving Time (DST) is the practice of temporary advancing clocks during the summertime so that evenings have more daylight and mornings have less. Typically, clocks are adjusted forward one hour at the start of spring and backward in autumn. Many countries have used the DST at various times, details vary by location. The DST can be adjusted automatically from the time zone configuration. Typically, there is no need to change this setting

## LED Status Setting

The LED Status setting mainly defines the power indicator LED.

**To configure LED Status via web interface:**




1. Click Setting → Preference
2. Select Yes or No for Power Status, Ringing Status, Miss Calls Status and Voice Message Status.
3. Click  for the setting.


For the LED status description, see: LED Instruction [Power Indicator LED](#)

LED Status Setting:		
Power Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Ringing Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
MissCalls Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No
Voice Message Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No



## Key as Send

To configure Key as Send via phone interface:

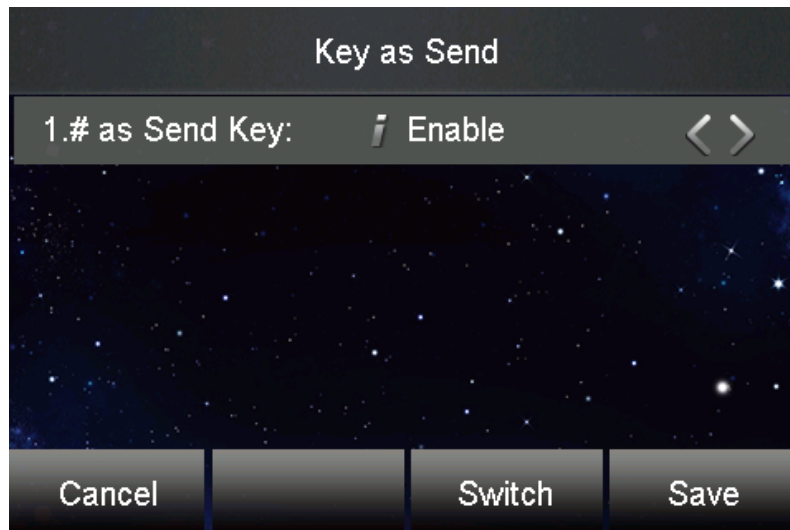1. Press Menu → Features → Key as Send
2. Press  and  key to select the enable choice.
3. Press  or Save soft key to save the configuration



To cancel # Key as Send via phone interface:

1. Press Menu → Features → Key as Send
2. Press  and  key to select the disable choice.


3. Press  or Save soft key to save the configuration

## Network Setting

Htek IP Phone supports IPv4、IPv6、IPv4&IPv6.They have three mode of Network: DHCP, Static, and PPPoE. The default mode is DHCP, it will obtain IP address and other information automatically.

If your phone cannot contact a DHCP server for any reason, you need to configure a static IP address manually.

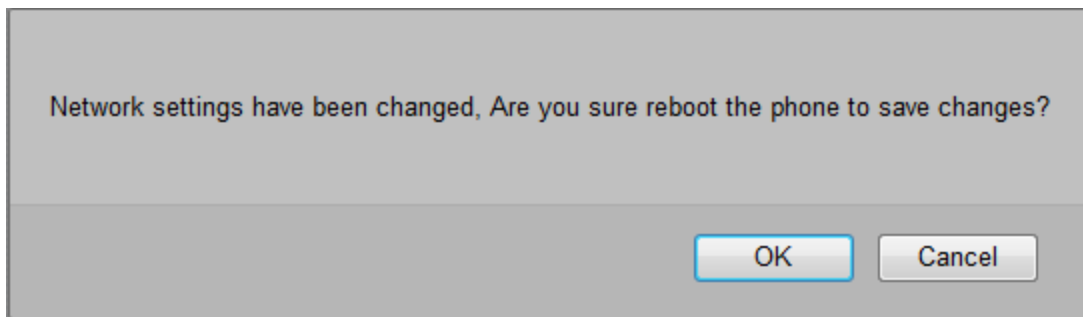


When switch DHCP, Static IP and PPPoE to each other, or change the Static IP on webpage, it will show the warning of restart as following.




## IPv4

If you set IP Mode to IPv4,IP phone will use IPv4 address. IPv4 has three network modes: DHCP, Static, and PPPoE


### To configure IPv4 via phone interface:


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.



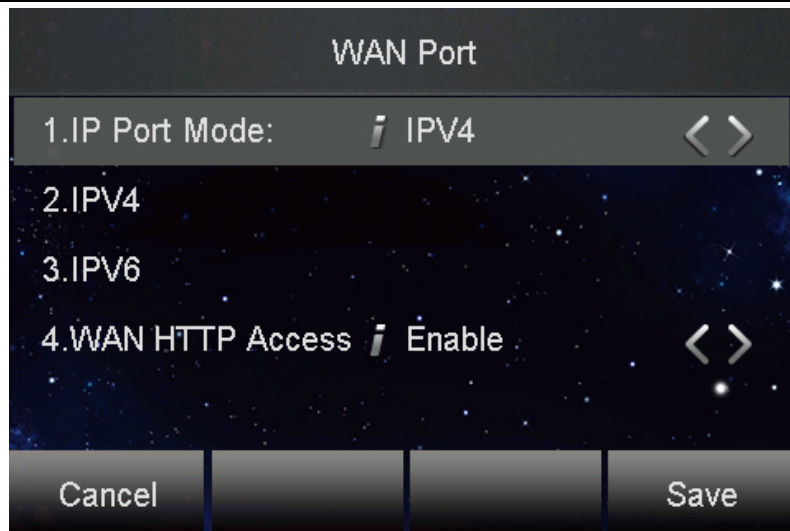

**To configure IPv4 via Web interface:**

 1. Click Network→Basic→ Internet Port
2. Select IPv4 for Internet Port
3. Click  for the setting.

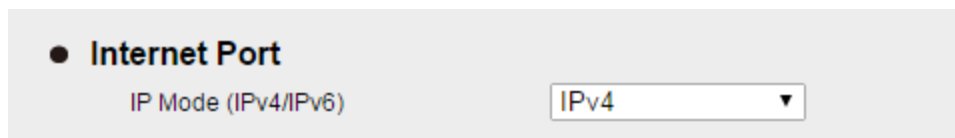


**To configure DHCP via phone interface:**

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port IPv4→DHCP mode.
2. Click Save and restart the phone.

**To configure a static IP address via phone interface:**


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IPv4 →Static mode.
2. Enter the parameters: IP, Netmask, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.

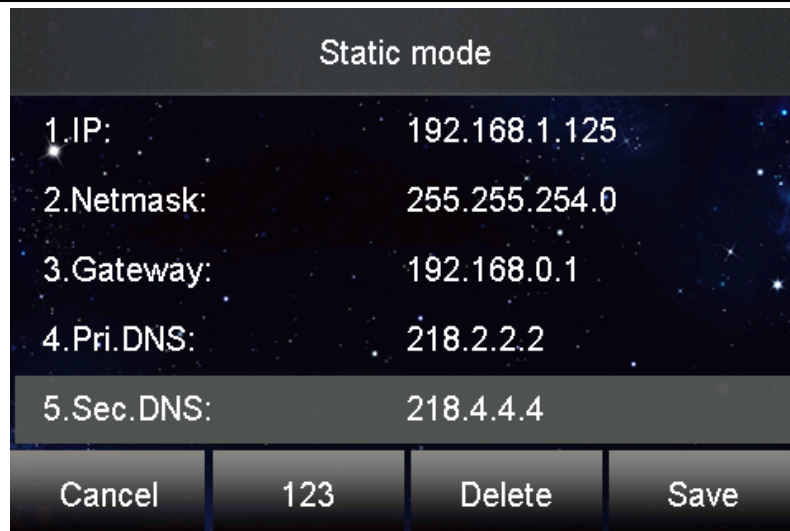

Static mode	
1. IP:	192.168.1.125
2. Netmask:	255.255.254.0
3. Gateway:	192.168.0.1
4. Pri. DNS:	218.2.2.2
5. Sec. DNS:	218.4.4.4

Buttons: Cancel, 123, Delete, Save

3. Click Save and restart the phone.

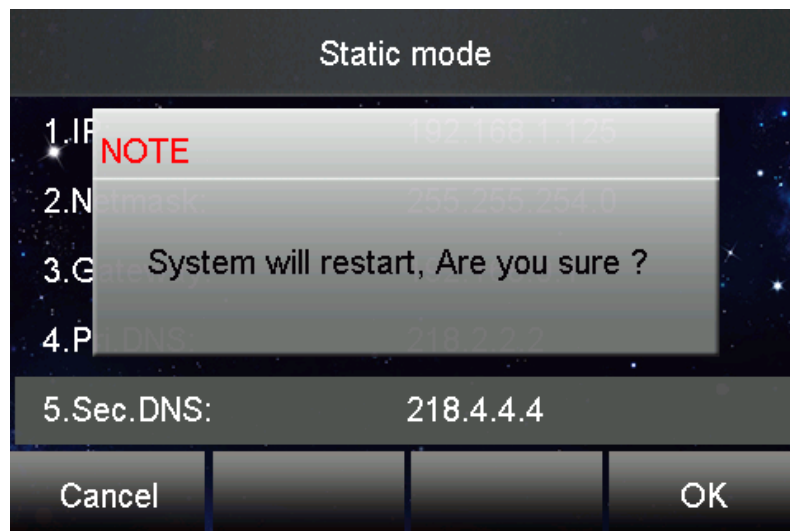

Static mode	
1. IP:	192.168.1.125
2. Netmask:	255.255.254.0
3. Gateway:	192.168.0.1
4. Pri. DNS:	218.2.2.2
5. Sec. DNS:	218.4.4.4


NOTE: System will restart, Are you sure?

Buttons: Cancel, OK

Press the Save soft key to accept the change or the Cancel soft key to cancel. If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. You can set a WAN port to be a PPPoE port. The PPPoE port will perform a PPP negotiation to obtain the IP address. Contact your system administrator for the PPPoE user name and password.

#### To configure PPPoE via phone interface:

1. Press Menu → Setting → Advanced Settings (password: admin) → Network → WANPort → PPPoE mode.
2. Enter the User ID and password
3. Click Save and restart the phone.

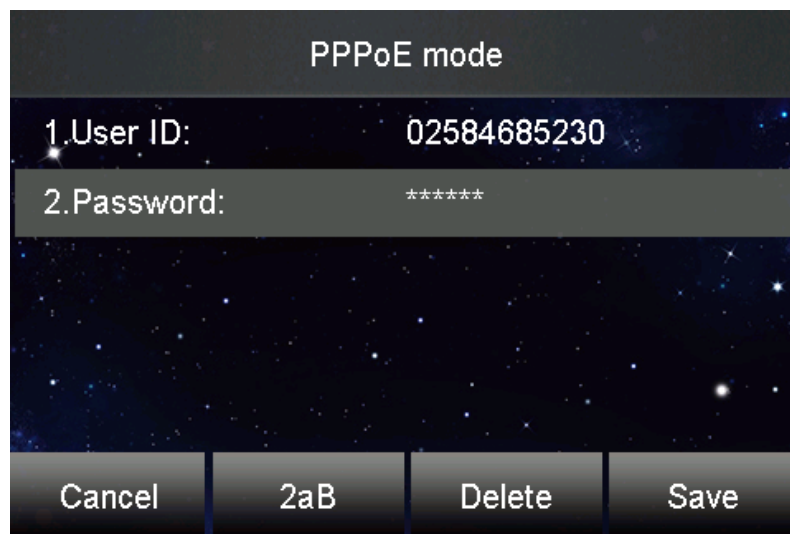

The screenshot shows a configuration screen titled "PPPoE mode" with a starry background. It contains two input fields: "1. User ID:" with the value "02584685230" and "2. Password:" with the value "\*\*\*\*\*". At the bottom, there are four buttons: "Cancel", "2aB", "Delete", and "Save".




**To configure Network via web interface:**

 
1. Click Network→Basic→IPv4 setting
2. Select the desired Type: DHCP, Static or PPPoE
3. Filled the necessary information.
4. Click the SaveSet and restart the phone.

## IPv6


If you set IP Mode to IPv6, IP phone will use IPv6 address. IPv4 has two network modes: DHCP, Static


### To configure IPv6 via phone interface:

1. Press Menu → Setting → Advanced Settings (password: admin) → Network → WANPort → IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.

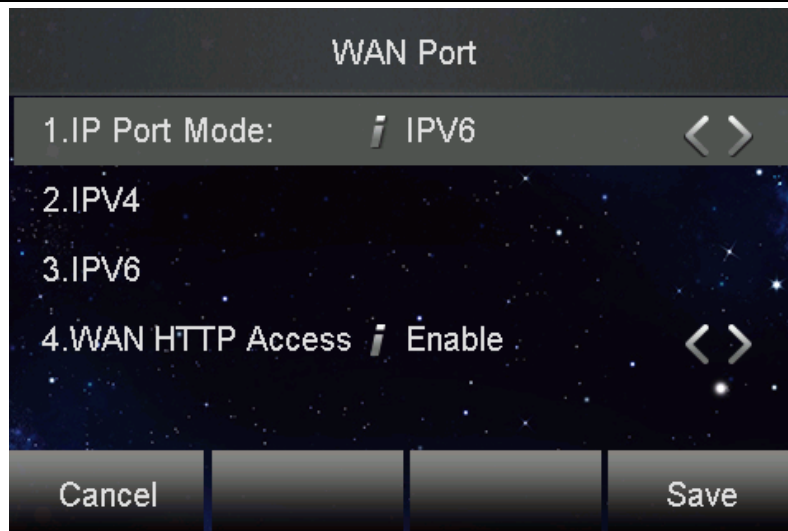

**To configure IPv6 via Web interface:**

1. Click Network→Basic→ Internet Port
2. Select IPv6 for Internet Port
3. Click  for the setting.

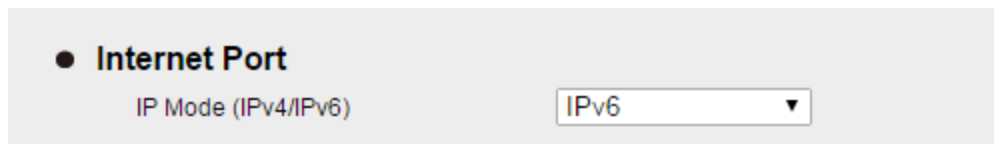


**To configure DHCP via phone interface:**

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port IPv6→DHCP mode.
2. Click Save and restart the phone.

**To configure a static IP address via phone interface:**

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IPv6 →Static mode.
2. Enter the parameters: IP, IPV6 Prefix, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.

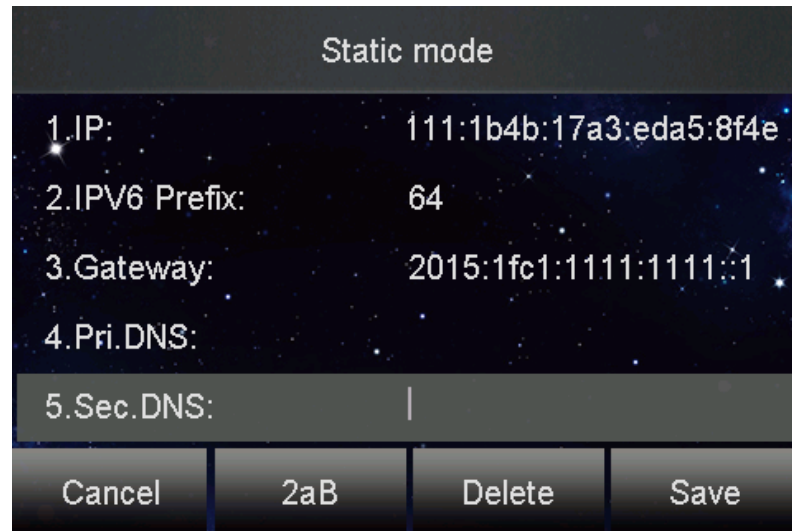

Static mode

1. IP: 111:1b4b:17a3:eda5:8f4e

2. IPV6 Prefix: 64


3. Gateway: 2015:1fc1:1111:1111::1

4. Pri. DNS:

5. Sec. DNS:

Cancel    2aB    Delete    Save

3. Click Save and restart the phone.

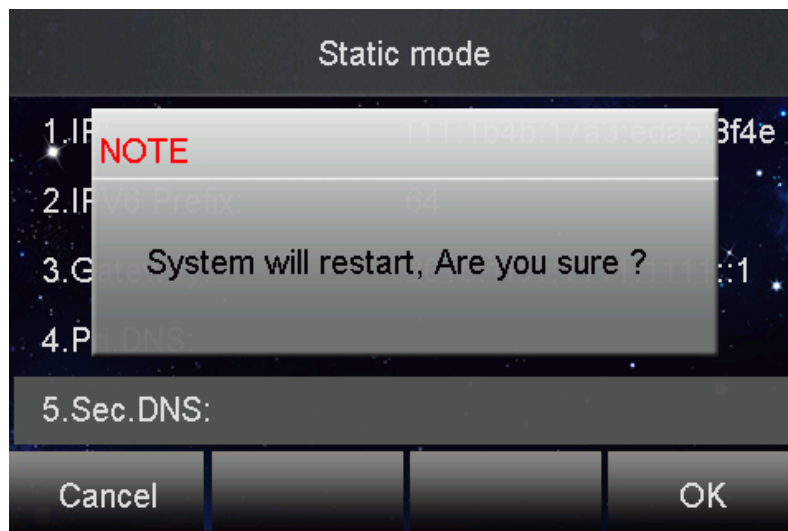

Static mode

NOTE

System will restart, Are you sure ?

Cancel    OK

**To configure Network via web interface:**

1. Click Network→Basic→IPv6 setting
2. Select the desired Type: DHCP, Static
3. Fill required fields.
4. Click the SaveSet and restart the phone.

**● IPv6 Setting**

DHCP ?

Static IP Address ?

IP Address

IPv6 Prefix (0~128)

Default Gateway

IPv6 Static DNS  No  Yes

Primary DNS


Secondary DNS

## IPv4&IPv6


If you set IP Mode to IPv4&IPv6, IP phone will support both IPv4 and IPv6 address. The settings of DHCP, Static, and PPPoE are same as above.


**To configure IPv4&IPv6 via phone interface:**

1. Press Menu → Setting → Advanced Settings (password: admin) → Network → WANPort → IP Port Mode.
2. Press or to change the IP Port Mode..
3. Press or Save soft key to save the configuration.

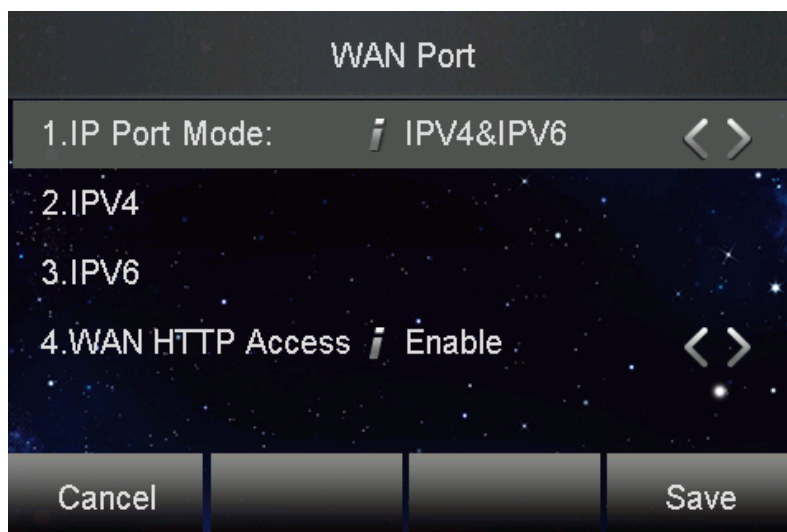

**To configure IPv4&IPv6 via Web interface:**

1. Click Network→Basic→ Internet Port
2. Select IPv4&IPv6 for Internet Port
3. Click  for the setting.

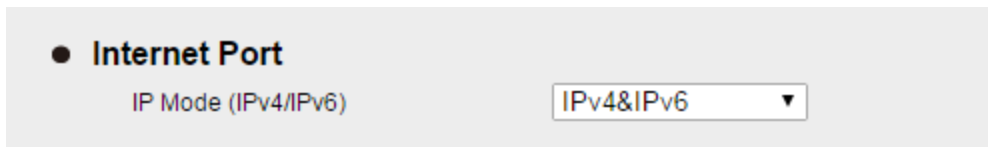**Note:**

Wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance. For more information about these parameters, contact your system administrator.

## PC Port

Three modes for PC port: bridge, connect to Expansion Module and router.

**To configure PC Bridge via Phone interface:**

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port →Bridge mode.
2. Click Save
3. Click the OK button, then the phone will reboot.

**To configure PC router via Phone interface:**

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port →Router mode.
2. Enter the IP, Netmask and DHCP server
3. Click Save
4. Click the OK button, then the phone will reboot


**To configure PC Connect to Expansion Module via Phone interface:**



1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port  
→ Connect to Expansion Module.
2. Click Save
3. Click the OK button, then the phone will reboot

**To configure Bridge via web interface:**

1. Click Network→Basic
2. Select  As Bridge
3. Click  and the phone will reboot automatically

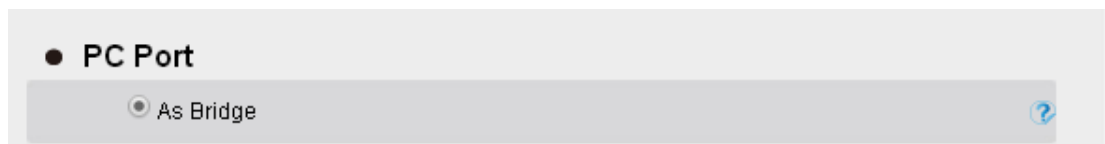**To configure Router via web interface:**

1. Click Network→Basic
2. Select As Router
3. Fill the IP address and other necessary information.
4. Click  and the phone will reboot automatically

● **PC Port**

As Bridge ?

Connect to Expansion Module ?

As Router ?

IP Address

Subnet Mask

IP Lease Time

DHCP Server

DMZ IP

**To configure PC Connect to Expansion Module via web interface:**

1. Click Network→Basic
2. Select As Connect to Expansion Module
3. Click  and the phone will reboot automatically

● **PC Port**

As Bridge ?

Connect to Expansion Module ?

As Router ?

IP Address

Subnet Mask

IP Lease Time

DHCP Server

DMZ IP

## Contact Setting

This section provides the operating instructions for managing contacts. The topics include:

- Local Directory
- Remote Phonebook


- LDAP
- Search Contact


## Local Directory

In the directory, you can add or delete your friends, business partner or anyone others' phone No. so you will not forget their number. Or put some anonymous phone No. in the blacklist to prevent from being disturbed. The local Directory can add up to 1000 contacts.





### A. To add contacts list into local directory

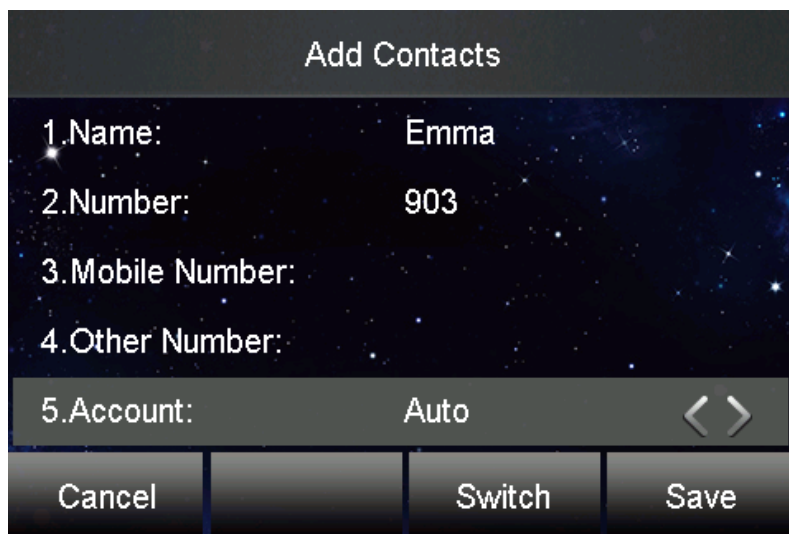
#### To add contacts manually via phone interface


1. Press Menu → Directory → Local Directory
2. Press Add soft key.
3. Enter the necessary information as Name, Phone number...
4. Press save soft key or  to add the contacts successfully.



#### To add contacts from history via phone interface:

1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one. (Press  and  switched among the All calls, Dialed calls, Received calls, Missed Calls and Forward Calls).

3. Press Option soft key → Add to Contacts
4. Edit the necessary information as Name, Phone number...
5. Press save soft key or  to add the contacts successfully.

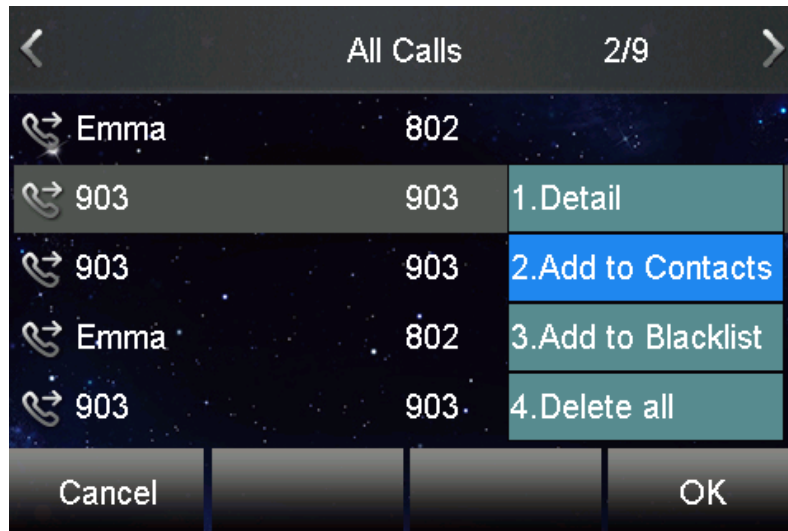

**To add contacts via web interface:**

1. Click Directory→Directory
2. Enter the name, number and some other information.
3. Press  and then press  button.

[logout](#)

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Directory

Remote Phone Book

Call History

LDAP

BroadSoft

Calllog

MultiCast Paging

Contact
BlackList
Hangup

Index	Display Name	Office Number	Mobile Number	Other Number	Account	
1	Nancy	827			Auto	<input type="checkbox"/>

Save
Delete
Move to Contact/blacklist

**Contact**

Name:

Office Number:

Mobile Number:

Other Number:

Account:

Ring:

Group:

Photo:

Delete Photo

Browse...

Upload Photo

**Import Local Contacts**

Browse...

Add
Edit
Search

NOTE

**Add Contact/Blacklist**  
Fill out the contact information. User shouldn't leave contact name blank.

**Delete Contact/Blacklist**  
Select the contact you want to delete in the grid, and then press the button Delete to confirm.

**Move to Contact/blacklist**  
Choose the contacts you want to move in the grid, and press the button move to Contact/Blacklist to move it.

**Upload Photo**  
The format of the photo supported is jpg or bmp, and the size should be less than 128 \*128

**Import**  
Browse the file in XML format.

**Export**  
Click Export button and create a file with whose name you prefer to export.


## B: To add contacts into blacklist


### To add blacklist manually via phone interface:

1. Press Menu → Directory → Blacklist
2. Press Add soft key.
3. Enter the necessary information as Name, Phone number...
4. Press save soft key or to add the contacts successfully.


### To add blacklist from history via phone interface:

1. Press History soft key or press Menu → History → Local history
2. Press and to select the targeted one.
3. Press Option soft key → Add to Blacklist

4. Edit the necessary information as Name, Phone number...
5. Press save soft key or  to add successfully.

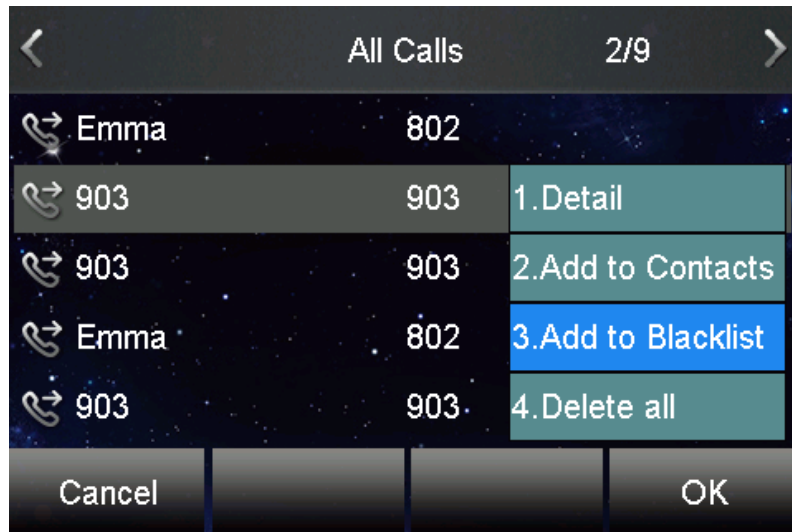

#### Upload Contacts photo via web interface:

1. Click Directory and select the desired contact.
2. Click Choose file to select the photo for the contact
3. Click  to upload the photo.

[logout](#)

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

**Directory**

Remote Phone Book

Call History

LDAP

BroadSoft

Calllog

MultiCast Paging

Contact
BlackList
Hangup

Index	Display Name	Office Number	Mobile Number	Other Number	Account	All
1	Nancy	827			Auto	<input checked="" type="checkbox"/>

Save
Delete
Move to Contact/blacklist

**Contact**

Name:

Office Number:

Mobile Number:

Other Number:

Account:

Ring:

Group:

Delete Photo

Browse...

Upload Photo

**NOTE**

**Add Contact/Blacklist**  
Fill out the contact information. User shouldn't leave contact name blank.

**Delete Contact/Blacklist**  
Select the contact you want to delete in the grid, and then press the button Delete to confirm.


**Move to Contact/blacklist**  
Choose the contacts you want to move in the grid, and press the button move to Contact/Blacklist to move it.

**Upload Photo**  
The format of the photo supported is jpg or bmp, and the size should be less than 128 \*128

**Import**  
Browse the file in XML format.

**Export**  
Click Export button and create a file with whose name you prefer to export.

When you place a call from the contact, the phone idle screen will show the contact photo.

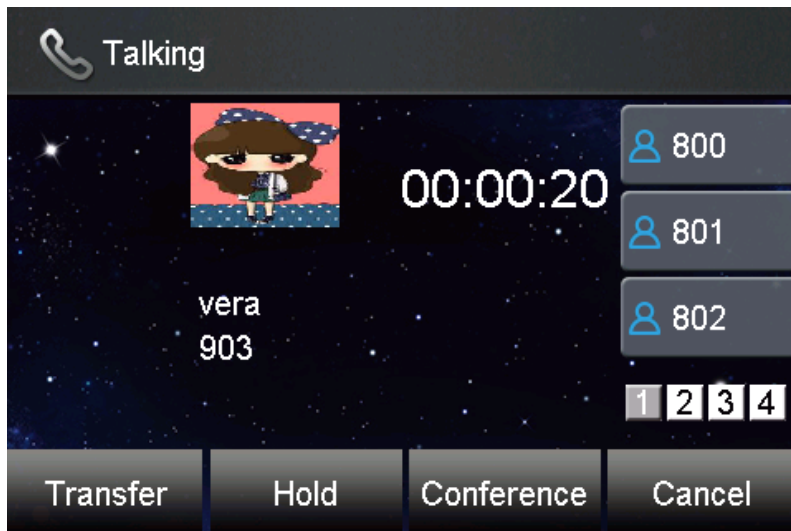

**Note:**  
The format of the photo supported is jpg or bmp  
Photo size should be less than 2M bytes, name length should be less than 48.

**To import or export the contact list**

You can manage your phone's local directory via phone or web user interface. But you can

only import or export the contact list via web interface.

**To import an XML file of contact list via web interface:**

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .xml) from your local system.
3. Click Import XML to import the contact list.

**To export an XML file of contact list via web interface:**


1. Click on Directory
2. Click Export XML to import the contact list.

**To import a CSV file of contact list via web interface:**

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .csv) from your local system.
3. Click Import Csv to import the contact list.

**To export a CSV file of contact list via web interface:**

1. Click on Directory
2. Click Export Csv to import the contact list.

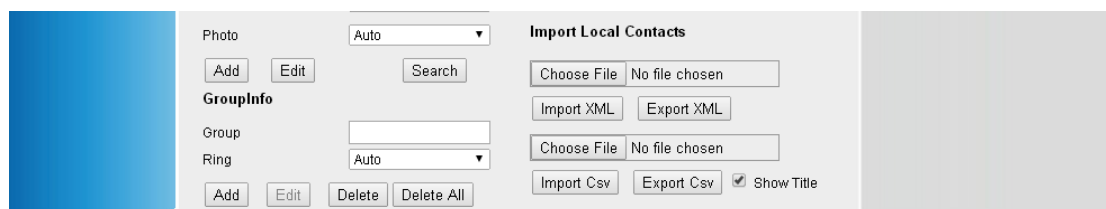

The screenshot shows a web interface with a blue sidebar on the left. The main content area is divided into two sections. The left section has a 'Photo' dropdown menu set to 'Auto', with 'Add', 'Edit', and 'Search' buttons below it. Under 'GroupInfo', there is a 'Group' text input, a 'Ring' dropdown menu set to 'Auto', and 'Add', 'Edit', 'Delete', and 'Delete All' buttons. The right section is titled 'Import Local Contacts' and contains two identical blocks. Each block has a 'Choose File' button and a 'No file chosen' status. Below each 'Choose File' button are 'Import XML' and 'Export XML' buttons. The second block also includes 'Import Csv' and 'Export Csv' buttons, along with a checked 'Show Title' checkbox.

**Note:**


**If the xml file and CSV file more than 1000 contacts, the phone will only upload 1000 contacts.**



## Remote Phonebook

To set Remote Phonebook via web interface:

1. Login the webpage and click Directory→Remote Phone Book
2. Fill the path of the remote file in the Phone Book URL field.  
For example,  
<http://192.168.0.240/Phonebook/Phonebook.xml>
3. Fill the Name and then click  to save the configuration.

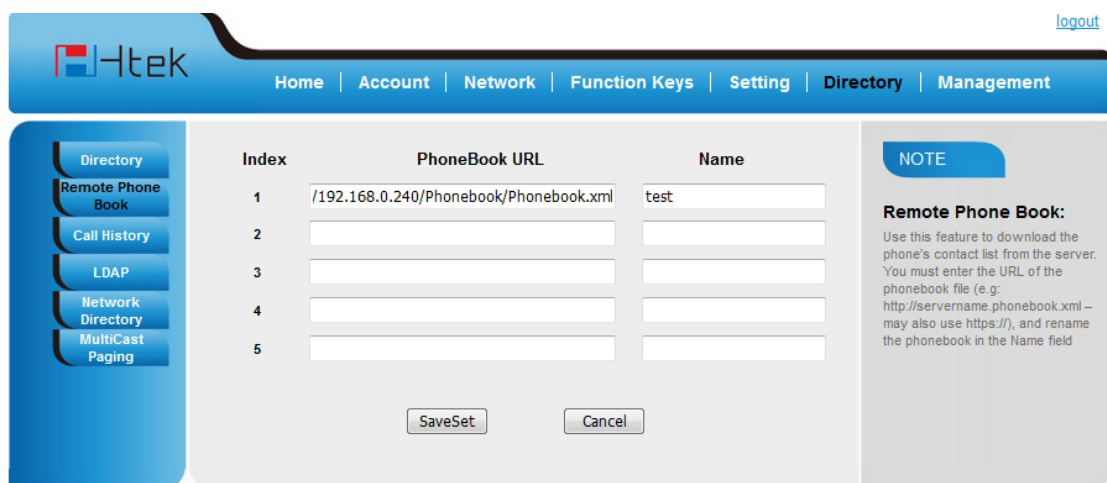

Index	PhoneBook URL	Name
1	/192.168.0.240/Phonebook/Phonebook.xml	test
2	<input type="text"/>	<input type="text"/>
3	<input type="text"/>	<input type="text"/>
4	<input type="text"/>	<input type="text"/>
5	<input type="text"/>	<input type="text"/>

**NOTE**  
**Remote Phone Book:**  
 Use this feature to download the phone's contact list from the server. You must enter the URL of the phonebook file (e.g: <http://servername.phonebook.xml> - may also use <https://>), and rename the phonebook in the Name field

To check the contacts via phone interface:

Press Directory→Left Button→Left Button, and then you can see the item you set, press enter you will find the detail.

For More detail, please refer to: [Remote Phonebook](http://www.htek.com) on [www.htek.com](http://www.htek.com) .

**Note:**  
Every remote contact only supports 1000 contacts.

## LDAP Phonebook

When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure LDAP via web interface:

1. Login webpage and click Directory→LDAP

2. Filled the LDAP Name Filter:
  - a) This parameter specifies the name attributes for LDAP searching. The “%” symbol in the filter stands for the entering string used as the prefix of the filter condition.
  - b) For example (cn=%), when the name prefix of the cn of the contact record matches the search criteria, the record will be displayed on the IP PHONE LCD.
3. Filled LDAP Number Filter:

This parameter specifies the number attributes for LDAP searching.
4. Filled Server Address: Fill the domain name or IP address of the LDAP Server.

For example: 192.168.0.9
5. Port(the port of the LDAP Serve) Base, User Name, Password
6. Max.Hits(1-32000): the maximum number of the search results to be returned by the LDAP server.
7. LDAP Display Name: the display name of the contact record displayed on the LCD screen.
8. Filled the relative value and then click save button the save the settings.

Following is the example screenshot for the configuration.

Directory | Remote Phone Book | Call History | LDAP | Network Directory | MultiCast Paging

LDAP Name Filter: (cn=%)

LDAP Number Filter: ((telephoneNumber=)

Server Address: 192.168.0.9

Port: 389

Base: dc=pbx,dc=com

User Name: cn=admin,dc=pbx,dc=

Password: .....

Max.Hits(1~32000): 32000

LDAP Display Name: cn

Search Delay(0~2000ms):

Protocol:  Version2  Version3

LDAP Lookup For Incoming Call:  On  Off

LDAP Sorting Results:  On  Off

LDAP Synchronize Time(0~9999mins):

Buttons: SaveSet, Cancel

NOTE

**To configure LDAP Key via web interface:**

1. Click Function Key→Line Key→ choose Line Key 1(for example)
2. Select LDAP in the Type field.
3. Click Saveset to save the configuration.

Line Label Length: Default | Line Page Indicator: Disable


Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	LDAP	Default			Account 1	

NOTE

**To Configure LDAP Key via phone interface:**

1. Press Menu→Feature→Function Keys→Line Keys as Function Keys→Line Key 1
2. Select LDAP in the Type field
3. Press save or OK key to save the configuration.

When press the LDAP Key the LCD will display as following:

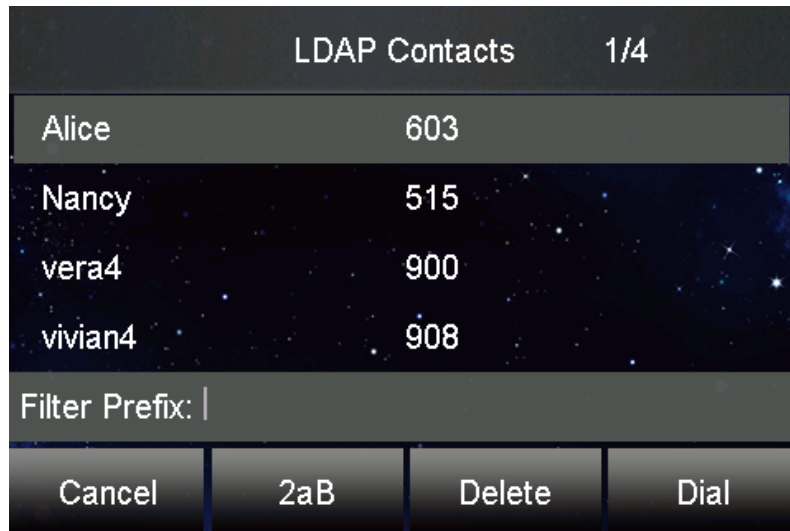


For More detail, please refer to [LDAP Notes](#) on [www.htek.com](http://www.htek.com)

## Search Contact

You can search contact in all contacts, local contacts, remote contacts and LDAP contact.


**To search contact in all contacts:**

1. Click the Directory softkey on Idle interface.
2. Click the More softkey, then you can see the Search softkey
3. Click the Search softkey, you can enter the desired part of name or part of number.
4. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

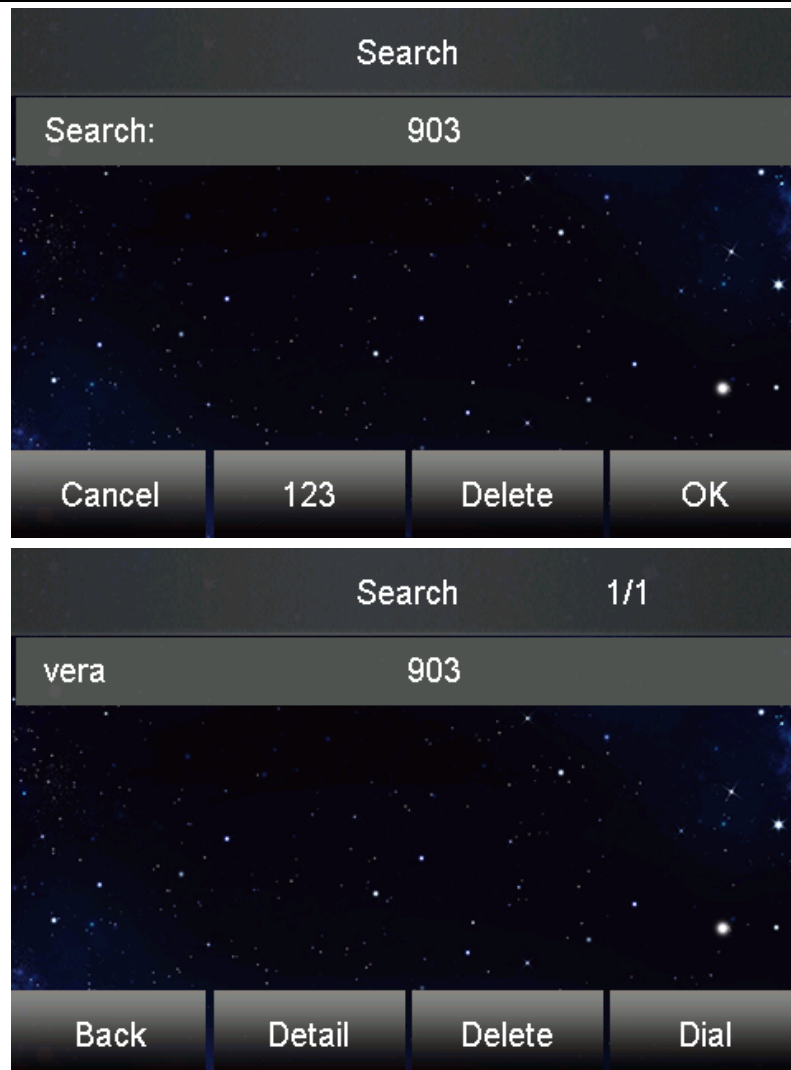
**Note:**

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds


**To search contact in Local contacts:**

1. Click the Directory softkey on Idle interface.
2. Click the  button and select the Local contacts list.
3. Click the More Softkey, then you can see the Search softkey
4. Click the Search softkey, you can enter the desired part of name or part of number.
5. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

**Note:**

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

**To search contact in Remote contacts:**

1. Click the Directory softkey on Idle interface.
2. Click the  button and select the remote contacts list.
3. Select the desired the remote contact and click Enter softkey.
4. Click the Search softkey, you can enter the desired part of name or part of number.
5. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

**Note:**

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

**To search contact in LDAP contacts:**

1. Click the LDAP function key.
2. Enter the first character or more of contact's name.
3. Select the desired the remote contact and click Enter softkey.
4. Then IP Phone will display the relevant contacts automatically within Search Delay.



## Call History Setting


### Call History

This phone maintains call history lists of Dialed Calls, Received Calls, Missed Calls and Forwarded Calls. The call history list supports up to 100 entries in all on phone interface and more than 1500 items. You can check the call history, dial a call, add a contact or delete an entry from the call history list. You should enable the history record feature in advance.

**To enable the history record feature via phone interface:**


1. Press Menu→Feature→History Setting

2. Press  and  or Switch soft key to enable History record.
3. Press Save soft key to save the configuration.

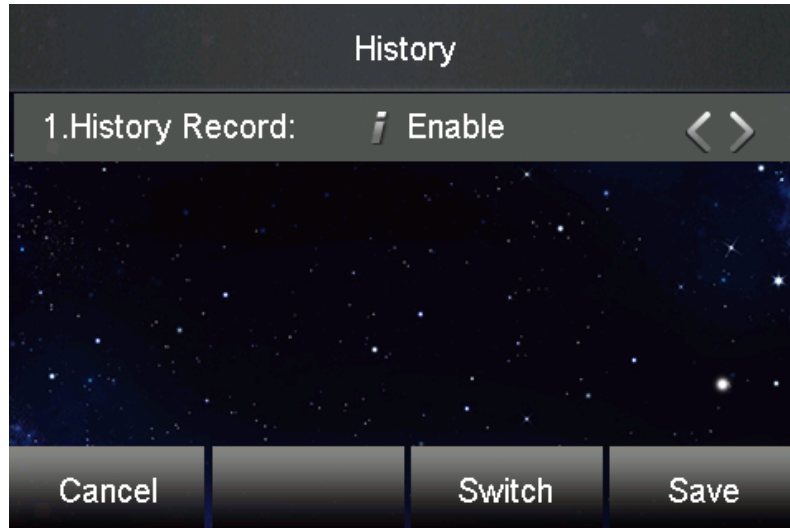

**To check the call history via phone interface :**

1. Press the History soft key. The LCD screen displays All Calls list.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press to select the desired entry.
4. Press the Option soft key, and then select Detail from the prompt list.
5. The detailed information of the entry appears on the LCD screen.

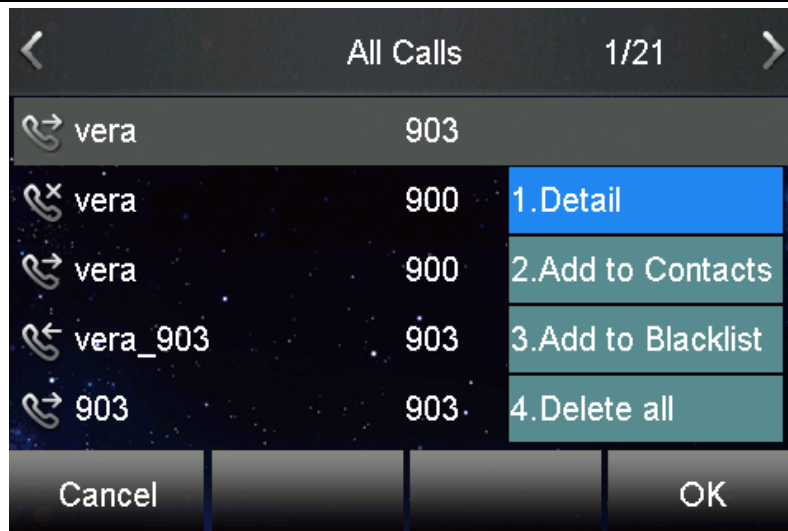

**To delete an entry from the call history list via phone interface:**

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press UP or DOWN key to select the desired entry.
4. Press the Delete soft key.

**To delete all entries from the call history list via phone interface:**

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press the Option soft key, and then select Delete All from the prompt list.
4. Press the OK soft key.
5. Press the OK soft key to confirm the deleting or the Cancel soft key to cancel.

**To check the call history via web interface:**

1. Click Directory → Call History
2. Click Dialed List, Missed List, Received List, Forwarded List then you can see the history list.



Index	Date	Time	Local Identity	Name	Tel Number
1	00-00-0000	00:26:31		*50801	<a href="#">*50801</a>
2	00-00-0000	00:26:24		*50800	<a href="#">*50800</a>
3	00-00-0000	00:24:49		800	<a href="#">800</a>
4	00-00-0000	00:23:12		800	<a href="#">800</a>
5	00-00-0000	00:22:20		800	<a href="#">800</a>
6	00-00-0000	00:21:23		800	<a href="#">800</a>
7	00-00-0000	00:21:07		800	<a href="#">800</a>
8	00-00-0000	00:20:48		801	<a href="#">801</a>
9	00-00-0000	00:03:21		801	<a href="#">801</a>
10	02-06-2016	02:21:40 am		513	<a href="#">513</a>
11	30-05-2016	11:02:52 pm		2000	<a href="#">224.5.6.20:2000</a>
12	30-05-2016	11:02:44 pm		2000	<a href="#">224.5.6.20:2000</a>
13	26-05-2016	01:19:41		56	<a href="#">56</a>

**To Dial a call from Call History via web interface:**

1. Click Directory→Call History
2. Select the desired history item, and click Tel Number.
3. Then the call is dialed on phone.

Index	Date	Time	Local Identity	Name	Tel Number
1	00-00-0000	00:28:31		*50801	<u>*50801</u>
2	00-00-0000	00:28:24		*50800	<u>*50800</u>
3	00-00-0000	00:24:49		800	<u>800</u>
4	00-00-0000	00:23:12		800	<u>800</u>
5	00-00-0000	00:22:20		800	<u>800</u>
6	00-00-0000	00:21:23		800	<u>800</u>
7	00-00-0000	00:21:07		800	<u>800</u>
8	00-00-0000	00:20:48		801	<u>801</u>
9	00-00-0000	00:03:21		801	<u>801</u>
10	02-06-2016	02:21:40 am		513	<u>513</u>
11	30-05-2016	11:02:52 pm		2000	<u>224.5.6.20:2000</u>
12	30-05-2016	11:02:44 pm		2000	<u>224.5.6.20:2000</u>
13	26-05-2016	01:19:41		56	<u>56</u>


### To Dial a call from Call History via phone interface:

1. Press History soft key or press Menu → History → Local history
2. Press and to select the targeted one.
3. Press the Send soft key, , or , or the corresponding line key.





## Audio Settings
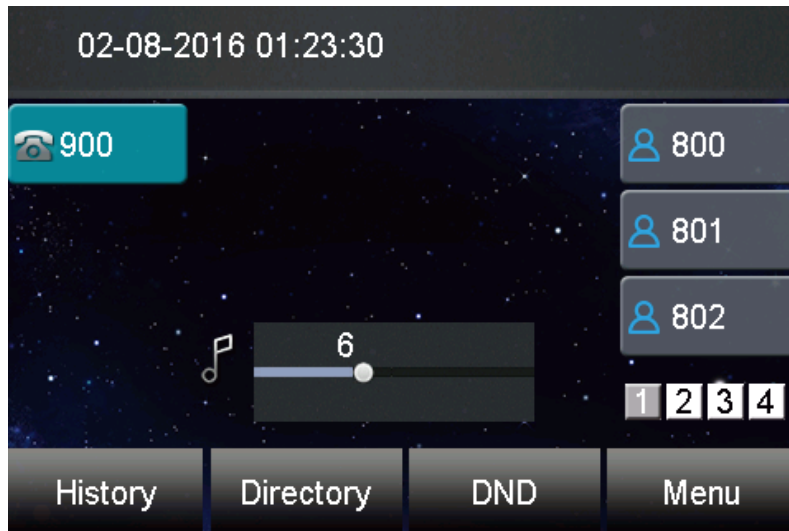
### Volume

You can adjust the volume for the phone by the volume keys: and .




**To adjust the Ring tone volume via phone interface:**

1. Option 1: To press  and  on the idle page
2. Option 2: To press  and  during the call is ringing


**To adjust the handset volume via phone interface:**

To press  and  during a call in handset mode.

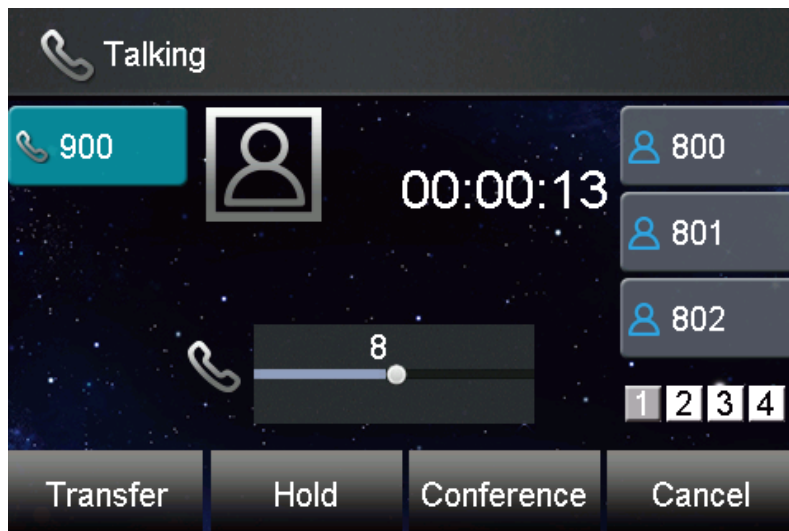


**To adjust the headset volume via phone interface:**

To press  and  during a call in headset mode.

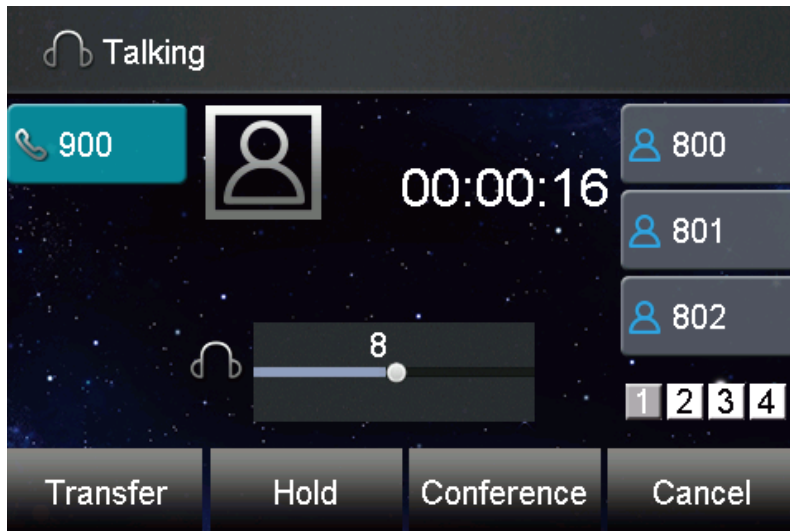

**To adjust the speaker Volume via phone interface:**

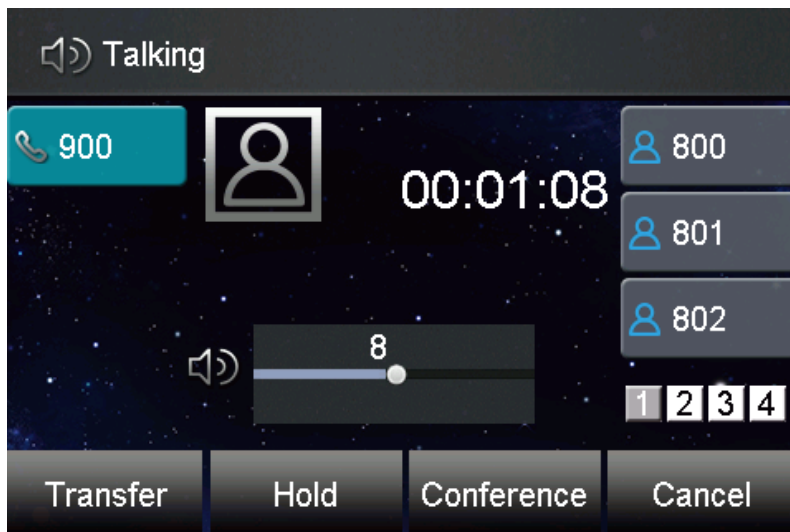


To press  and  during a call in speaker mode.



## Ring Tone


You can adjust the type and volume of the ring tone.


**To adjust the Ring Tone Type via Phone interface :**

1. Press Menu → Setting → Basic Settings → Ring Tone.
2. Press  and  to select the aimed one.
3. Press  or Save soft key to save the configuration.






**To adjust the Ring Tone Type via Web Interface**

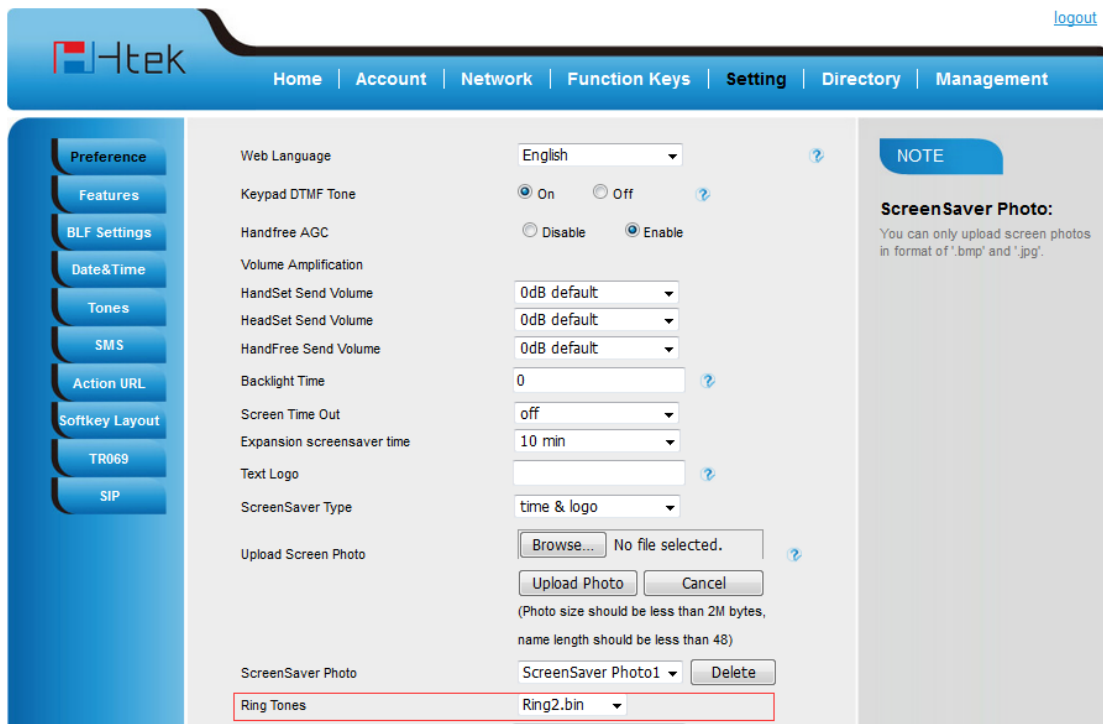
 
1. Setting → Preference → Ring Tone
2. Select the wanted one
3. Click  to save the configuration.



**To configure Distinctive Ring Tone via Phone Interface**

1. Press Directory
2. Select the target contact
3. Press Detail soft key to edit the contact.
4. Press  and  to select the wanted Ring Tone for the contact
5. Press Save soft key to save the contact.

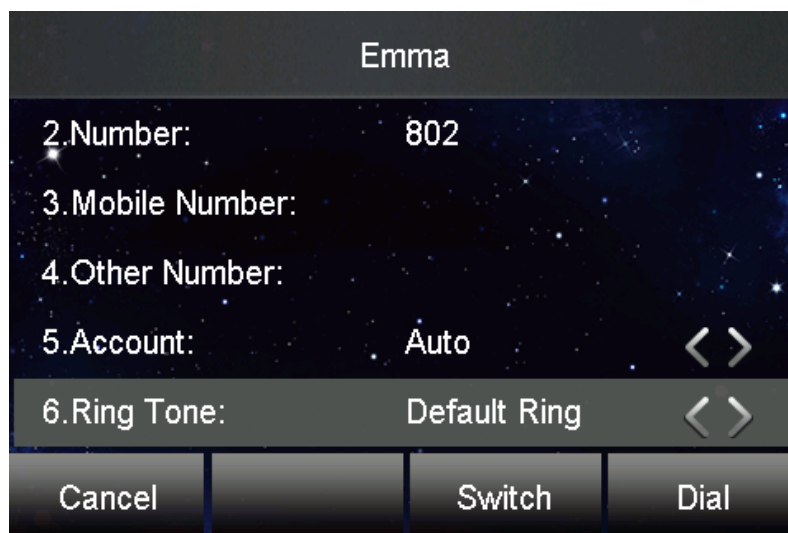**To configure Distinctive Ring Tone via Web Interface**

1. Directory → Directory → Contact
2. Choose the Ring Tone you want to use.
3. Click  →  to save the configuration.

[logout](#)

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Directory

Remote Phone Book

Call History

LDAP

BroadSoft

Calllog

MultiCast Paging

Contact
BlackList
Hanqun

Index	Display Name	Office Number	Mobile Number	Other Number	Account	A11
1	Nancy	827			Auto	<input checked="" type="checkbox"/>

**Contact**

Name:

Office Number:

Mobile Number:

Other Number:

Account:

Ring:

Group:

Photo:

Delete Photo

浏览... 未选择文件.

Upload Photo

Import Local Contacts

**NOTE**

**Add Contact/Blacklist**  
Fill out the contact information. User shouldn't leave contact name blank.

**Delete Contact/Blacklist**  
Select the contact you want to delete in the grid, and then press the button Delete to confirm.

**Move to Contact/blacklist**  
Choose the contacts you want to move in the grid, and press the button move to Contact/Blacklist to move it.

**Upload Photo**  
The format of the photo supported is jpg or bmp, and the size should be less than 128 \*128

**Import**  
Browse the file in XML format.

 
**Export**  
Click Export button and create a file with whose name you prefer to export.

Click [Ring tone](#) for more information.

## Voice Mail Tone

This option can set whether to play the beep for phone's voice mail

1. Click the Setting → Preference
2. Select On or Off for Voice Mail Tone.
3. Click  for the setting.



## Play Hold Tone

When you hold the phone, Whether to play hold tone

1. Click the Setting → Preference
2. Set On or Off for Play Hold Tone.

3. Click  for the setting.

Play Hold Tone  On  Off

## Play Hold Tone Delay

When you hold the phone. How many seconds to play beep?

1. Click the Setting → Preference
2. Set Enable or Disable for Play Hold Tone Delay.

3. Click  for the setting.

Play Hold Tone Delay

## System Settings

### Dial Plan

Dial plan is a string of characters that governs the way this phone processes the inputs received from your phone keypad. This phone supports dial plan with following accept digits:


1,2,3,4,5,6,7,8,9,0,\*,#

Grammer	Description
x	any digit from 0-9;
xx+	at least 2 digit number;
^	exclude;
,	hear dial tone;
[3-5]	any digit of 3, 4, or 5;
[147]	any digit 1, 4, or 7;
<2=011>	replace digit 2 with 011 when dialing.



### To configure dial plan via web interface:

1. Click Account → Advanced → Dial Plan.
2. Filled the value in dial plan field.
3. Click **SaveSet** to save the configuration.

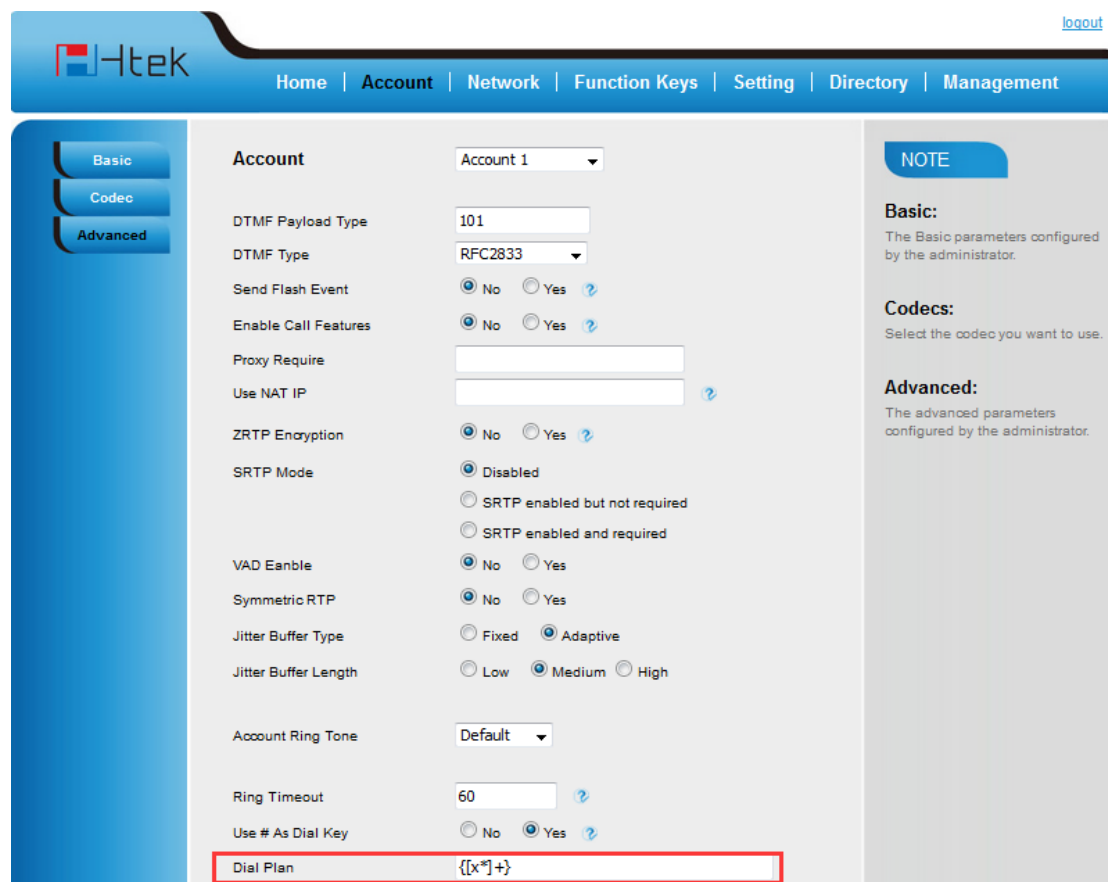

The screenshot shows the Htek web interface for configuring an account. The 'Account' section is selected, and the 'Advanced' tab is active. The 'Dial Plan' field is highlighted with a red box and contains the value '{[\*]\*+}'. Other fields include DTMF Payload Type (101), DTMF Type (RFC2833), Send Flash Event (No), Enable Call Features (No), Proxy Require, Use NAT IP, ZRTP Encryption (No), SRTP Mode (Disabled), VAD Enable (No), Symmetric RTP (No), Jitter Buffer Type (Adaptive), Jitter Buffer Length (Medium), Account Ring Tone (Default), Ring Timeout (60), and Use # As Dial Key (Yes).


#### Note:

 Illegal input will fall back to default: `{[*]*+}`. For More, please refer to [dial plan](http://www.htek.com) on [www.htek.com](http://www.htek.com)

## Dial-Now Timeout

Dial-Now Timeout means that when you enter the number which matching with dial plan, it will dial out automatically after some time when you stop enter the number.


### To configure Dial-Now Timeout via web interface:


1. Click Webpage Setting → Preference
2. Fill the blank of Dial-Now Timeout: for example 5(seconds).(0 means dial out immediately).
3. Click the  button to save the configuration

## No Key Entry Timeout

 No Key Entry Timeout means that when you entry the number, it will dial out automatically after some time when you stop enter the number.

### To configure No Key Entry Timeout via web interface:

1. Click Webpage Setting → Preference
2. Fill the blank of No Key Entry Timeout: for example 5(seconds).(0 means never timeout, you should press the send key the dial out the number.
3. Click the  button to save the configuration.

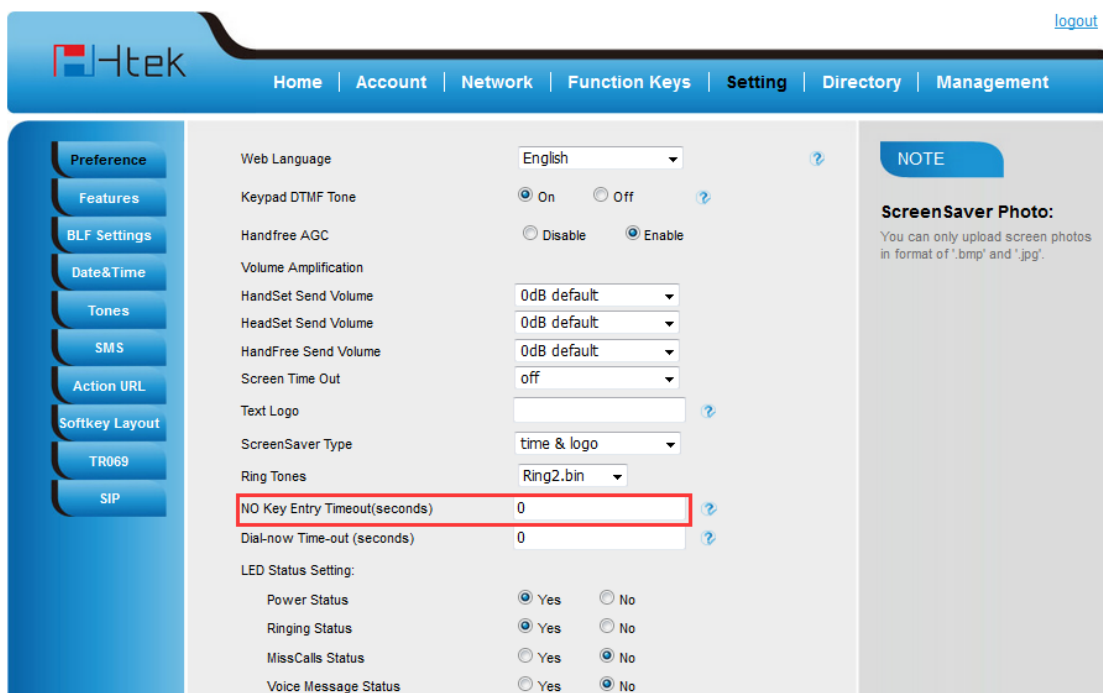

The screenshot shows the Htek web interface with the 'Preference' menu selected. The 'NO Key Entry Timeout(seconds)' field is highlighted with a red box and set to '0'. Other settings include Web Language (English), Keypad DTMF Tone (On), Handfree AGC (Enable), and various volume settings. A 'NOTE' box on the right states: 'ScreenSaver Photo: You can only upload screen photos in format of '.bmp' and '.jpg'.'


## Emergency Call

Public telephone networks in countries around the world have a single emergency telephone number (emergency services number), that allows a caller to contact local emergency services for assistance when required. The emergency telephone number may differ from country to country. It is typically a three-digit number so that it can be easily remembered and dialed quickly. Some countries have a different emergency number for each of the different emergency services.

You can specify the emergency telephone numbers on the IP phone for contacting the emergency services in an emergency situation.

### To configure emergency call via web interface:

1. Click Setting→Features→Phone Lock
2. Enter the emergency services number(e.g.110,119,120) in the Emergency field,
3. Click SaveSet to save the configuration.

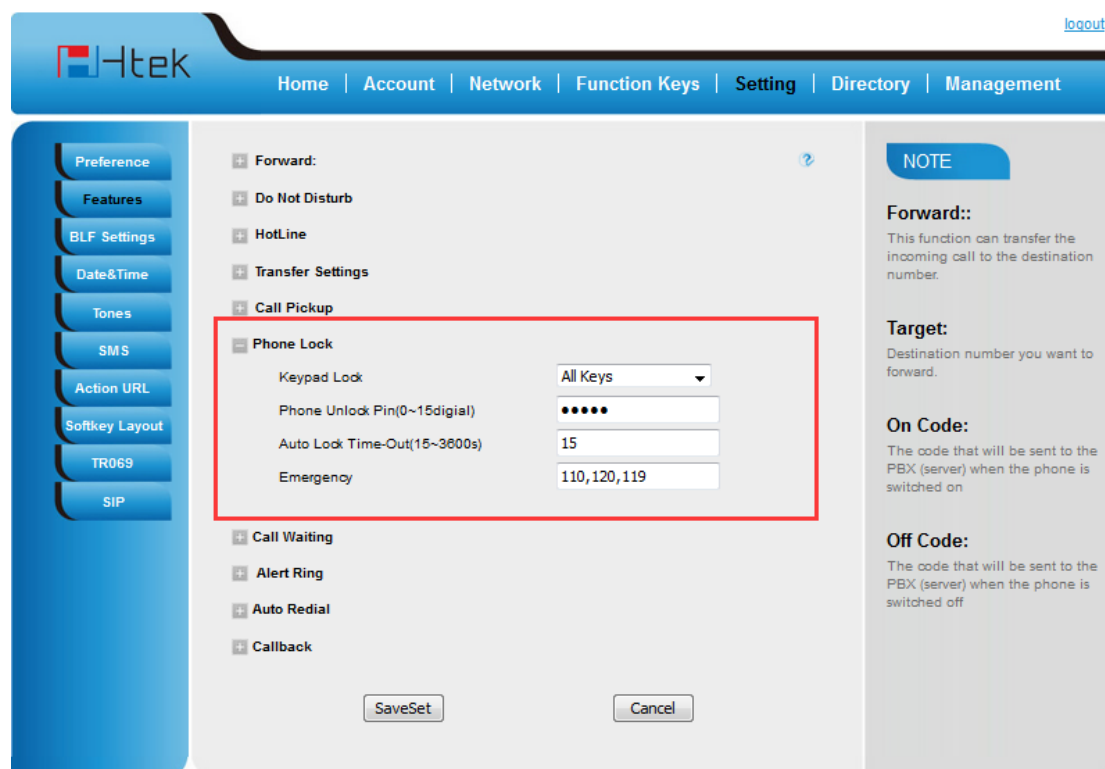

The screenshot shows the Htek web interface for configuring phone settings. The 'Phone Lock' section is highlighted with a red box. The configuration details are as follows:


Setting	Value
Keypad Lock	All Keys
Phone Unlock Pin(0~15digital)	•••••
Auto Lock Time-Out(15~3600s)	15
Emergency	110,120,119


Other visible settings include Forward, Do Not Disturb, HotLine, Transfer Settings, Call Pickup, Call Waiting, Alert Ring, Auto Redial, and Callback. A 'NOTE' section on the right explains the Forward, Target, On Code, and Off Code functions.

## Label Scroll

 When setting function keys, you need to set the label of the function keys. If the words are too long to show on the label, you can use this function to make labels scroll. Another approach is to set the labels to long label mode.

To configure Label Scroll via web interface:


1. Click the Setting → Preference
2. Select Enable or Disable for Label Scroll.
3. Click  for the setting.

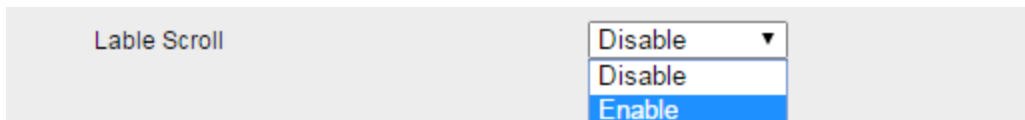


## Show Missed Calls

Whether to show missed call notification on LCD

 
To configure Label Scroll via web interface:

 
1. Click the Setting → Preference
2. Select Yes or No for Show Missed Calls.
3. Click  for the setting.



## Auto Logout Time

Set the Web login timeout

 
1. Click the Setting → Preference
2. Set number 1~5000 min for Auto Logout Time.
3. Click  for the setting.



## Reboot in Talking

This function is to allow reboot during the calls or not

 
1. Click the Setting → Preference
2. Set Enable or Disable for Reboot in Talking.
3. Click  for the setting.



## Detect IP Conflict

LCD can display message when IP conflict

 
1. Click the Setting → Preference
2. Set Enable or Disable for Detect IP Conflict.
3. Click  for the setting.



## Redial Mode

Call redial has two ways:(1) To redial the last placed call from the IP Phone (2) To redial the call from all calls list

 1. Click the Setting → Preference
2. Set Direct Mode or Select Mode for Redial Mode.
3. Click  for the setting.



## Keypad Lock

### To enable Keypad Lock via Phone

1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change choose lock type: All Keys Menu Key Function Key

---

 
## Lock & Answer


3. Press Save or OK key to save the configuration.

### **To disable Keypad Lock via Phone**


1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change to choose Off.
3. Press Save or OK key to save the configuration.

### **To enable Keypad Lock via Webpage**

 1. Click Webpage Setting → Features
2. To choose the Phone Lock.
3. To fill the unlock PIN and auto lock time
4. Fill the Emergence Number, when the phone is Lock, only Emergency Number can be sent.
5. To click  to save the configuration.

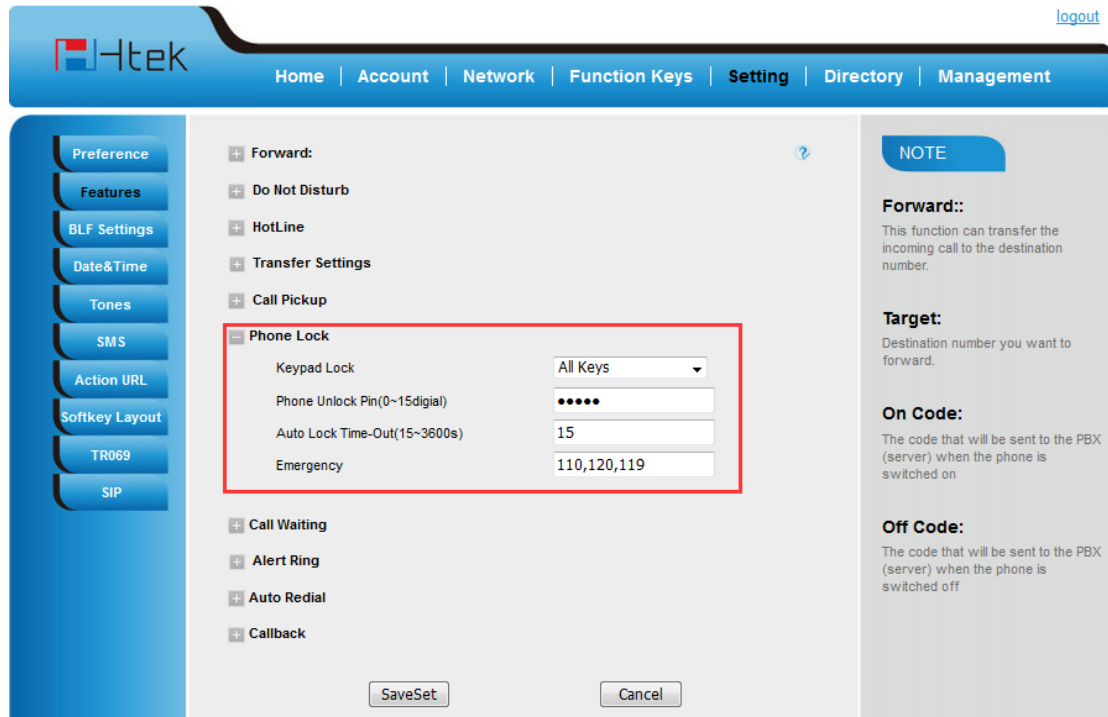


 
### To Disable Keypad Lock via Webpage

1. Click Webpage Setting → Features
2. To choose Disable for the Phone Lock.
3. To click  to save the configuration.

### Suppress DTMF Display


In order to ensure safety in Call process, you can choose whether to hide DTMF

 
1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display.
3. Click  for the setting.



## Suppress DTMF Display Delay


In order to ensure safety in Call process, you can choose whether to hide DTMF


1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display Delay.
3. Click  for the setting.



## Check-Syn With Authenticate

If this option is enabled, the server needs to be authenticated before the phone agrees to synchronize.

 
1. Click the Setting → Preference
2. Set Enable or Disable for Check-Syn With Authenticate.
3. Click  for the setting.



## Other features settings

### Action URL

 **To configure action url via web interface:**

1. Click Setting→Action URL
2. Filled the needed value in the necessary blank.
3. Click  to save the setting.

Click [Action URL](#) for more how to use, or check on [www.htek.com](http://www.htek.com)



The screenshot shows the Htek web interface with the 'Setting' menu selected. The left sidebar contains various settings categories: Preference, Features, BLF Settings, Date&Time, Tones, SMS, Action URL, Softkey Layout, TR069, and SIP. The main content area displays a list of settings under the 'Setting' menu, each with a text input field and a help icon (question mark). The settings listed are:

Setting Name	Input Field	Help Icon
Setup Completed	<input type="text"/>	?
Log On	<input type="text"/>	?
Log Off	<input type="text"/>	?
Register Failed	<input type="text"/>	?
Off Hook	<input type="text"/>	?
On Hook	<input type="text"/>	?
Incoming Call	<input type="text"/>	?
Outgoing Call	<input type="text"/>	?
Call Established	<input type="text"/>	?
Call Terminated	<input type="text"/>	?
Open DND	<input type="text"/>	?
Close DND	<input type="text"/>	?
Open Always Forward	<input type="text"/>	?
Close Always Forward	<input type="text"/>	?
Open Busy Forward	<input type="text"/>	?
Close Busy Forward	<input type="text"/>	?
Open No Busy Forward	<input type="text"/>	?
Close No Busy Forward	<input type="text"/>	?


A 'NOTE' box is visible on the right side of the settings list.

## Softkey Layout



 
This feature mainly defines which shown on the soft key in some status. For example, what the soft key displays when dialing, or talking.

**To configure Soft key via web interface:**

4. Click Setting→Softkey Layout
5. Select Enable for Custom Softkey
6. Select call States.

7. Select the feature form the disable key to enable key field by 

 Disable to Enable field.  Delete the Enable, and it will back to Disable field.

8. Click  or  to change to position or each feature.
9. Click  to save the configuration.


**Note:**

 
1. When there more than 5 items in the Enable field, the last softkey will display **More**, and last two item will show in the next page softkey, you can check by press **more**.

## Programmable Key

For the default keys as Soft keys, Navigation keys and so on, you can define them as some specific feature, and it works only on the idle page.

**To configure Programmable Key via web interface:**

 1. Click Function Keys→Programmable Keys
2. Select the desired Key to set.
3. Click  to save the setting.

- By clicking , all setting of the keys will be back to default.

Key	Type	Label	Account	Value
SoftKey1	History		Account 1	
SoftKey2	Directory		Account 1	
SoftKey3	DND		Account 1	
SoftKey4	Menu		Account 1	

Key	Type	Account	Value
Up	History	Account 1	
Down	Directory	Account 1	
Left	Switch Account Up	Account 1	
Right	Switch Account Dov	Account 1	
OK	Status	Account 1	
Cancel	N/A	Account 1	
MUTE	N/A	Account 1	
CONF	N/A	Account 1	
TRAN	Forward	Account 1	
HOLD	N/A	Account 1	

## Exp Key



It only works when there is expansion module connected with the phone.  
 For Exp Key configuration, please refer to: [UC46 User manual](#).

# Basic Call Features




## Place a Call

There are three ways to dialing a call: Handset, Headset and Hands-free speakerphone.

### To place a call by Handset

- Pick up the handset, or press a line key and dial the necessary number.
- Press  or  or press the send softkey, then the call is sending.

**To place a call by Headset:**

1. Press the  (light is Green)
2. Enter the desired number.
3. Press  or , or press the Send softkey, then the call is sending.


**Using headset to place and answer calls for all time**



1. Click webpage Setting →Preference
2. HeadSet Priority →Enable
3. Ring Device For HeadSet →User Headset

4. Press 





Refresh Caller Id Via Contact	Disable	▼
HeadSet Priority	Enable	▼
Ring Device For HeadSet	Use Speaker	▼
Redial Mode	<input checked="" type="radio"/> Direct Mode	<input type="radio"/> Select Mode
Intercom Barge	<input type="radio"/> On	<input checked="" type="radio"/> Off <a href="#">?</a>
Show Missed Calls	<input checked="" type="radio"/> Yes	<input type="radio"/> No <a href="#">?</a>
Suppress DTMF Display	<input type="radio"/> Off	<input checked="" type="radio"/> On
Suppress DTMF Display Delay	<input type="radio"/> Off	<input checked="" type="radio"/> On
Voice Mail Tone	<input checked="" type="radio"/> On	<input type="radio"/> Off
Busy Tone Timer (0~5s)	<input type="text" value="4"/>	
<input type="button" value="SaveSet"/>		<input type="button" value="Cancel"/>

**Placing a call by hands-free speakerphone**


1. Press the , or press the Line key, then you can hear the dial tone.

2. Press the number.
3. Press  or  press the Send soft key, then the call is sending.


### To place a call by call history or Directory via phone interface.

1. Press the History soft key (On the idle page) or Menu → History /Directory
2. Press  and  to select the targeted one.
3. Press the Send soft key, or , or , or the corresponding line key, then the call is sending.

#### Note:

1. The  key is set to be a send key. For more information, refer to the **Key as Send on page**
2. During the call, you can also change among Headset, Handset or Free-speaker mode.

### Making two calls with one line and one account

1. Press a line key and dial one phone number, then make a call.
2. Press the corresponding line key
3. Dial another phone number,
4. Press the Send soft key, or , then make the second call.



## End a Call

Here shows to end a call during three modes:



#### To end a call by Handset

Press the Cancel soft key or hang up the handset, or press .

#### To end a call under Headset Mode

Press the Cancel soft key or press , or press .


#### To end a call under hands-free speakerphone Mode

Press the Cancel soft key or press  or press  .

**Note:**

1. During the conference, to end the call is same as mentioned above.

## Redial a Call

1. To redial the last placed call from the IP Phone
2. Press  directly when LCD is on the idle interface.


## Receive a Call

There are three ways to receive a call when the phone is ringing:


**To receive a call by handset**

Pick up the handset the conversation is built.


**To receive a call by headset**

Press  and now the conversation is built.


**To receive a call by hands-free speaker**

1. Option 1: Press  directly.
2. Option 2: Press Answer soft key.
3. Option 3: Press the Line key (flashes red).

Moreover, some other action can be done by soft key when the call is coming.

1. To press the Reject soft key to reject the call. Or press  to reject the current call.
2. To press Forward to forward to another phone.

- To press Silence soft key, and then the call will keep silent, no ring tone display.

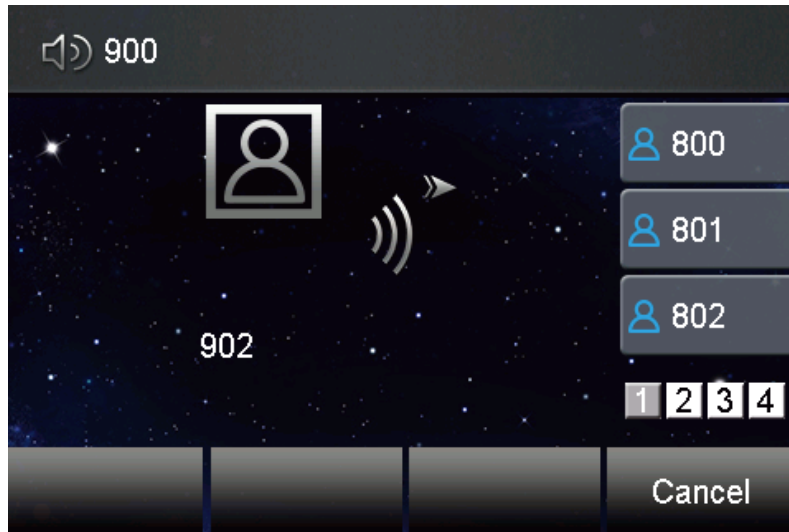


## Incoming Call Show Mode

There are two incoming call show modes for this phone:

- name and number of the contacts
- name and number of the incoming call and the account which is connecting

**To set incoming call show mode via web interface:**

- Click setting → preference
- Select the desire mode for the incoming call show mode
- Click  to save the setting.

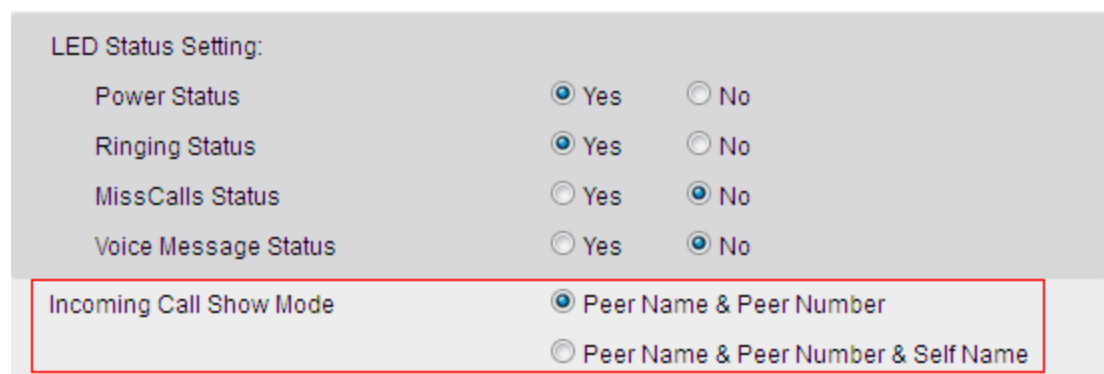


## Auto Answer

Enable auto answer feature, you will answer all incoming call automatically.

### To enable Auto Answer via Web interface

1. To Click Account → Advanced
2. To choose Yes for the Auto Answer.
3. To click Saveset to save the configuration.

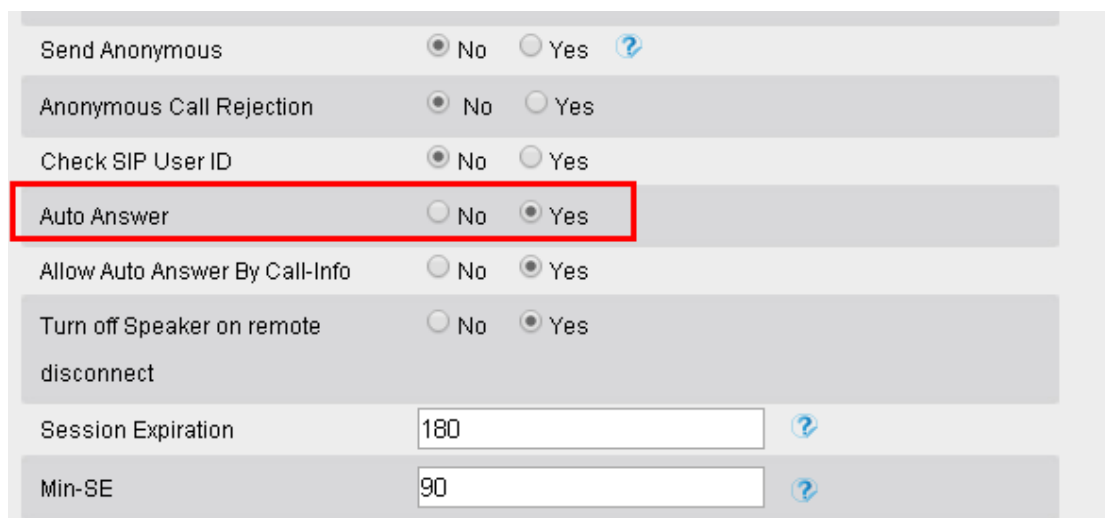

Send Anonymous	<input checked="" type="radio"/> No <input type="radio"/> Yes ?
Anonymous Call Rejection	<input checked="" type="radio"/> No <input type="radio"/> Yes
Check SIP User ID	<input checked="" type="radio"/> No <input type="radio"/> Yes
<b>Auto Answer</b>	<input type="radio"/> No <input checked="" type="radio"/> Yes
Allow Auto Answer By Call-Info	<input type="radio"/> No <input checked="" type="radio"/> Yes
Turn off Speaker on remote disconnect	<input type="radio"/> No <input checked="" type="radio"/> Yes
Session Expiration	<input type="text" value="180"/> ?
Min-SE	<input type="text" value="90"/> ?


### To Disable Auto Answer via Webpage

1. To Click Account → Advanced
2. To choose No for the Auto Answer.
3. To click Saveset to save the configuration.

## Call Hold



When use hold feature, the Hold icon will show on the display.

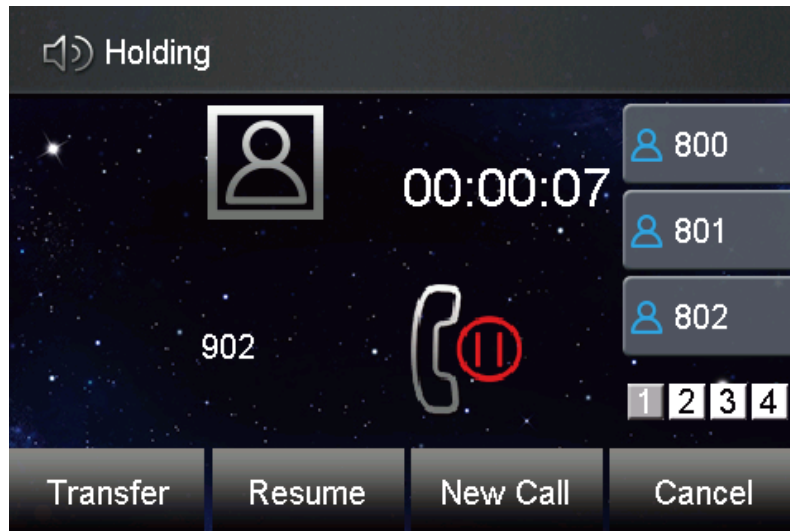





To make a call on hold during three modes:



**To hold a call under handset mode:**

1. Press Hold soft key or  to hold the current call.
2. Press Resume soft key or  to resume the call on hold.

**To hold a call under headset mode:**

1. Press Hold soft key or  to hold the current call.
2. Press Resume soft key or  to resume the call on hold.

**To hold a call during the speaker mode:**



1. Press Hold soft key or  to hold the current call.
2. Press Resume soft key or  to resume the call on hold.

## Call Transfer

This phone supports blind, attended and Semi-Attended Transfer.


### Blind Transfer


When you use this feature, you can transfer



1. Press  or Transfer soft key during the conversation, the call is on hold now.
2. Enter the number that transfers to.
3. Press , and now the blind transfer completed.

### Attended Transfer

When you use this feature, you can

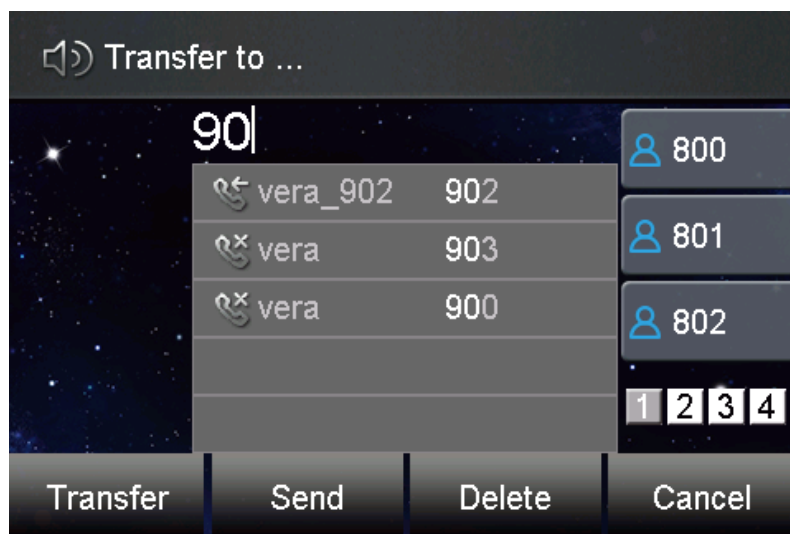1. Press  or transfer soft key during the conversation, the call is on hold now.






2. Enter the number that transfer to, and press the send soft key or .
3. Start the second conversation, press  or transfer soft key, then, transfer completed.


**NOTE:**

To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains. Blind transfer will usually use the primary account SIP profile .

### Semi-Attended Transfer


1. Press  or transfer soft key during the conversation, the call is on hold now.
2. Enter the number transfer to, and then press , then you can hear the ring tone.
3. Press  or the Tran soft key, and now the Semi-attended transfer completed.

### BLF Transfer

1. Set a Programmable Key or line key is set as BLF. For how to set BLF, please refer to [BLF](#)
2. Press  or transfer soft key during the conversation, the call is on hold now.
3. Press BLF key then realize blind, attended and Semi-Attended Transfer.

### Hold transfer on hook:

1. Setting → Features → Transfer Setting: Hold Transfer On Hook: ON.
2. A place a call to B, B answer, A press the hold softkey and place a call to C, A cancel the call when C is ringing or answering, then C and B in the same call and the transfer is successful.

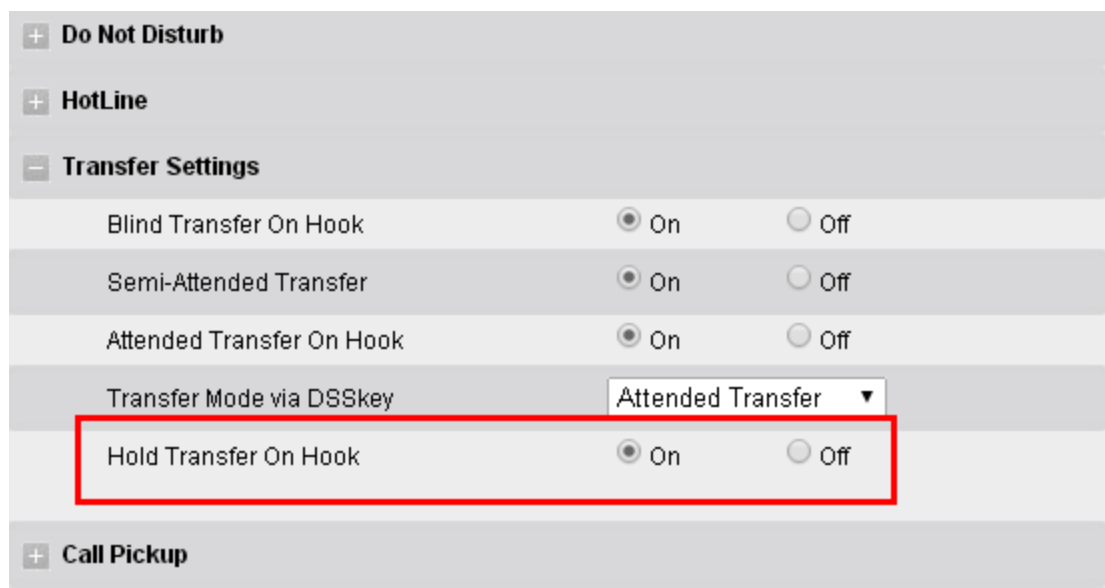


**Hold transfer on Three Way conference:**

1. Setting → Features → Three Way Call Release Type: Transfer.
2. A place a call to B, B answer, A place a call to C again, C answer, A press the conference then A, B and C will establish meeting.
3. A press the Cancel softkey or on-hook to exit the meeting in the process of talking.
4. Then B and C will continue to talk.

**Transfer to New Call via web interface**

1. Click Setting → Feature
2. Select Transfer Mode via DSS key → New Call
3. Select the desired Line or Line Key and select Transfer in the Type.
4. Enter the phone number in the Value field.

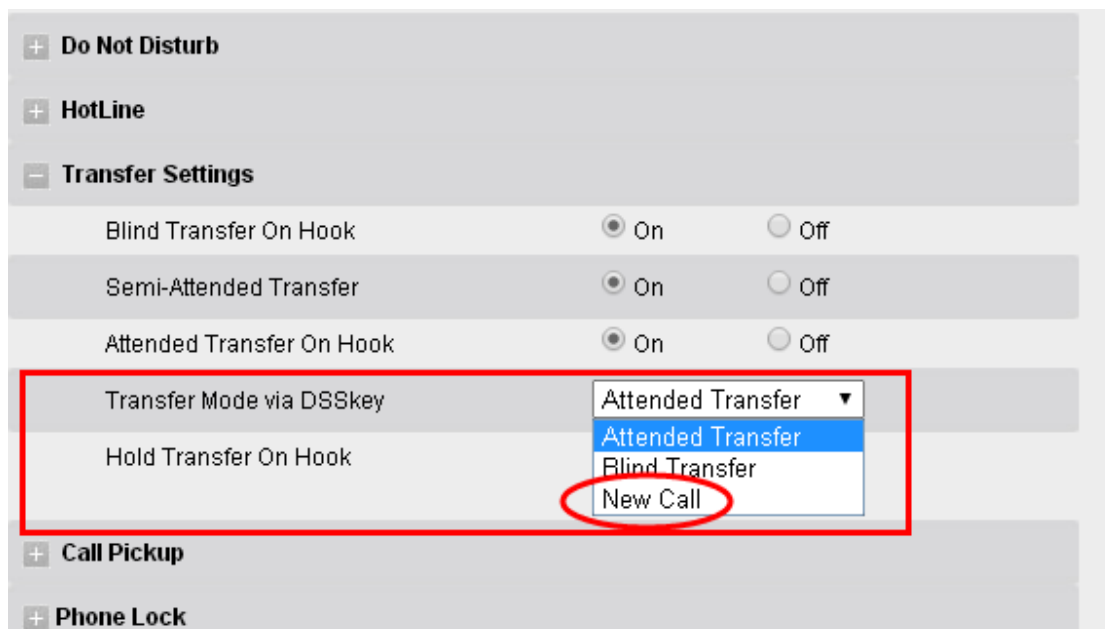

+ Do Not Disturb	
+ HotLine	
- Transfer Settings	
Blind Transfer On Hook	<input checked="" type="radio"/> On <input type="radio"/> Off
Semi-Attended Transfer	<input checked="" type="radio"/> On <input type="radio"/> Off
Attended Transfer On Hook	<input checked="" type="radio"/> On <input type="radio"/> Off
Transfer Mode via DSSkey	Attended Transfer ▼ Attended Transfer Blind Transfer New Call
Hold Transfer On Hook	
+ Call Pickup	
+ Phone Lock	

[logout](#)

Htek
Home
Account
Network
Function Keys
Setting
Directory
Management

Line Key  
 Programmable Key  
 EXP KEY

Line Label Length Default
Line Page Indicator Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	BLF	Default	530		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	





NOTE

**NOTE: if the person that wanted to be spoken to do not want to answer the call, then the person that answered the coming call could use this function.**

## Call Conference


This IP Phone supports up to 5-way conference.

### 5-way conference


1. Assuming that call party A and B are in conversation. A wants to bring C, D and E in a conference
2. A press line 2 key, the call is placed on hold.
3. A enter the number of C and then press send soft key or .
4. C answering the call.
5. A press  or the conference soft key, then A, B and C are now in a conference.(and now this is **3-way conference**)
6. A press line 3 key, the current 3-way conference is placed on hold.
7. A enter the number of D and then press send soft key or .
8. D answering the call.
9. A press  or the conference soft key, then A, B, C and D are now in a

conference.(and now this is **4-way conference**)


10. A press line 4 key, the call is placed on hold.

11. A enter the number of E and then press send soft key or .

12. E answering the call.

13. A press  or the conference soft key, then A, B, C, D and E are now the **5-way conference** is built.

14. A end the call, the conference is finished.

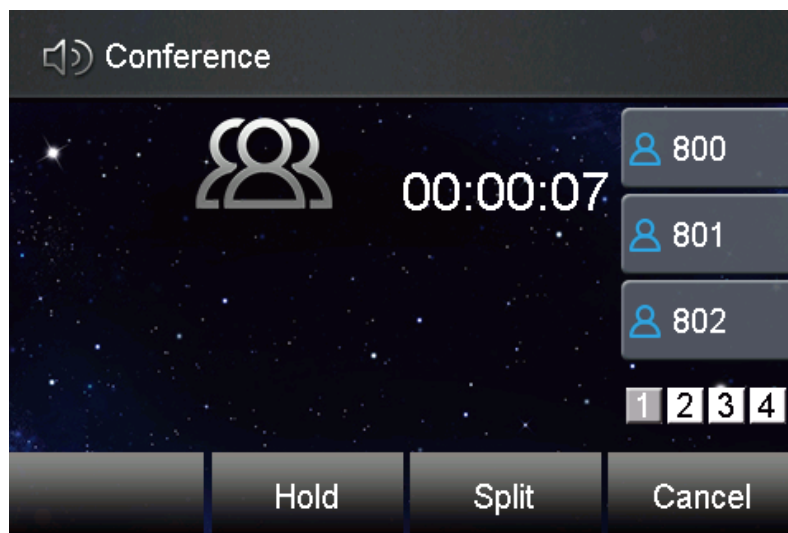


**Note:**

1. If C does not answer the call, A can back to continue the conversation with B;
2. Once A hangs up the call, the conference is ended, while if B or C drops the call, A&C or A&B conversation continues.
3. The conference feature is not available on all servers. For more information, contact your system administrator.
4. To realize the 5 way conference, the line should be all available.

## Call Forward

This phone supports static forward (always forward, busy forward and no answer forward) and dynamic forward

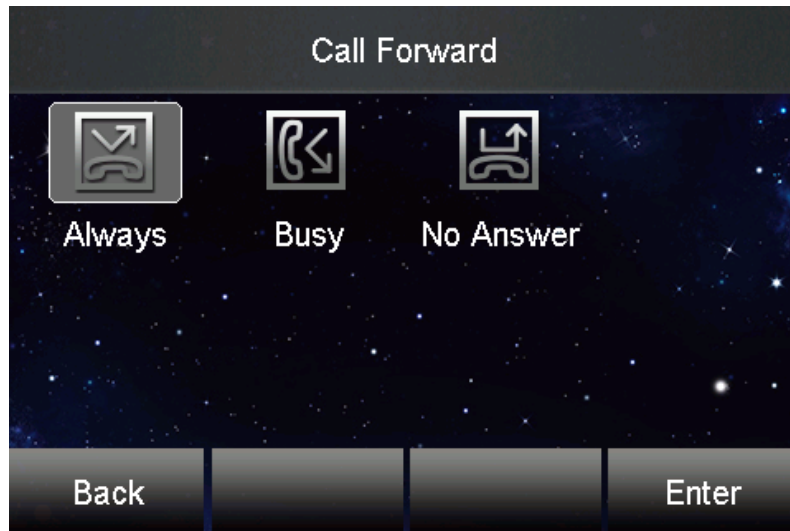


### To configure static forward

### To configure always forward




With this feature, all incoming calls will forward immediately to configured number.

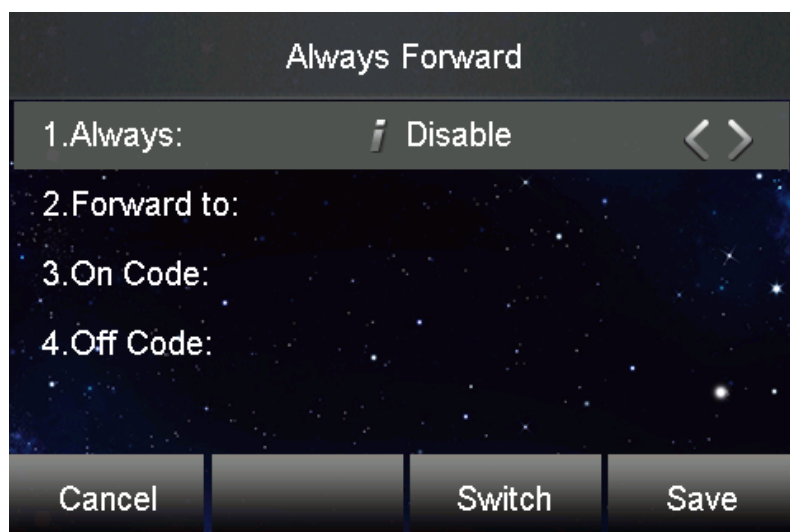
1. Press Menu → Features → Call forward → Always Forward.
2. Press and to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press or Save soft key to save the configuration.



### To configure busy forward




With this feature, the incoming calls are immediately forwarded if the phone is busy.

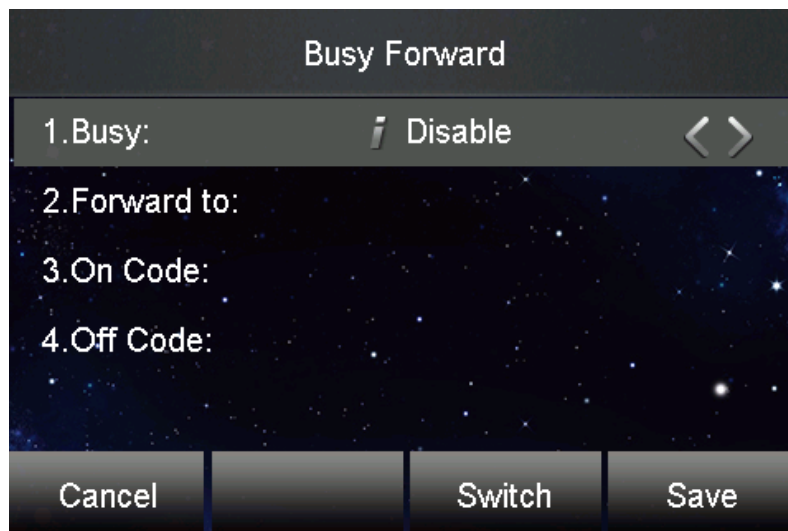1. Press Menu → Features → Call forward → Busy forward.
2. Press  and  to select the enable choice.
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.





### To configure no answer forward


No Answer Forward: Incoming calls are forwarded if not answered after some time.

1. Press Menu → Features → Call forward → No answer forward.
2. Press  and  to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.




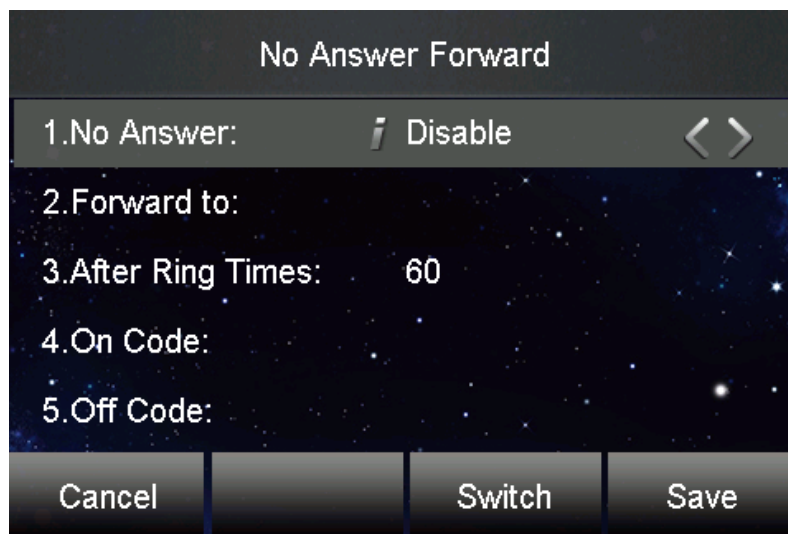

 
When the Forward feature is enabled, the icon  will display on Top of the LCD.

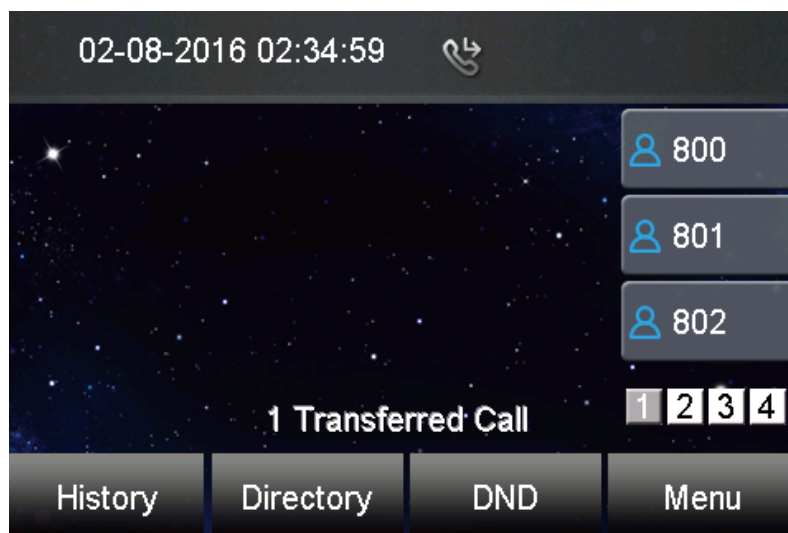




### To configure Forward via Web Interface

1. Setting → Features
2. Click On for the Always/Busy/No Answer
3. Fill the Forward to Number
4. (Optional) fill the on/off code
5. Click  to save the configuration

 
### To cancel the forward feature via Phone Interface

- Option 1: To press the  key to disable the forward feature.
- Option 2: Press Menu → Features → Call forward → Always/Busy/No answer Forward

Press  and  to select the disable choice


Press  or Save soft key to save the configuration.


### To cancel the forward feature via Web Interface

- Setting → Features
- Click Off for the Always/Busy/No Answer
- Click  to save the configuration

### To configure dynamic forward

#### Forward an incoming call during the ringing.

1. When the phone is ringing, press Forward soft key.
2. Enter the forward number or select the desired number from Directory softkey (Precondition: local directory has a or more contacts).
3. Press  or press the send soft key, then the call is forwarded.

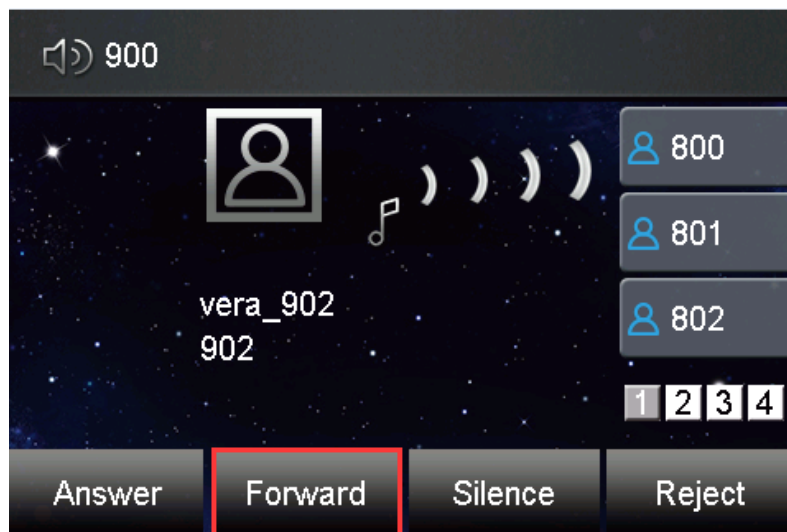

#### Note:






If the Programmable Key or line key is set as BLF, when an incoming call ringing, press this BLF key directly to realize the dynamic forward. You can choose a desired forward number from the Directory when you press the Forward key.

## Call Return

 
This feature allows you to dial the last phone call you received.

#### To configure the Call Return via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.


3. Press  and  key to select the Key Event in the type field.
4. Press  and  key to select the Call Return.
5. Press  or Save soft key to save the configuration

### To configure the Call Return via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Call Return in the Type.
3. Click  to save the configuration.

## Call Back

When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for call-back, as shown in figure

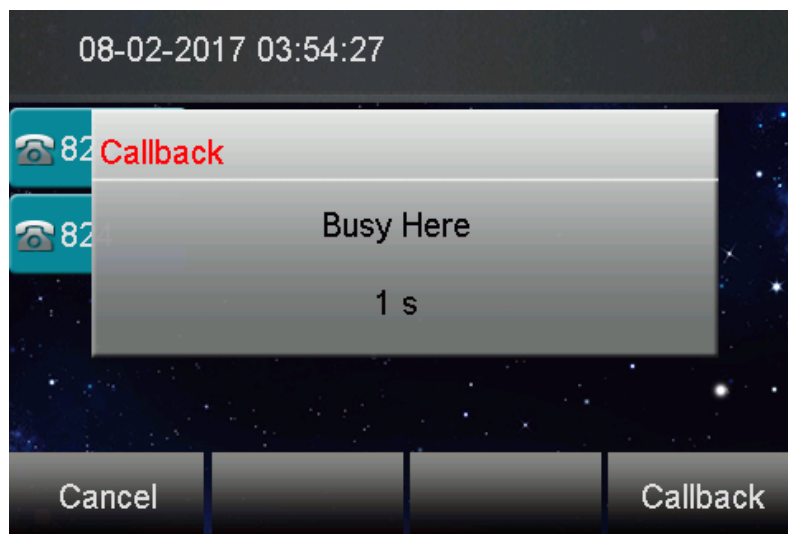


If you press the callback, the phone will dial the Callback phone number.

### To configure the Call Back via Web interface


1. Click Setting → Features → Callback .
2. Fill the Callback phone number.

- Click  to save the configuration.

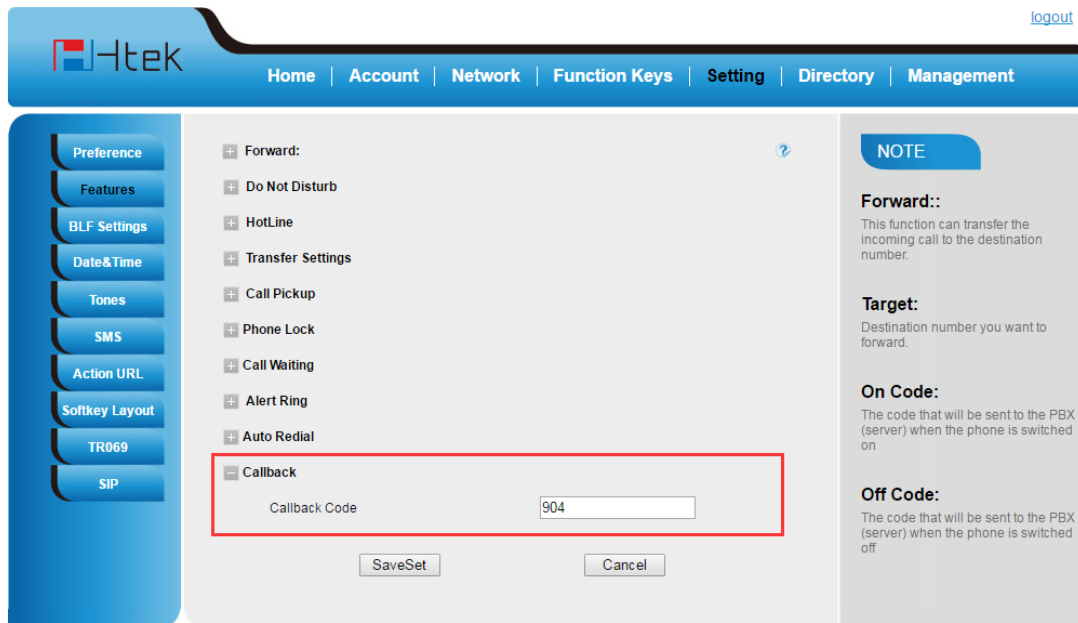


## Call Waiting Tone

- Click Setting → Features
- Select Call Waiting: On and Call Waiting Tone: On

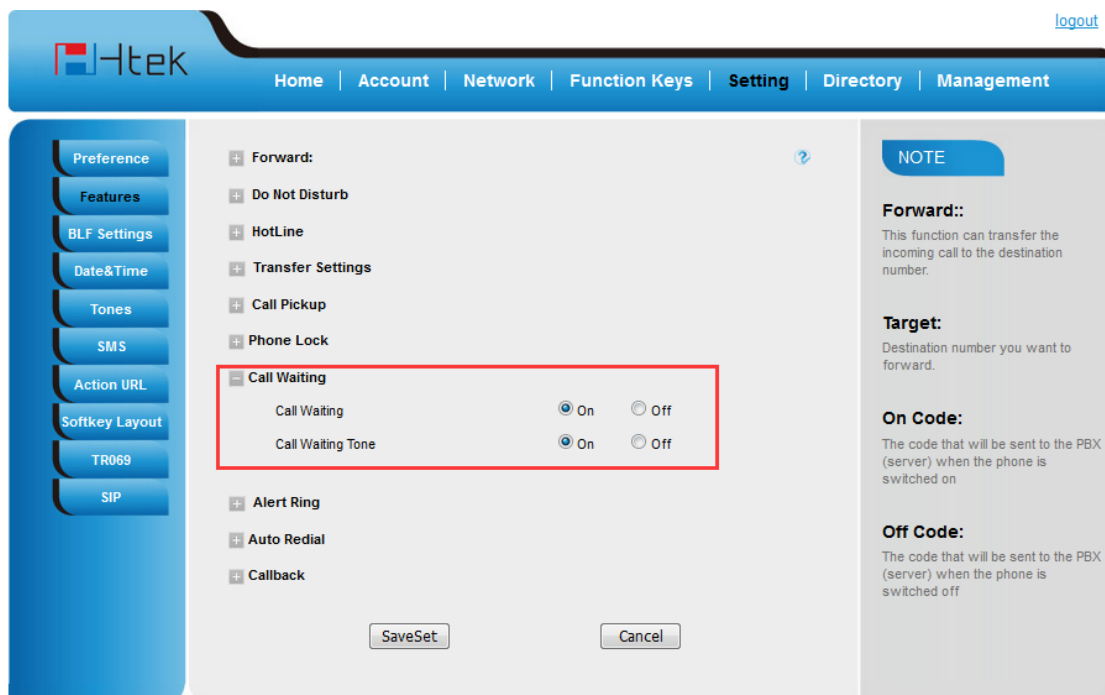

### To Change the Call Waiting Tone time via Web interface

1. Click Setting → Tone

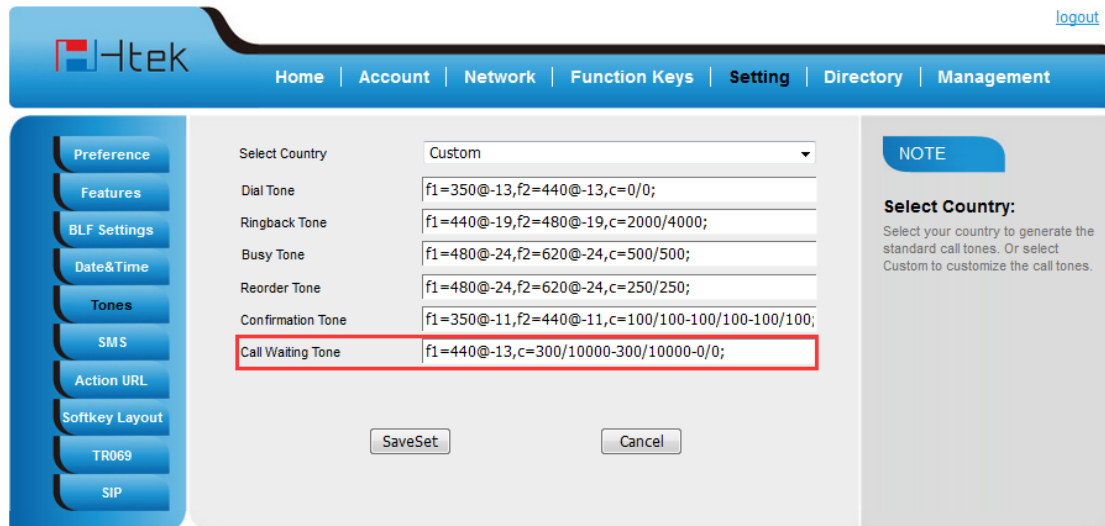





2. Change the Tone Time as you want (for example 3s)




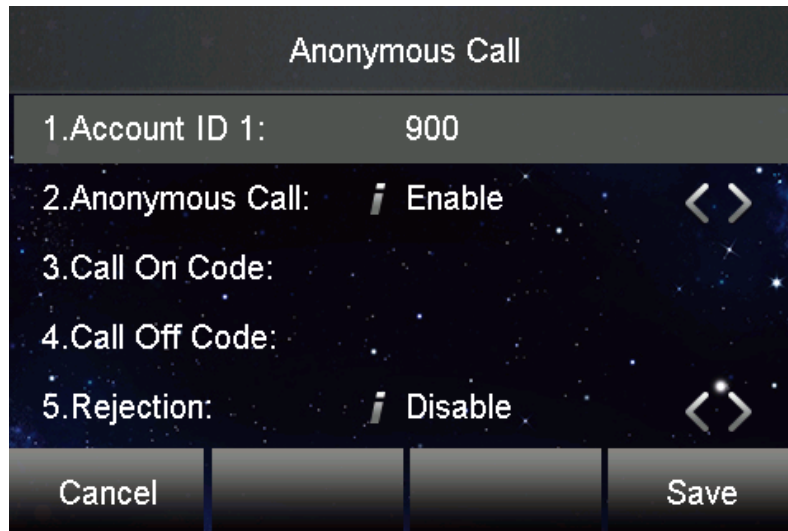
## Hide Caller ID

Just enable the anonymous call feature, you can set your ID do not appear on the other phone that you called.




### To configure anonymous call

1. Press Menu → Features → Anonymous Call
2. Press  and  to change the Line ID
3. Press  and  to select the enable choice in Anonymous Call filed.
4. Enter the call on code (optional), call off code (optional).

5. Press  or Save soft key to save the configuration.








#### To cancel anonymous call feature


1. Press Menu → Features → Anonymous Call
2. Press  and  key to select the disable choice in Anonymous Call filed.
3. Press  or Save soft key to save the configuration.

## Reject Anonymous




If you do not want to be disturb by anonymous calls, you can set the reject anonymous call features, so you will not hear the unknown calls

#### To configure rejecting anonymous call

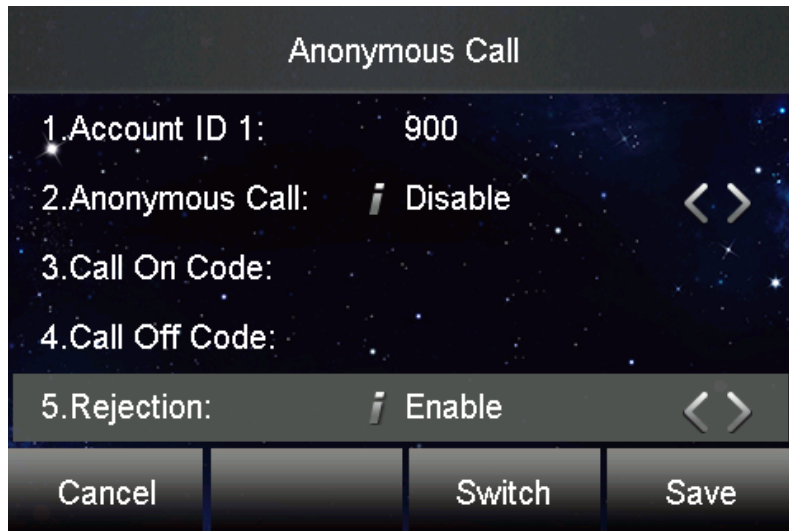1. Press Menu → Features → Anonymous Call
2. Press  and  key to change the Line ID
3. Press  and  key to select the enable choice in Rejection filed.
4. Press  or Save soft key to save the configuration




### To cancel rejecting anonymous call

1. Press Menu →Features →Anonymous Call
2. Press  and  key to select the disable choice in Rejection filed.
3. Press  or Save soft key to save the configuration.


## Call Mute

When you use the Mute feature, the other parties will not hear your voice while you can hear their voice. Call mute applies to all modes (handset, headset, and speakerphone).

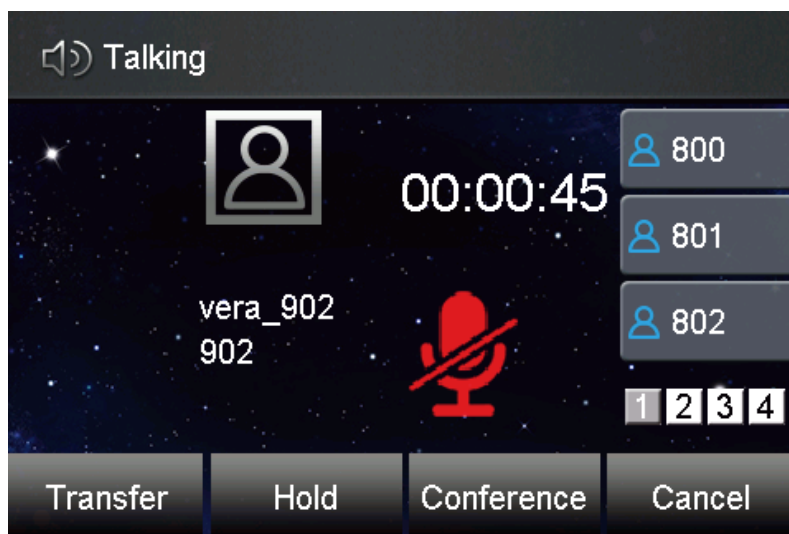





**To mute the call during a call (including a conference call)**


1. Press the mute key , then the mute key glows green, and the LCD display




2. To disable the mute function, press  again.


## DND

When you use the DND feature, the phone is to reject all incoming calls automatically and you can see the mute icon  shown on the Top of the LCD on idle page.

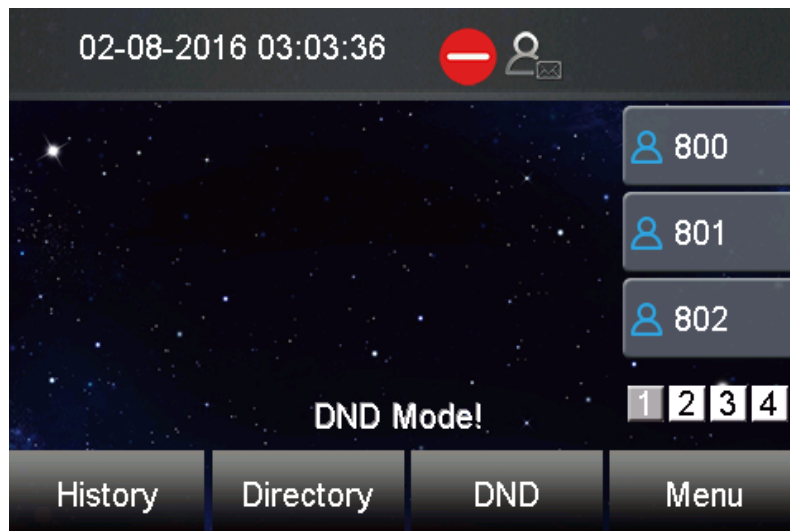**To enable DND feature via phone interface:**


Press the DND soft key when the phone is idle, and then  shown on the LCD.


**To disable DND feature via phone interface:**

Press the DND soft key again, and then there is no  on the LCD.


## Hot Line


**To configure Hot Line**

1. Press Menu → Features → Hot Line
2. Enter the Number and delay time (as present, we support off hook auto dial).
3. Press  or Save soft key to save the configuration

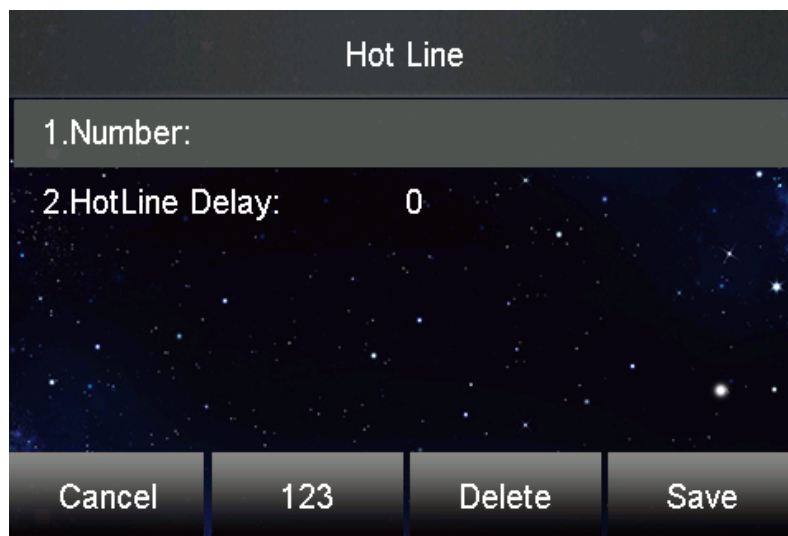

#### To configure Hotline auto dial via Web Interface

 
1. Setting → Features.
2. Fill the number in the Hotline Number and Hotline Time-out.
3. Click  to save the configuration.

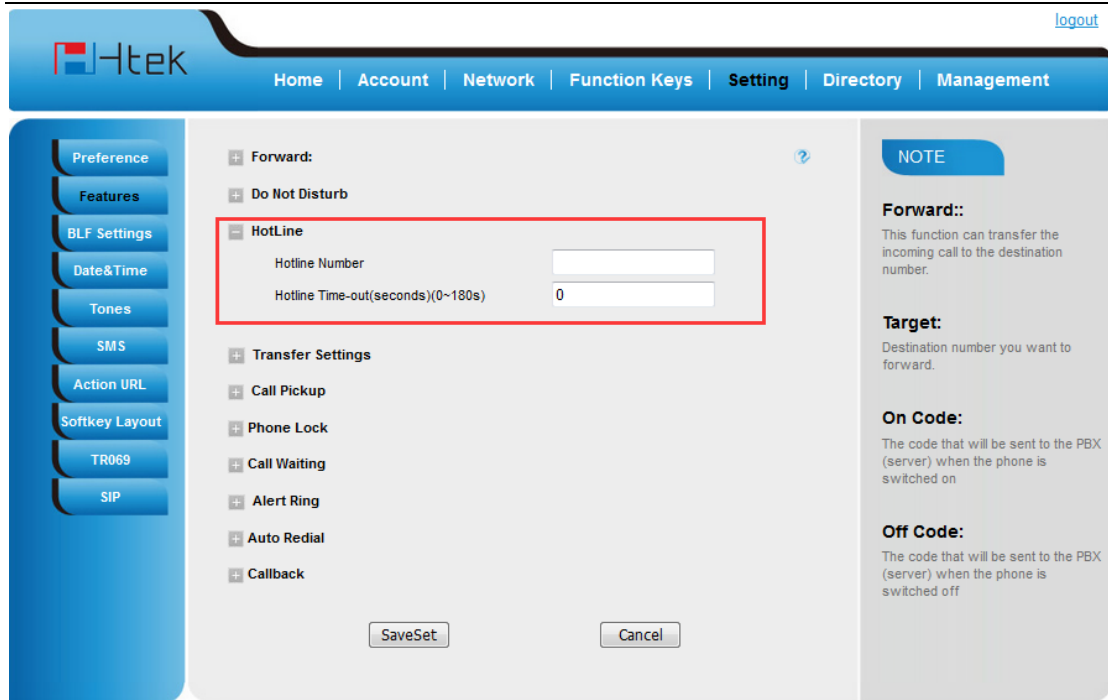


Delete the hotline number and save the configuration, and then now the Hotline auto dial is cancelled.

## Auto Redial

When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for Auto Redial, as shown in figure.

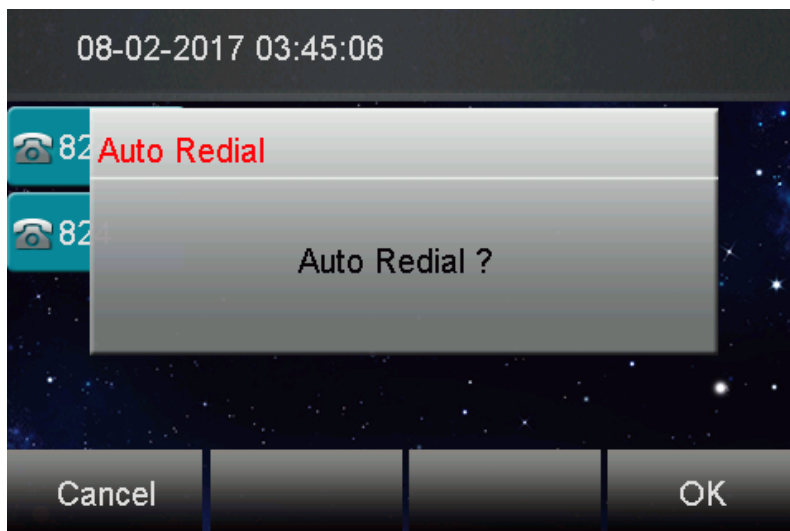

If you press OK, your LCD will prompt Auto Redial Interval and Auto Redial Times

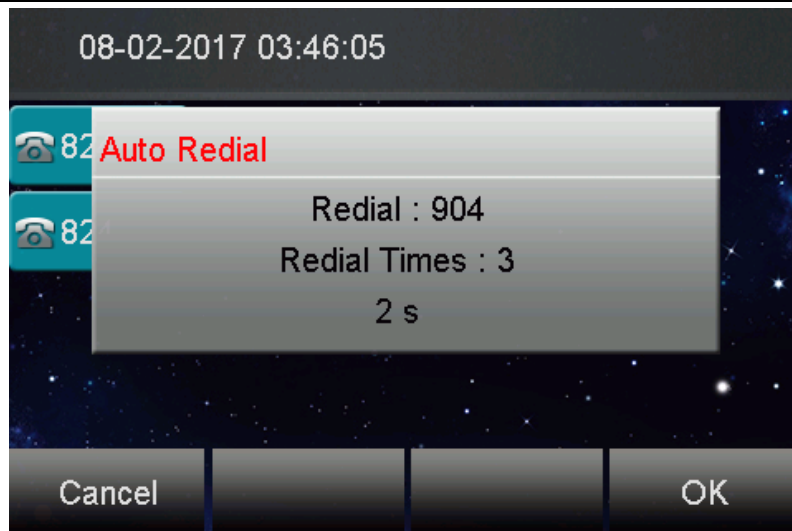

#### To configure Auto Redial via Web Interface

1. Click Setting → Features → Auto Redial
2. Select On or Off for Auto Redial.
3. Fill the number 1~300 seconds for the Auto Redial Interval.
4. Fill the number 1~300 times for the Auto Redial Times.
5. Click  to save the configuration.

## Function Key Features Settings

The function key supports the Line Label Length and Line Page Indicator:

**Line Label Length:** if this option is set Long label, then the label's length will be longer, it is used for string is too long.

**Line Page Indicator:** enable this option. when the phone have be configured four pages and current page is first page, the forth page has a BLF and BLF's status is changed, then the forth page's button will flash red.

UC924E has 28 Function Keys.

### Line

It works same as Line keys.


Line support three Mode (Default, lock and float)

**Default mode:** If the phone has a incoming call, it means that the phone will not jump to the first page when the first page set the line type and current page is four page.

**Lock mode:** it means that the other page's same position has the same line when the first page set the line type.

**Float mode:** If the phone has a incoming call, it means that the phone will jump to the first page when the first page set the line type and current page is four page.




#### To configure Line Feature via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the wanted Key and set as Line.
3. Select the Account.
4. Click the  button to save the configuration.

## Speed Dial


With this feature, you can dial one directory by press the definite key.


### To configure Speed Dial feature via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Press  and  key to select the Speed Dial in the type field.
3. Enter the targeted Number.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as Speed Dial.

### To configure Speed Dial feature via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the wanted Line or Line Key and set as Speed Dial.
3. Enter the desired phone number in the Value field.
4. Select the Account ID
5. Click the  button to save the configuration.

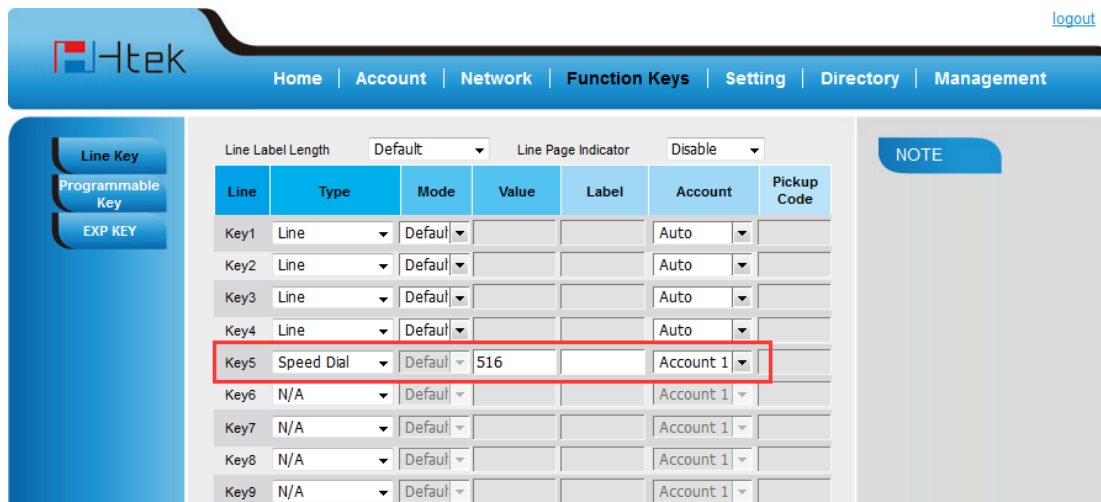

The screenshot shows the Htek web interface for configuring function keys. The navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. The 'Function Keys' section is active, showing a table of keys. Key5 is highlighted with a red box, indicating it is configured as a Speed Dial with the value 516 and Account 1. The table also shows other keys (Key1-4, Key6-9) configured as Line or N/A.






Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Speed Dial	Default	516		Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

## BLF

 
You can use the BLF (Busy Lamp Field) feature to monitor a specific one whether his phone is busy or free.

1. When the monitored line is idle, the light is steady green.
2. When the monitored line is ringing, the light is blinking red, press the BLF key to pick the phone up directly.
3. When the monitored line is calling or in a conversation, the light is steady red.

### To configure a BLF key by phone

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example).
2. Select the targeted Line or Line Key.
3. Press  and  key to select the BLF in the type field.
4. Enter the targeted Value Number.
5. Press  and  key to select the Account ID.
6. Enter the Pickup Code.
7. Press  or Save soft key to save the configuration

#### To configure a BLF key by web

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select BLF in the Type.
3. Enter the monitored phone number in the Value field.
4. Select the Account ID
5. Filled the Pickup code.
6. Click  to save the configuration.



[logout](#)

Htek

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Line Key](#)  
[Programmable Key](#)  
[EXP KEY](#)

Line Label Length Default
Line Page Indicator Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Account 1	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	BLF	Default	903		Account 1	*4
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	
Key10	N/A	Default			Account 1	
Key11	N/A	Default			Account 1	
Key12	N/A	Default			Account 1	

NOTE


**Note :**

This feature is not available on all servers. For more information, contact your system administrator.

After setting the BLF key, do not need to restart the phone.


## Visual Alert for BLF Pickup

If this option is on, when you use the BLF feature to monitor a specific phone whether it is busy or free, you can see this message on the LCD, as shown in the following figure.

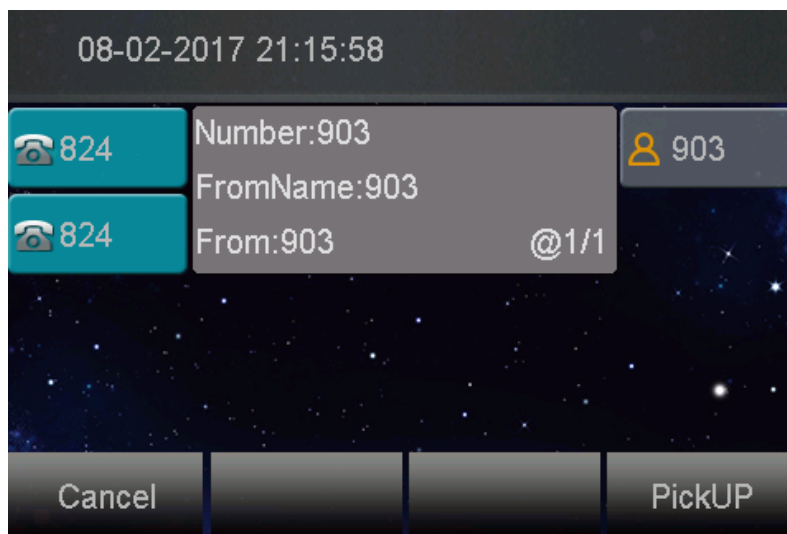

**To configure Visual Alert for BLF Pickup via Web Interface**

1. Click Setting →Features →Call Pick up→ Visual Alert for BLF Pickup
2. Select On or Off for Visual Alert for BLF Pickup
3. Click **SaveSet** to save the configuration.

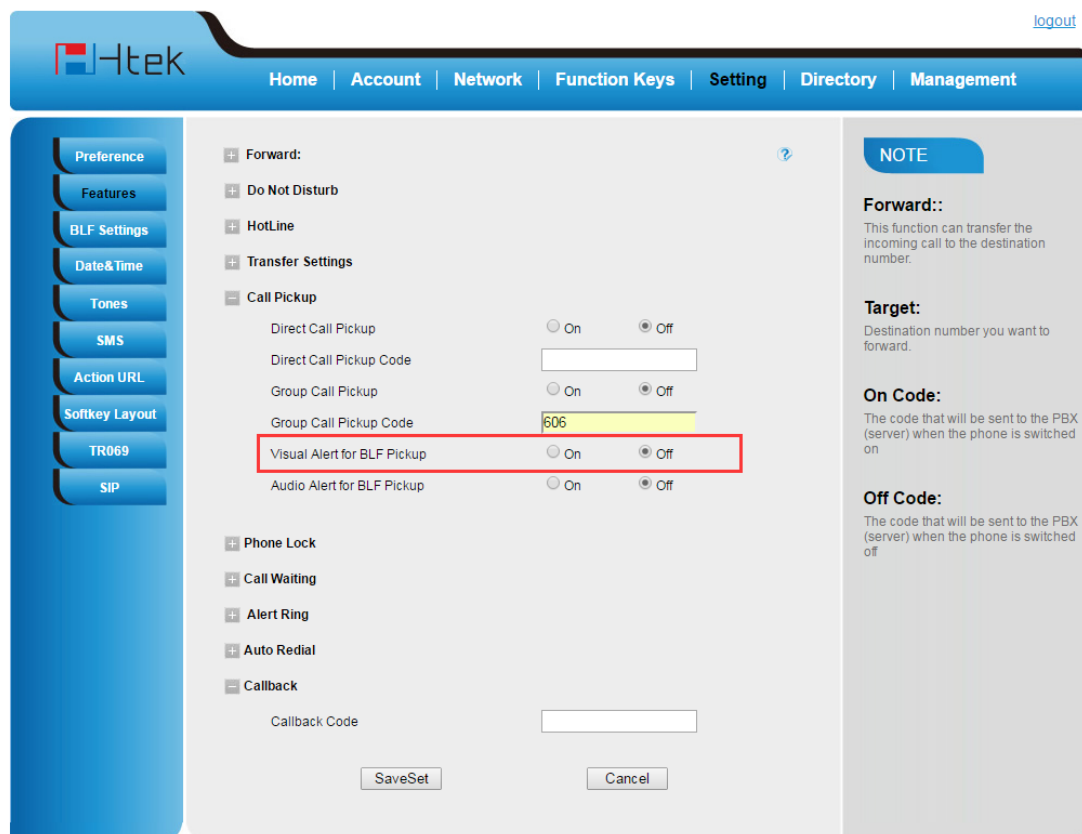

The screenshot shows the Htek web interface for configuring call pickup features. The 'Call Pickup' section is expanded, showing options for Direct Call Pickup, Group Call Pickup, and Visual/Audio Alerts for BLF Pickup. The 'Visual Alert for BLF Pickup' option is highlighted with a red box and is currently set to 'Off'. The 'Audio Alert for BLF Pickup' option is also visible below it. The interface includes a navigation menu on the left, a main settings area, and a 'NOTE' section on the right.

## Audio Alert for BLF Pickup

If this option is on, when you use the BLF feature to monitor a specific phone whether it is busy or free, you can hear beep.

### To configure Audio Alert for BLF Pickup via Web Interface

1. Click Setting →Features →Call Pick up→ Audio Alert for BLF Pickup
2. Select On or Off for Audio Alert for BLF Pickup
3. Click **SaveSet** to save the configuration.

The screenshot shows the Htek web interface for 'Function Key Features Settings'. The left sidebar contains a menu with options: Preference, Features, BLF Settings, Date&Time, Tones, SMS, Action URL, Softkey Layout, TR069, and SIP. The main content area is divided into sections: Forward, Do Not Disturb, HotLine, Transfer Settings, Call Pickup, Phone Lock, Call Waiting, Alert Ring, Auto Redial, and Callback. Under 'Call Pickup', there are settings for Direct Call Pickup, Group Call Pickup, Visual Alert for BLF Pickup, and Audio Alert for BLF Pickup. The 'Audio Alert for BLF Pickup' option is highlighted with a red box. The 'On Code' field is set to '606'. A 'NOTE' section on the right provides details for Forward, Target, On Code, and Off Code settings.

**NOTE**

**Forward::**  
This function can transfer the incoming call to the destination number.

**Target:**  
Destination number you want to forward.

**On Code:**  
The code that will be sent to the PBX (server) when the phone is switched on

**Off Code:**  
The code that will be sent to the PBX (server) when the phone is switched off

## BLF List

To configure BLF List via web interface:

1. Login and click Account

* Account Active	<input type="radio"/> No <input checked="" type="radio"/> Yes	
* Primary SIP Server	<input type="text" value="as.iop2.broadworks.net"/>	<a href="#">?</a>
Failover SIP Server	<input type="text"/>	<a href="#">?</a>
Second Failover SipServer	<input type="text"/>	<a href="#">?</a>
Prefer Primary SIP Server	<input checked="" type="radio"/> No <input type="radio"/> Yes	<a href="#">?</a>
Outbound Proxy	<input type="text"/>	<a href="#">?</a>
* SIP Transport	<input checked="" type="radio"/> UDP <input type="radio"/> TCP <input type="radio"/> TLS	<a href="#">?</a>
NAT Traversal	<input type="radio"/> No <input checked="" type="radio"/> No,but send keep alive <input type="radio"/> STUN	
Lable	<input type="text"/>	<a href="#">?</a>
* SIP User ID	<input type="text" value="2404984031"/>	<a href="#">?</a>
* Authenticate ID	<input type="text" value="2404984031"/>	<a href="#">?</a>
* Authenticate Password	<input type="text" value="*****"/>	<a href="#">?</a>
Name	<input type="text" value="4031"/>	<a href="#">?</a>
DNS Mode	<input checked="" type="radio"/> A Record <input type="radio"/> SRV <input type="radio"/> NAPTR/SRV	

- Click Advanced and then fill the Eventlist BLF URL.

Force Invite	<input checked="" type="radio"/> No <input type="radio"/> Yes	<a href="#">?</a>
Hook Flash Timing	minimum: <input type="text" value="30"/> maximum: <input type="text" value="100"/>	<a href="#">?</a>
Special Feature	<input type="text" value="Standard"/>	
Eventlist BLF URL	<input type="text" value="blf_sales"/>	

- To configure BLF List Keys

- Click → Function Keys → Line Key


- Select the BLF List in the Type Field.


- Select Account

- Click  to save the configuration.


For more information, please check [BLF list Note](#) on [www.htek.com](http://www.htek.com).

## Voice Message

This phone supports Voicemail, and when there is message, the message  will light green. Moreover, when pick up the handset, or press speaker key, you will hear some quick busy tone.

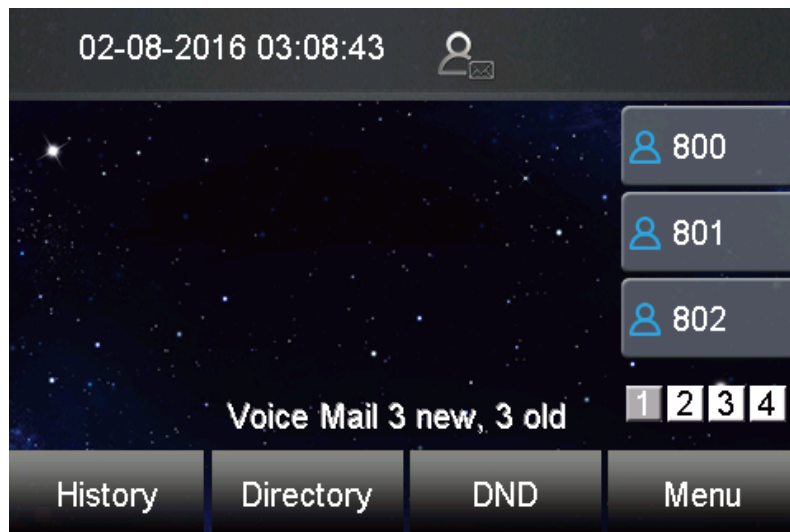


### To configure the Voice mail feature via phone interface:






1. Press Menu→Messages→Voice Mail→Set Voice Mail.
2. Enter the Account1/2/3/4 NO.
3. Press  or Save soft key to save the configuration

### To configure Voice Mail Line Key via Web Interface:

1. Click Function keys → Line Key.
2. Select the wanted Key.
3. Enter the desired voicemail feature codes in the Value field.
4. Filled the Label displayed on LCD.

5. Select the Account.
6. Click  to save the configuration.

**To configure a Voice mail key by phone interface:**


1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example).
2. Select the targeted Line or Line Key.
3. Press  and  key to select the Voice mail in the type field.
4. Enter the Value Number.
5. Press  and  key to select the Account ID.
6. Press  or Save soft key to save the configuration

**To leave a voice mail:**

You can leave a voice mail for someone else when he/she is busy or inconvenient to answer the call. Follow the voice prompt from the system server to leave a voice mail, and then hang up.

**To listen to voice mails:**


When the phone interface prompts receiving new voice mail's icon, the power indicator LED flashes red(Setting->Preference: Enable Voice Message Status) and the voice message button flashes green.

1. Pressing  or the targeted Line or Line Key to dial out the voice mail access code.
2. Follow the voice prompt to listen to voice mail.

**To view the voicemail via phone interface:**

Press Menu->Messages->Voice Mail->View Voice Mail.

The LCD screen displays the amount of new and old voice mails

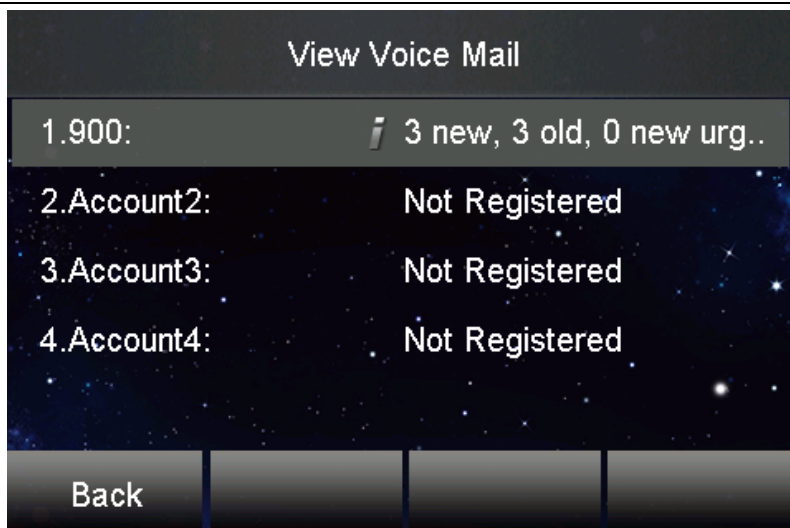
**Note :**

**This feature is not available on all servers. For more information, contact your system administrator.**




**Before listening to voice mails, make sure the voice mail access code has been configured.**

**When all new voice mails are retrieved, the power indicator LED, voice mail indicator LED and targeted Line or Line Key will go out.**

## Direct Pickup

With this feature, you can pick up the set line when it ringing.


### To configure Direct Pickup feature via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  key to select the Speed Dial in the type field.
3. Enter the value.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as Direct Pickup.

**To configure Direct Pickup feature via Web Interface**

1. Click Function keys → Line or Line Key.
2. Select the wanted Line or Line Key and set as Direct Pickup.
3. Enter the pickup code and followed the desired phone number in the Value field.
4. Select the Account ID
5. Click  to save the configuration.

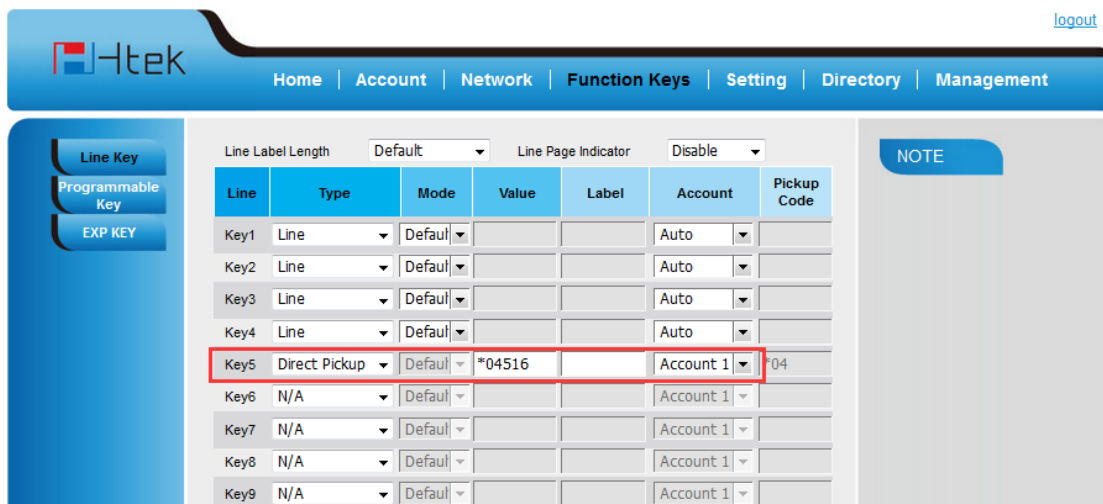

The screenshot shows the Htek web interface for configuring function keys. The navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. The 'Function Keys' section is active, showing a table of keys. Key5 is highlighted with a red box, indicating it is configured as a 'Direct Pickup' with a value of '\*04516' and assigned to 'Account 1'. A 'NOTE' box is visible on the right side of the interface.

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Direct Pickup	Default	*04516		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	


## Group Pickup

With this feature, you can pick up the specified group that you want incoming calls.


**To configure the Pickup via phone interface**


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Group Pickup in the type field.
4. Enter pickup code and followed the desired group number



5. Press  or Save soft key to save the configuration

### To configure the Group Pickup via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Group Pickup in the Type.
3. Enter the pickup code and followed the desired Group number in the Value field.
4. Click  to save the configuration.

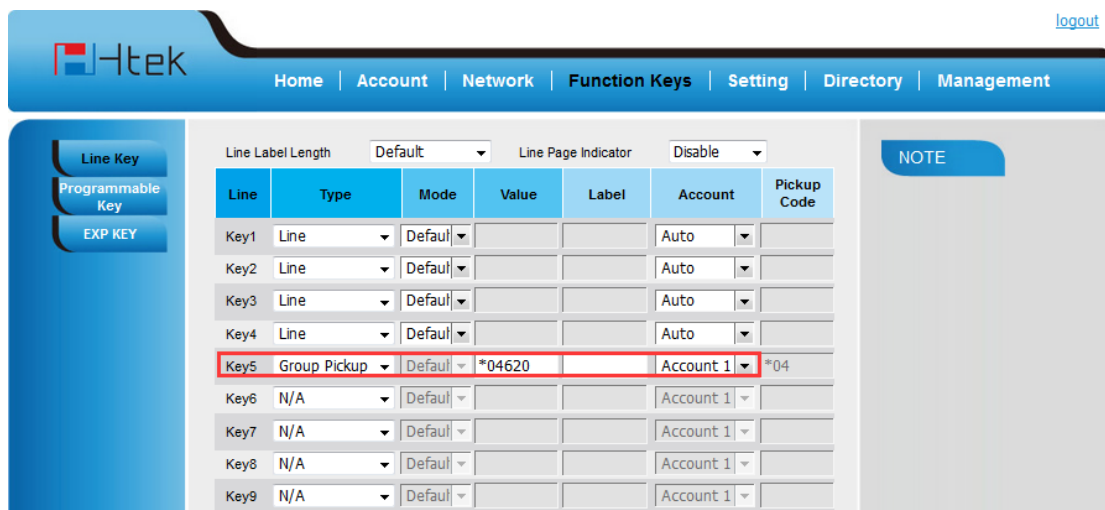



The screenshot shows the Htek web interface for configuring function keys. The navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. The 'Function Keys' section is active, showing a table of keys. Key5 is highlighted with a red box, indicating it is selected for configuration. The table columns are Line, Type, Mode, Value, Label, Account, and Pickup Code.


Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Group Pickup	Default	*04620		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

## Call Park


With this feature, you can put a call on hold and continue the conversation from another phone.


### To configure the Call Park via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Press  and  or press Switch soft key to select the Call Park.

- Press  or Save soft key to save the configuration

### To configure the Call Park via Web interface

- Click Function key → Line or Line Key.
- Select the desired Line or Line Key and select call park in the Type.
- Enter the call park code in the value field.
- Click the  button to save the configuration.

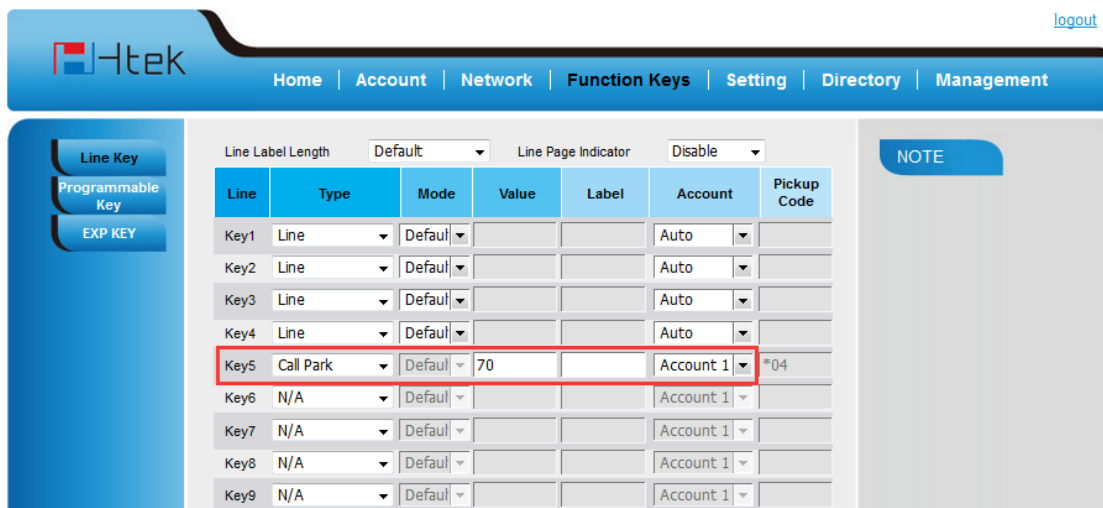



Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Call Park	Default	70		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	


For More information for Call Park, please see: [Call park note](http://www.htek.com) on <http://www.htek.com>

## Intercom

When use the intercom feature, you can quickly get access connect to the configured one.

 
### To configure intercom feature via phone interface


- Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
- Press  and  key to select the intercom in the type field.
- Enter the intercom codes followed by desired number.

- Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as intercom.

### To configure Intercom feature via Web Interface


- Click Function keys → Line or Line Key.
- Select the wanted Line or Line Key.
- Enter intercom codes followed by desired number in the Value field.
- Select the Account ID
- Click the  button to save the configuration.

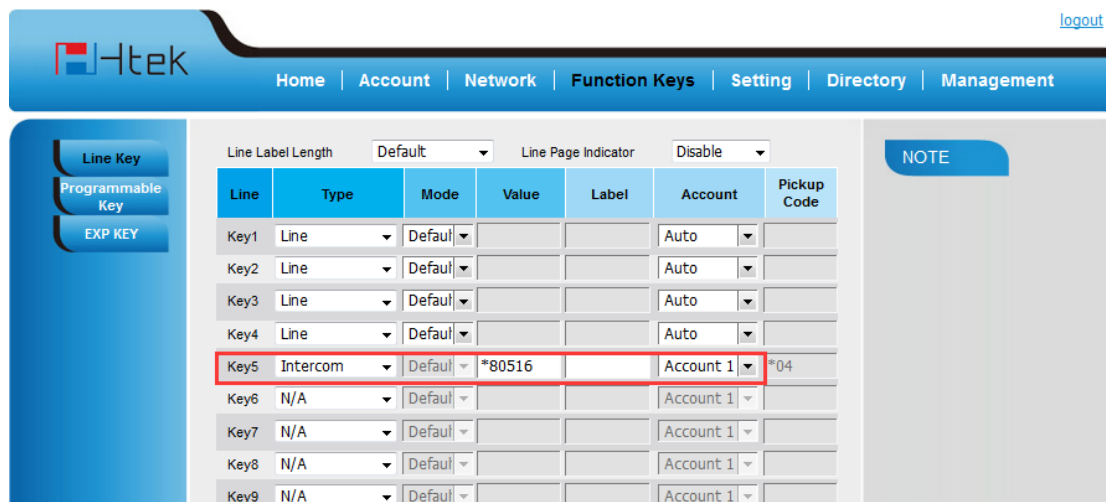

The screenshot shows the Htek web interface with the 'Function Keys' menu selected. On the left, there are buttons for 'Line Key', 'Programmable Key', and 'EXP KEY'. The main area displays a table of function keys. Key5 is highlighted with a red box. Above the table, there are dropdown menus for 'Line Label Length' (set to 'Default') and 'Line Page Indicator' (set to 'Disable').

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Intercom	Default	*80516		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

 If you want to achieve the intercom feature, you must enable the “Allow Auto Answer By Call-Info”

- Click the account
- Select the desired account from the pull-down list of Account in the Account field.
- Click the advanced
- Enable the “Allow Auto Answer By Call-Info”
- Click the  button to save the configuration.

Send Anonymous	<input checked="" type="radio"/> No	<input type="radio"/> Yes	<a href="#">?</a>
Anonymous Call Rejection	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Check SIP User ID	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Auto Answer	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Allow Auto Answer By Call-Info	<input type="radio"/> No	<input checked="" type="radio"/> Yes	

## Intercom Barge

If this option is enabled, when there is an active call and an incoming intercom call arrives, the previous call will be put on hold and the intercom call will be answered

1. Click the Setting → Preference
2. Set On or Off for Intercom Barge.
3. Click  for the setting.

Intercom Barge	<input type="radio"/> On	<input checked="" type="radio"/> Off	<a href="#">?</a>
----------------	--------------------------	--------------------------------------	-------------------

### Note :

**This feature is not available on all servers. For more information, contact your system administrator.**

## DTMF

When the key is configured as DTMF key, you are allowed to send out the desired DTMF number during the conversation.

To use this feature, you should sure that the DTMF Tone is on.

### To configure the DTMF via Web Interface

1. Click Setting → Preference
2. Select On for Keypad DTMF Tone.
3. Click  to save the configuration.

Keypad DTMF Tone  On  Off [?](#)

### To configure the DTMF via Phone Interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press and key to select the DTMF in the type field.
4. Enter the value with the Desired DTMF number
5. Press or Save soft key to save the configuration

### To configure the DTMF via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select DTMF in the Type.
3. Fill the value with the Desired DTMF number.
4. Click the to save the configuration.




Line Label Length: Default | Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	DTMF	Default	123456		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	


## Prefix

If the key is configured as Prefix key, you can set the number prefix (e.g. Before the number plus 9), then you don't input 9, press the key and 9 will display on the LCD interface.

### To configure the Prefix via Phone Interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys →  
Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Prefix in the type field.
4. Enter the value with number that you want to set as prefix
5. Press  or Save soft key to save the configuration

### To configure the Prefix via Web interface

1. Click Function key → Line or Line Key.
2. Select the desired Line or Line Key and select Prefix in the Type.
3. Fill the value.
4. Click  to save the configuration.

Then when you press this key, the set value is input directly.

[logout](#)

Home | Account | Network | **Function Keys** | Setting | Directory | Management

Line Key

Programmable Key

EXP KEY

Line Label Length: Default | Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Prefix	Default	9		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE

## Local Group

When use the Local Group feature, press the key and enter the local Contacts interface quickly.

### To configure the Local group via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press and key to select the Local group in the type field.
4. Press or Save soft key to save the configuration

### To configure the Local Group via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select Local group in the Type.
3. Click to save the configuration.

Then you can press the local group key to access the pre-defined contact group in the

local directory quickly.

Line Label Length: Default | Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Local Group	Default			Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

## XML Group

When use the XML Group feature, press the key and enter the Remote Contacts interface quickly.

### To configure the XML group via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press and key to select the XML group in the type field.
4. Press or Save soft key to save the configuration

### To configure the XML Group via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select XML group in the Type.
3. Click to save the configuration.



[logout](#)

Htek

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

**Line Key**  
 Programmable Key  
 EXP KEY

Line Label Length: Default    Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	XML Group	Default			Account 1	#04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE

## LDAP

When use the LDAP feature, you can get the LDAP Phonebook directly.

### To configure the LDAP via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press and key to select the LDAP in the type field.
4. Press or Save soft key to save the configuration

### To configure the LDAP via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select LDAP in the Type.
3. Click SaveSet to save the configuration.

[logout](#)

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

Line Label Length: Default | Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	LDAP	Default			Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE

## XML Browser

 
You can use this key feature to access the Xml browser quickly. The Xml browser allows you to create custom services which meet your functional requirements on the server. You can customize practical applications, such as weather report, stock information, Google search, etc.


### To configure the XML Browser via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press and key to select the XML Browser in the type field.
4. Filled the access URL for xml browser
5. Press or Save soft key to save the configuration

### To configure the XML Browser via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select xml browser in the Type.

3. Filled the access URL for xml browser (e.g.: `http://192.168.0.240:8080/xmlbrowser/text.xml`)
4. Click  button to save the configuration.

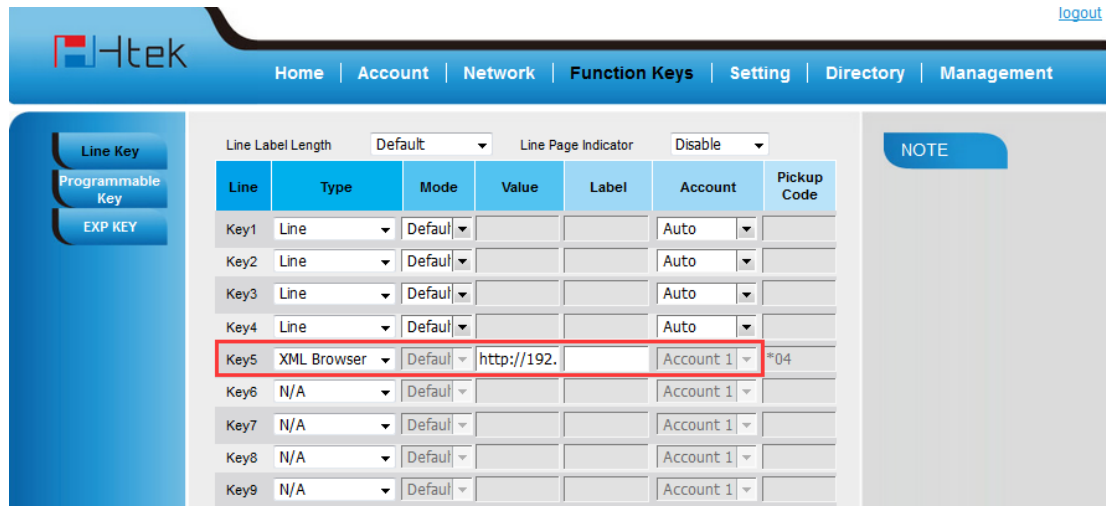




Line Label Length: Default | Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	XML Browser	Default	http://192.		Account 1	#04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

## Broadsoft Group


When use the BroadSoft Group feature, press the key and enter the Broadsoft Contacts interface quickly.

### To configure the Broadsoft group via Phone Interface


1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Broadsoft group in the type field.
4. Press  or Save soft key to save the configuration

### To configure the Broadsoft group via Web interface




1. Click Function key → Line Key.

2. Select the desired Key and select Broadsoft group in the Type.
3. Click the  button to save the configuration.

 
## Conference

The Htek IP Phone supports up to 5-way conference. You are allowed to configure the programmable key to be used as a conference key. This key works same as .

### To configure the Conference via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Conference in the type field.
4. Press  or Save soft key to save the configuration




### To configure Conference via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Conference in the Type.
3. Click the  button to save the configuration.


## Forward

If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward interface and you can set the Forward to number, then when there is any call to the number will be forwarded to the set number automatically.

### To configure the Forward via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Forward in the type field.
4. Enter the Number that to forward.
5. Press  or Save soft key to save the configuration



### To configure Forward via Web Interface


1. Click Function keys →Line Key.
2. Select the desired Key and select Forward in the Type.
3. Enter the Value with the number you want to forward
4. Click the  button to save the configuration.

## Transfer

 
You are able to configure the key as a transfer key to perform the Attended/Semi-Attended Transfer.

### To configure the Transfer via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Transfer in the type field.
4. Enter the Number that transfer to

5. Press  or Save soft key to save the configuration




### To configure Transfer via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Transfer in the Type.
3. Enter the Value with the number that wanted transfer to
4. Click the  button to save the configuration.


## Hold

The key can be configured as a hold key. You can use this key to hold and resume a call during the conversation.

### To configure the Hold via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Hold in the type field.
4. Press  or Save soft key to save the configuration




### To configure Hold via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Hold in the Type.
3. Click the  button to save the configuration.

 
## Group Listening

With this feature, when you active a call, you can listen using Handset and Free-speaker, but only can use the handset to speak.

### To configure the Group listening via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the group listening in the type field.
4. Press  or Save soft key to save the configuration

### To configure Group listening via Web Interface




1. Click Function keys →Line Key.
2. Select the desired Key and select Group listening in the Type.
3. Click  to save the configuration.

## DND

 
If the key is configured as DND key, you are allowed to active the DND function immediately when you press it and the phone is to reject all incoming calls automatically. Press it again to deactivate DND mode.

### To configure the DND via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.

3. Press  and  key to select the DND in the type field.
4. Press  or Save soft key to save the configuration

#### To configure DND via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select DND in the Type.
3. Click the  button to save the configuration.

#### To enable DND feature

Press the DND soft key when the phone is idle status, and then DND icon shown on the LCD.


#### To disable DND feature

Press the DND soft key again, then there is no DND icon on the LCD.

## Redial

If the key is configured as Redial key, you can redial the last placed call from the IP Phone.

#### To configure Redial via Web Interface

1. Click Function keys →Line key/Line Key
2. Select the desired Key and select redial in the Type.
3. Enter the Label displayed on LCD.
4. Click the  button to save the configuration.




## SMS

### Send SMS

To send SMS via web Interface

1. Click Setting→SMS
2. Select the account(from which account the SMS sent)
3. Enter the target number
4. Input the content of SMS, and click Send.

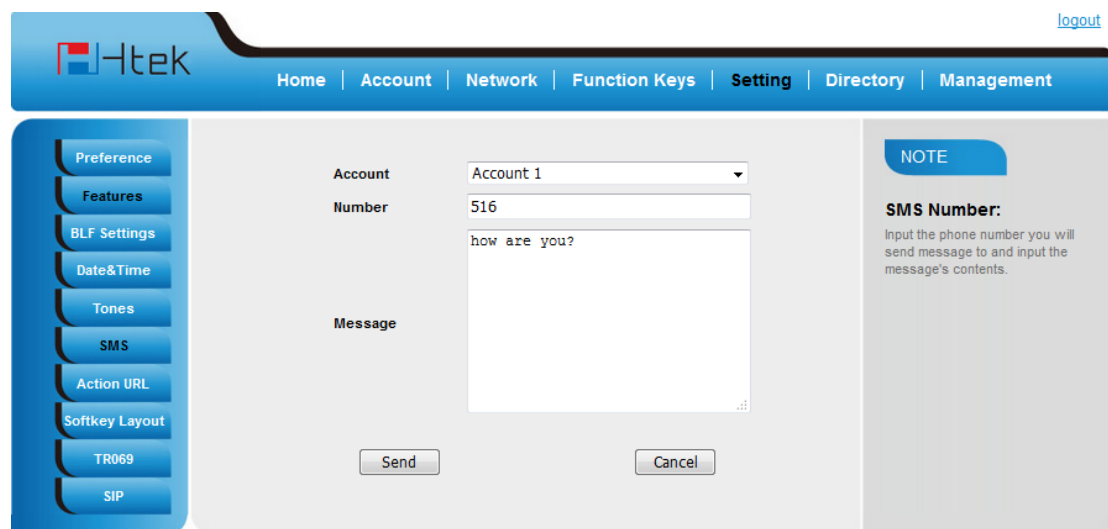




The screenshot shows the Htek web interface for sending SMS. The top navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. The left sidebar lists various settings: Preference, Features, BLF Settings, Date&Time, Tones, SMS, Action URL, Softkey Layout, TR069, and SIP. The main content area has a form with the following fields: Account (dropdown menu set to 'Account 1'), Number (input field with '516'), and Message (text area with 'how are you?'). Below the form are 'Send' and 'Cancel' buttons. A 'NOTE' box on the right states: 'SMS Number: Input the phone number you will send message to and input the message's contents.'

To send SMS via phone interface:


1. Click Menu→Message→Text Message→Set SMS
2. Enter the contents in the white field.
3. Press the save button
4. Select the account (from which account the SMS sent)
5. Enter the target number (to which account the number sent)
6. Press the Send button.

## Set SMS Line Key
 
### To configure the SMS via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the SMS in the type field.
4. Press  or Save soft key to save the configuration




### To configure SMS via Web Interface


1. Click Function keys →Line Key.
2. Select the desired Key and select SMS in the Type.
3. Click  to save the configuration.

## Record

With record feature, you can record calls by pressing a record key on the phone.

### To configure the record via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Record.
4. Press  or Save soft key to save the configuration

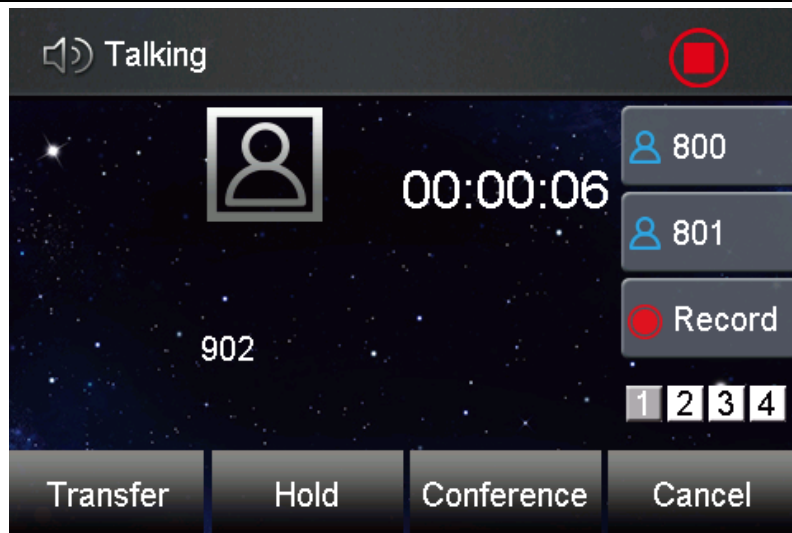

### To configure the record via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Record in the Type.
3. Click the  button to save the configuration.

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Record	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

#### Note:




Please contact the system administrator whether support this feature or not.

## URL Record

 
The phone sends HTTP URL request to trigger a recording. Contact your system

administrator for the predefined URL.

### To configure the URL record via phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the URL Record.
4. Press  or Save soft key to save the configuration




### To configure the record via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Line or Line Key and select URL Record in the Type.
3. Click the  button to save the configuration.


## Paging

 With this feature, you can call a paging group directly.

### To configure the paging via phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Paging.
4. Enter the paging code followed the number.
5. Press  or Save soft key to save the configuration

### To configure the Paging via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Paging in the Type.
3. Enter the paging code followed the number.
4. Click the  button to save the configuration.

## Shared Line

Htek IP Phone supports shared call appearance by Broadsoft and XCast standard. This feature allows members of the SCA group to shared SIP lines and provides status monitoring (idle, active, progressing, hold) of the shared line. When there is an incoming call designated for the SCA group, all of the members of the group will be notified of an incoming call and will be able to answer the call from the phone with the SCA extension registered.

All the users that belong to the same SCA group will be notified by visual indicator when a user seizes the line and places an outgoing call, and all the users of this group will not be able to seize the line until the line goes back to an idle state or when the call is placed on hold (with the exception of when multiple call appearances are enabled on the server side).

 




In the middle of the conversation, there are two types of hold: Public Hold and Private Hold. When a member of the group places the call on public hold, the other users of the SCA group will be notified of this by the red-flashing button and they will be able to resume the call from their phone by pressing the line button. However, if this call is placed on private-hold, no other member of the SCA group will be able to resume that call.

To enable shared call appearance, the user would need to register the shared line account on the phone. In addition, they would need to navigate to “Account” ->“Advanced” on the webpage and set the line to “Shared Line” and “SIP Server Type”, and configure the line key or Line Key as “line” type with the desired account on webpage or LCD. If the user requires more shared call appearances, the user can configure multiple line keys (Function keys->Line key) to be “line” type associated with the account.


This feature is very useful in the boss and secretary scenario. For example, the secretary can share the boss' extension number on her phone. When there is an incoming call to the extension number of the boss, both the phones of the boss and the secretary will ring

simultaneously. Either the boss or the secretary can answer the call. Calls on shared line can be placed on hold or barged in.

### To configure the line key as line via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Line in the type field.
4. Press  and  key to select the Account ID.
5. Enter the Label
6. Enter the Value
7. Press  or Save soft key to save the configuration

### To configure the line key as line via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Line in the Type.
3. Enter the Value.
4. Enter the Label.
5. Select the Account ID
6. Click the  button to save the configuration and then restart.

#### Note :

**This feature is not available on all servers. For more information, contact your system administrator.**

## Public Hold

The key can be configured as a public hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold or resume a call.

### To configure the Public hold via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press and key to select the Public Hold.
4. Press or Save soft key to save the configuration

### To configure public hold via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select public hold in the Type.
3. Click the button to save the configuration.




The screenshot shows the Htek web interface for configuring function keys. The navigation bar includes Home, Account, Network, **Function Keys**, Setting, Directory, and Management. A sidebar on the left has buttons for Line Key, Programmable Key, and EXP KEY. The main content area shows a table for configuring function keys. The 'Key5' row is highlighted with a red box, showing 'Public Hold' selected in the 'Type' column and 'Account 1' in the 'Account' column. Above the table, there are dropdown menus for 'Line Label Length' (Default) and 'Line Page Indicator' (Disable). A 'NOTE' box is visible on the right side.

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Public Hold	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	


## Private Hold


The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can resume the call.

### To configure the Private hold via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Private Hold.
4. Press  or Save soft key to save the configuration

### To configure private hold via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Private hold in the Type.
3. Click the  button to save the configuration.

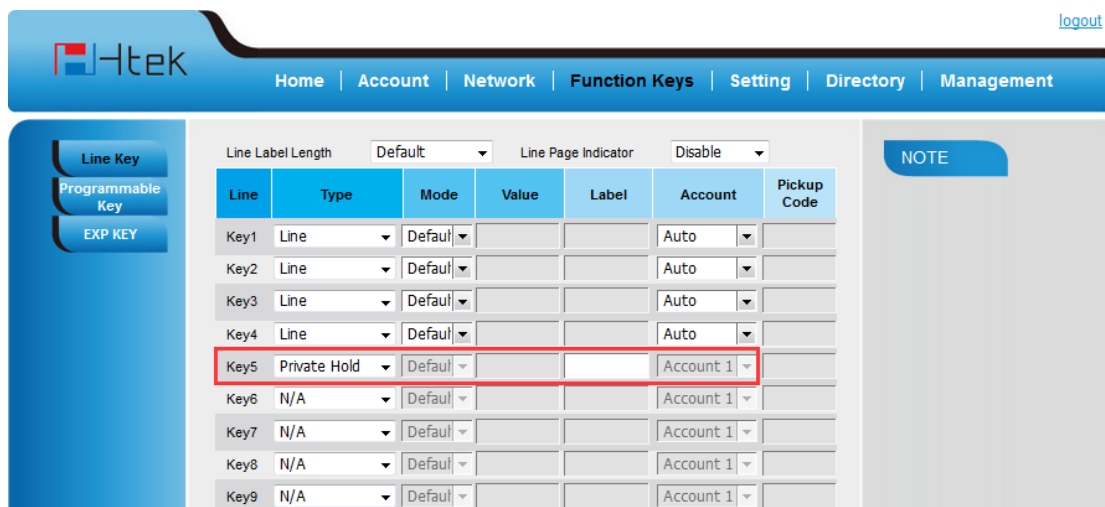

The screenshot shows the Htek web interface for configuring function keys. The navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. The 'Function Keys' section is active, showing a table of keys. Key5 is highlighted with a red box, indicating it is configured as a 'Private Hold' key. The 'Account' column for Key5 is set to 'Account 1'.




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Private Hold	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	




## Share line

 Shared line is configured by assigning the same extension number to multiple lines. You can use the shared line feature to share an extension number which is used on two or more IP phones at the same time. An incoming call to that number will cause all phones to ring simultaneously. The incoming call can be answered on one of the phones but not all of them. This feature is very useful in the boss and secretary scenario. For example, the secretary can share the boss' extension number on her phone. When there is an incoming call to the extension number of the boss, both the phones of the boss and the secretary will ring simultaneously. Either the boss or the secretary can answer the call. Calls on shared line can be placed on hold or barged in.

### To configure the share line via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the share line.
4. Enter the number in the value field.
5. Select the desired account in the Account field.
6. Press  or Save soft key to save the configuration

### To configure the share line feature via web interface :

1. Click Function keys →Line Key.
2. Select the desired Key and select share line in the Type.
3. Enter the number in the value field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.

**Note :**

**This feature is not available on all servers. For more information, contact your system administrator.**




## Hot Desking

Hot Desking originates from the definition of being the temporary physical occupant of a work station or surface by a particular employee. A primary motivation for Hot Desking is cost reduction. This feature is regularly used in places where not all the employees are in the office at the same time, or not in the office for very long at all, which means actual personal offices would be often vacant, consuming valuable space and resources.

You can use Hot Desking on the IP phone to logout the existing accounts and then log in a new account, that is, many users can share the phone resource in different time. To use this feature, you need to configure a Hot Desking key in advance.

This feature is supported on the version 1.0.3.82 or later

### To configure the hot desking via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the hot desking.
4. Enter the display name in the value field.
5. Press  or Save soft key to save the configuration


### To configure the hot desking via web interface:

1. Click Function keys →Line Key.
2. Select the desired Key and select hot desking in the Type.
3. Enter the number in the value field.
4. Select the desired account from the pull-down list of Account field.

5. Click the  button to save the configuration.

**To use the Hot desking feature on the user interface:**

1. Press the Hot desking key when the IP Phone is idle.
2. Enter the Extension number and password

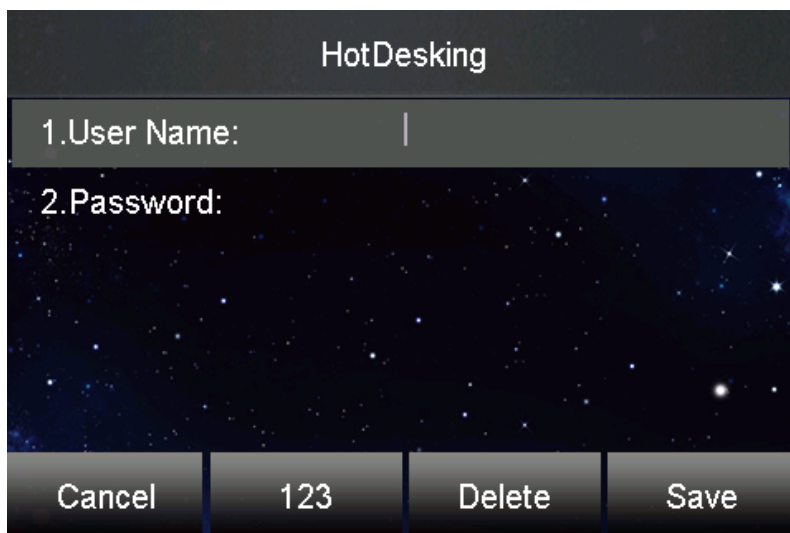

3. Click Save softkey

You can see the account information which has changed.

**Note :**




**This feature is not available on all servers. For more information, contact your system administrator.**

## ACD


ACD feature is often used in offices for customer service, such as call center. The ACD system handles large volumes of incoming calls from callers who have no need to talk to a specific person but who require assistance from any of multiple persons at the earliest opportunity. The ACD feature on the Htek IP Phone allows the ACD system to distribute calls from large volumes of incoming calls to the registered IP phone users. To use this feature, you should configure an ACD key in advance.

**To configure the ACD via phone interface**

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)

2. Select the wanted Line or Line Key.
3. Press  and  key to select the ACD.
4. Enter the label in the label field.
5. Select the desired account in the Account field.
6. Press  or Save soft key to save the configuration

**To configure the ACD via web interface:**

1. Click Function keys →Line Key.
2. Select the desired Key and select ACD in the Type.
3. Enter the label in the label field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.

**Note :**




**This feature is not available on all servers. For more information, contact your system administrator.**

## Zero Touch


You can use this key feature to configure auto provision and network parameters quickly. This feature is supported on the version 1.0.3.82 or later

**To configure the zero touch via phone interface**

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.

3. Press  and  key to select the zero touch
4. Press  or Save soft key to save the configuration

**To configure the zero touch via web interface:**

1. Click Function keys →Line Key.
2. Select the desired Key and select zero touch in the Type.
3. Click the  button to save the configuration.

**To use the zero touch feature on the user interface:**

1. Press the zero touch key when the IP Phone is idle.
2. The IP Phone will enter the WAN Port interface, you can change the WAN Type by pressing the Navigation keys.
3. Press the Next softkey to enter Network interface, then you can configure some information.
4. Press the Next softkey again, you can configure auto provision information.
5. When you finish the setting, you can press the OK to accept the changes.

**Note :**




**This feature is not available on all servers. For more information, contact your system administrator.**

## Multicast Paging


You can use multicast paging to quickly and easily forward out time sensitive announcements to people within the multicast group. You can configure a multicast paging key or a paging list key on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

## Sending RTP Stream

### To configure a multicast paging key via phone interface

1. Press Menu→Feature →line or Line Key→Line Key1 ( e.g. )
2. Press  and  or switch key to select the multicast paging in the type field.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.
4. The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
5. Press  or Save soft key to save the configuration

### To configure a multicast paging key via web interface

1. Function keys->line key :
2. Select the desired Key and select multicast paging in the Type.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.  
The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
4. Click the  button to save the configuration.

### Sending RTP Stream :

Press the multicast paging key when the phone is idle.

The phone sends RTP to a preconfigured multicast address (IP: Port). Any phone in the local network then listens to the RTP on the preconfigured multicast address (IP:Port). For both sending and receiving of the multicast RTP, there is no SIP signaling involved. The multicast paging key LED illuminates solid green.

## Receiving RTP Stream

You can configure the phone to receive a Real Time Transport Protocol (RTP) stream from

the pre-configured multicast address(es) without involving SIP signaling. You can specify up to 10 multicast addresses that the phone listens to on the network.

How the phone handles incoming multicast paging calls depends on Paging Barge and Paging Priority Active parameters configured via web user interface.

### **Paging Barge**

The paging barge parameter defines the priority of the voice call in progress. If the priority of an incoming multicast paging call is lower than that of the active call, it will be ignored automatically. If Disabled is selected from the pull-down list of Paging Barge, the voice call in progress will take precedence over all incoming multicast paging calls.

Valid values in the Paging Barge field:

- 1 to 10: Define the priority of the active call, 1 with the highest priority, 10 with the lowest.
- Disabled: The voice call in progress will take precedence over all incoming paging calls.

 
### **Paging Priority Active**

The paging priority active parameter decides how the phone handles incoming multicast paging calls when there is already a multicast paging call on the phone. If enabled, the phone will ignore incoming multicast paging calls with lower priorities, otherwise, the phone will answer incoming multicast paging calls automatically and place the previous multicast paging call on hold. If disabled, the phone will automatically ignore all incoming multicast paging calls.

### **Multicast Codec :**

You can only configure the codec by web interface.

#### **To configure multicast codec key via web interface**

1. Click Directory ->Multicast Paging :
2. Select the desired codec from the pull-down list of Multicast Codec
3. Click the  button to save the configuration.

#### **To configure multicast listening addresses via web interface:**

1. Click Directory->Multicast paging.
2. Select the desired value from the pull-down list of Paging Barge.
3. Select the desired value from the pull-down list of Paging Priority Active.
4. Enter the multicast IP address(es) and port number (e.g., 224.5.6.20:2000) which the phone listens to for incoming RTP multicast in the Listening Address field.
5. Enter the label in the Label field.

- Click  button to save the configuration.

[logout](#)

Home | Account | Network | Function Keys | Setting | Directory | Management

Directory  
Remote Phone Book  
Call History  
LDAP  
Network Directory  
MultiCast  
Paging

Paging Barge: 10  
Paging Priority Active: Enable  
Multicast Codec: PCMU

Index	Listening Address	Label	Multi Priority
IP Address 1	224.5.6.20:2000	2000	1
IP Address 2			2
IP Address 3			3
IP Address 4			4
IP Address 5			5
IP Address 6			6
IP Address 7			7
IP Address 8			8
IP Address 9			9
IP Address 10			10

NOTE

**Note:**

The priorities of listening addresses are predefined: 1 with the highest priority, 10 with the lowest. Both the multicast paging sender and receiver's phones play a warning tone when establishing a multicast paging call. Multicast listening addresses are configurable via web interface only.

## BT Feature

Htek IP Phone Model UC924EE supports the Bluetooth feature.

The Model UC924EE connects to a wide range of Bluetooth Headset, compatible with Bluetooth specification V4.0 and backwards compatible with 1.1, 1.2, 2.0 and 3.0.


### How to Enable headset mode?

#### To configure the headset mode via phone interface:

- Find Menu then navigate as follows :

Menu->Settings->Basic Setting->Headset:




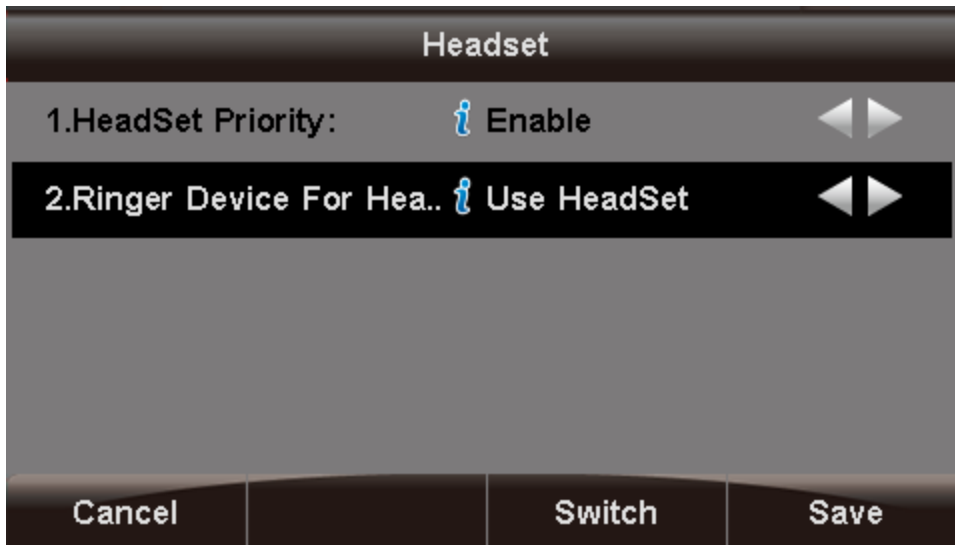

2. Enable the Headset priority
3. Choose the “User HeadSet” or “Both” from “ringer Device for headset” option
4. Press the save button to save the configuration.

### To configure the headset mode via web interface:

1. Login the phone’s webpage (**Username:** admin, **Password:** admin)
2. Setting->Preference:

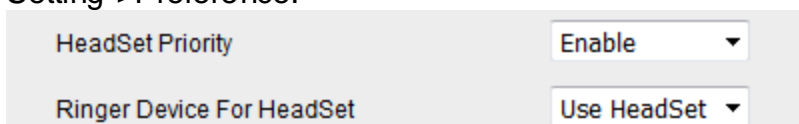

3. Click the “Saveset” button to save the configuration


### To enable the headset mode:

1. Press the headset key on phone’s during the idle status when you accomplish the above-mentioned configuration.
2. Headset icon will display on phone status bar.

## How to Activate Bluetooth?

### To activate Bluetooth via phone interface:

1. Find Menu then navigate as follows:  
Menu->Settings->Basic Setting->Bluetooth:

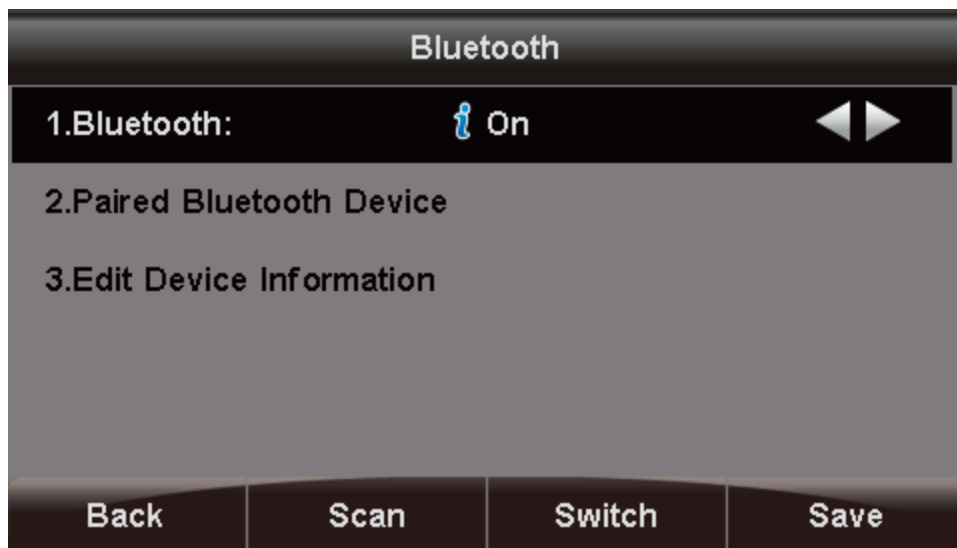

2. Press the save button to save the configuration
3. You will see the Bluetooth icon on phone's homepage status bar during the idle status. (this icon means that phone has no pair the Bluetooth device)

### To activate Bluetooth feature via web interface:

1. Login the phone's webpage->Setting->Feature->Bluetooth
2. Choose the "On"
3. Click the "Saveset" button to save the configuration

## How to Pair the Bluetooth Headset to the Phone?


### Open the Bluetooth pairing mode on Bluetooth headset:

- 1) Turn on the Bluetooth headset.


- 2) Long press the multifunction key on the Bluetooth headset until the indicator LED alternately flashes red and blue.  
The Bluetooth headset is in pairing mode.

### How to scan the Bluetooth headset device on phone interface:


1. Press the Scan button on phone interface:

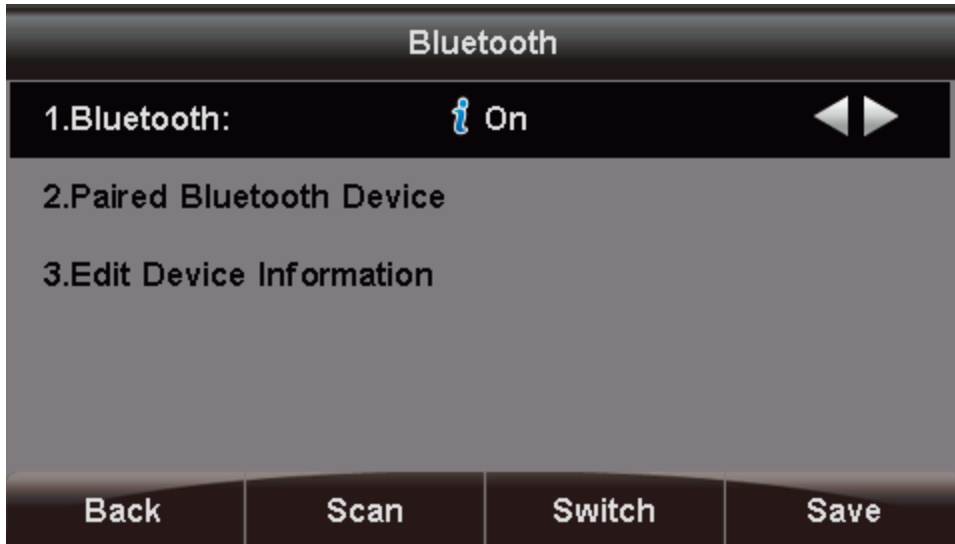



2. The phone will enter the scan interface  
The phone starts searching for Bluetooth headsets within the working range of 10 meters (32 feet).

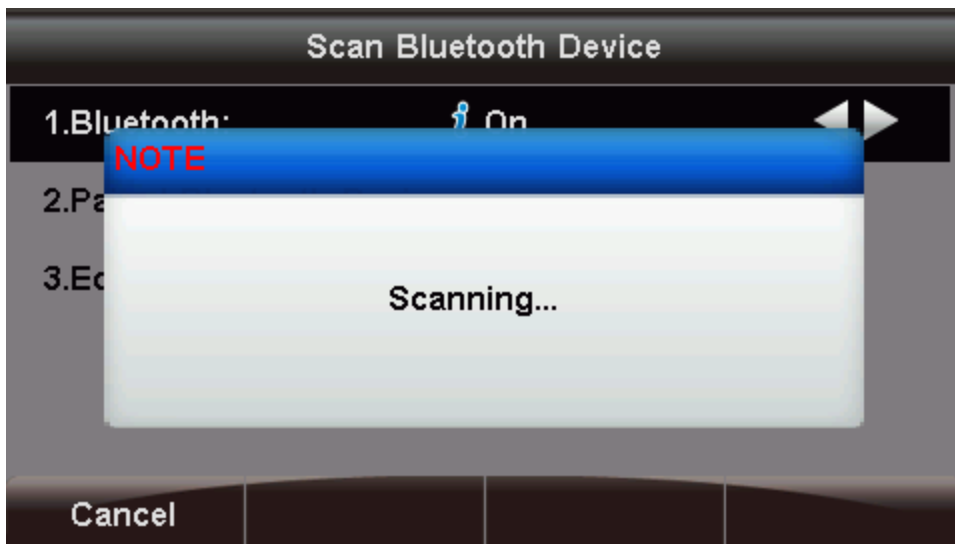



3. There will displays all detected Bluetooth headsets on the phone:

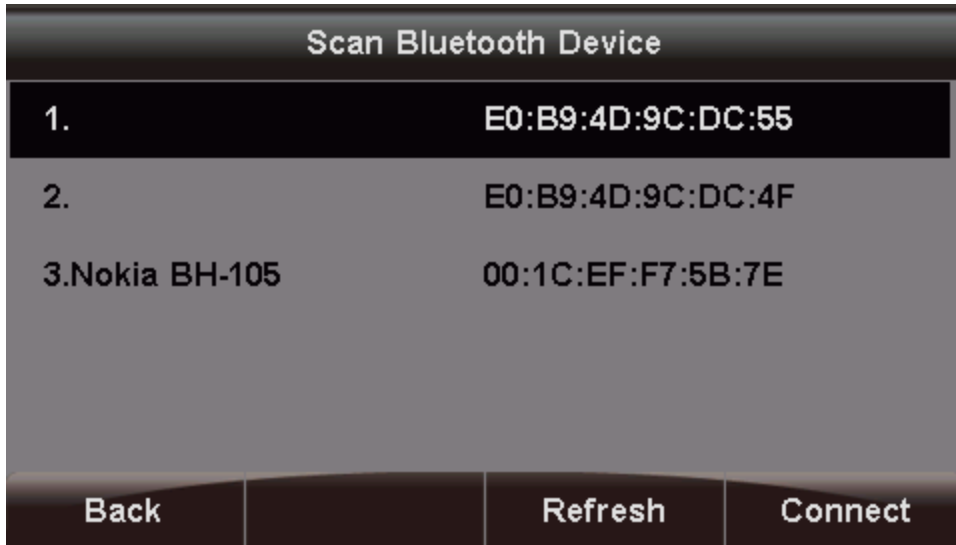




4. Choose the desired Bluetooth Device from the list and connect to it:

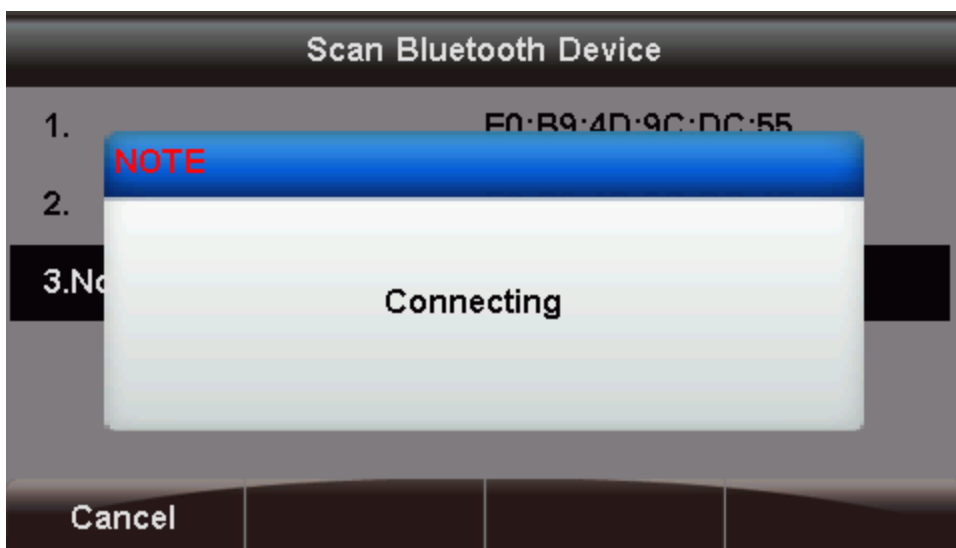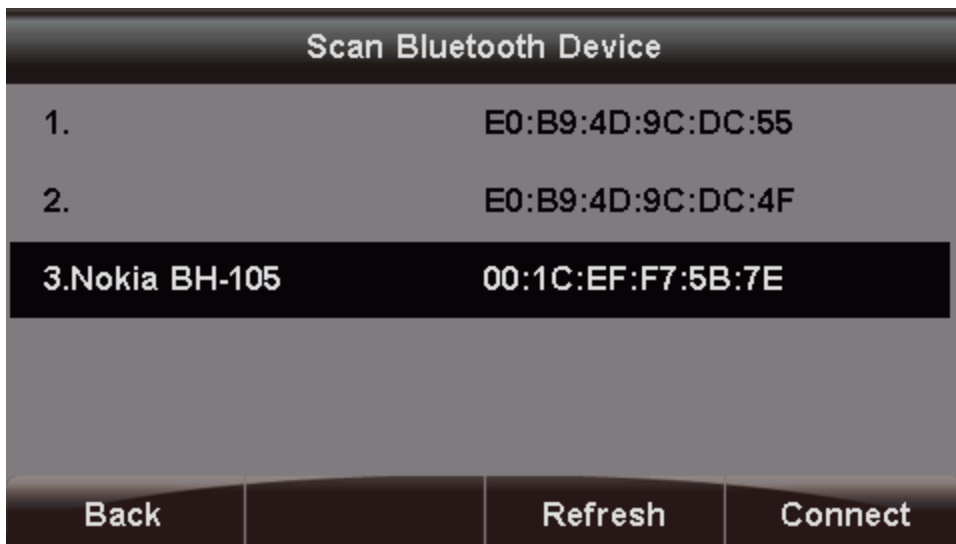

5. If the Bluetooth Device connected/paired successfully, you will see the “Connect Success!” and connected successfully icon;

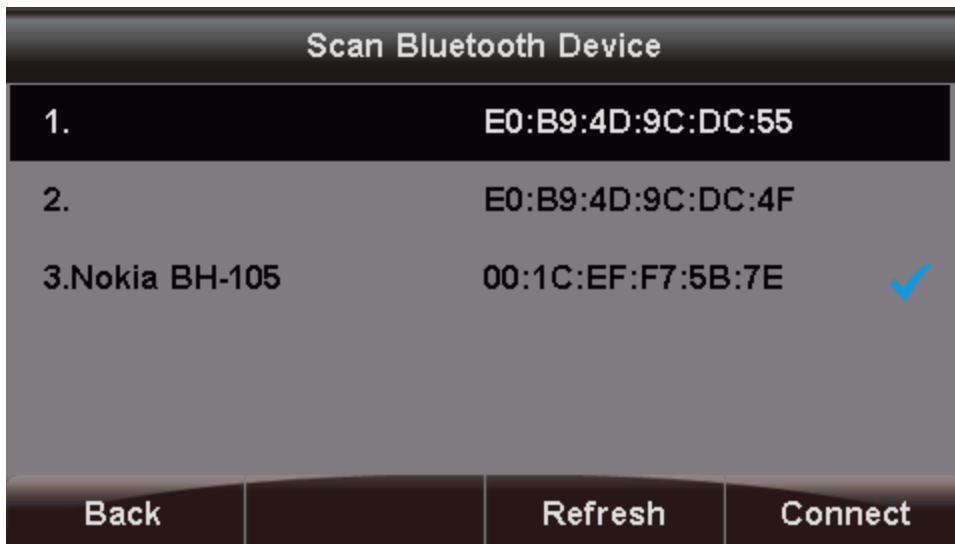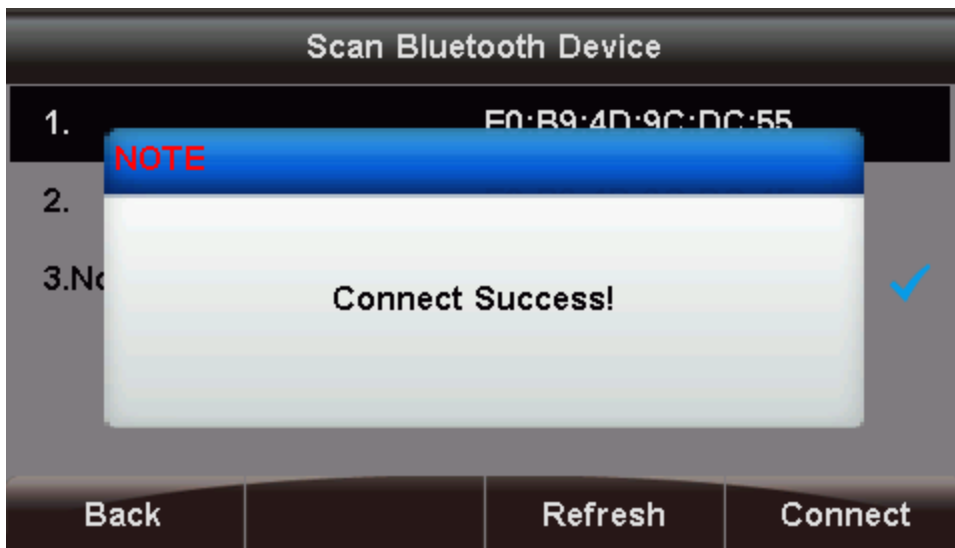

If you want to disconnect with this Bluetooth device, you can press the “enter” button, then press the “Disconnect” button.

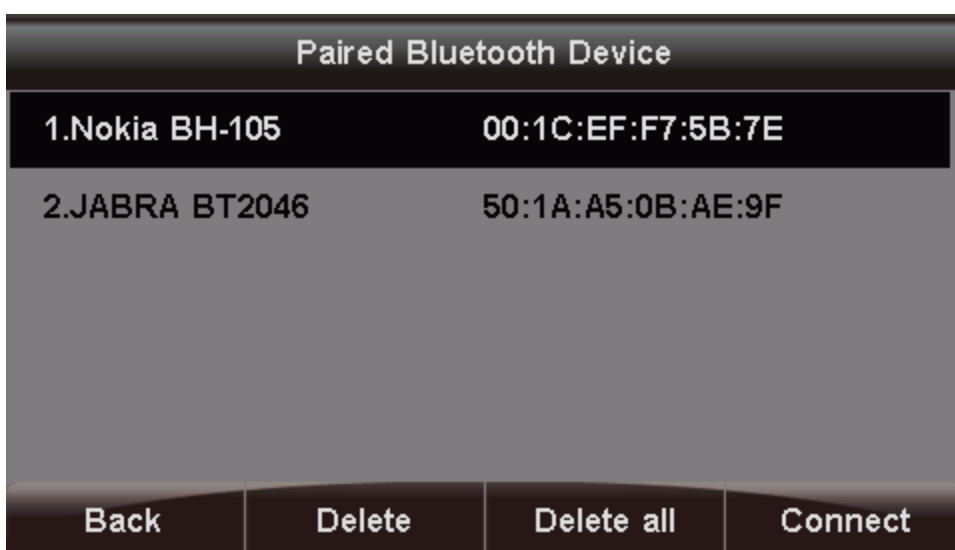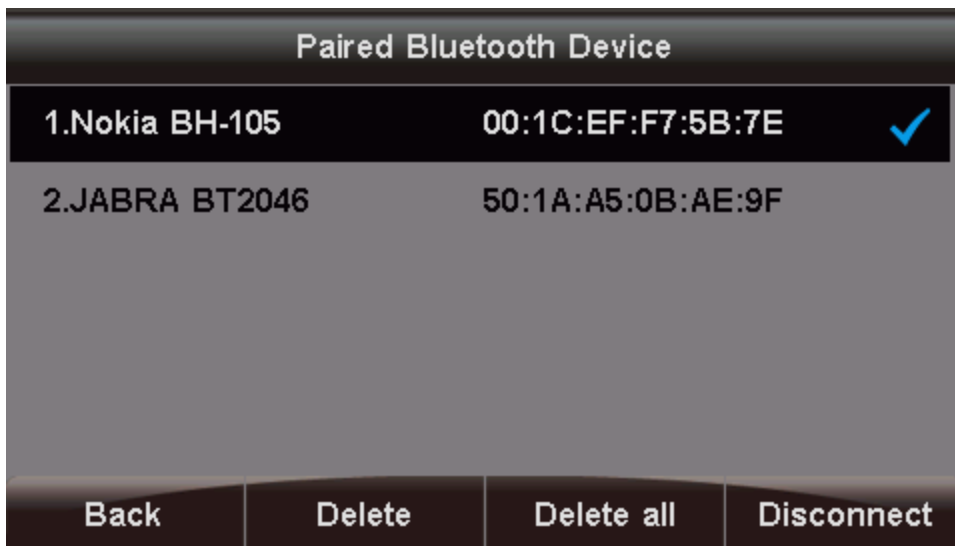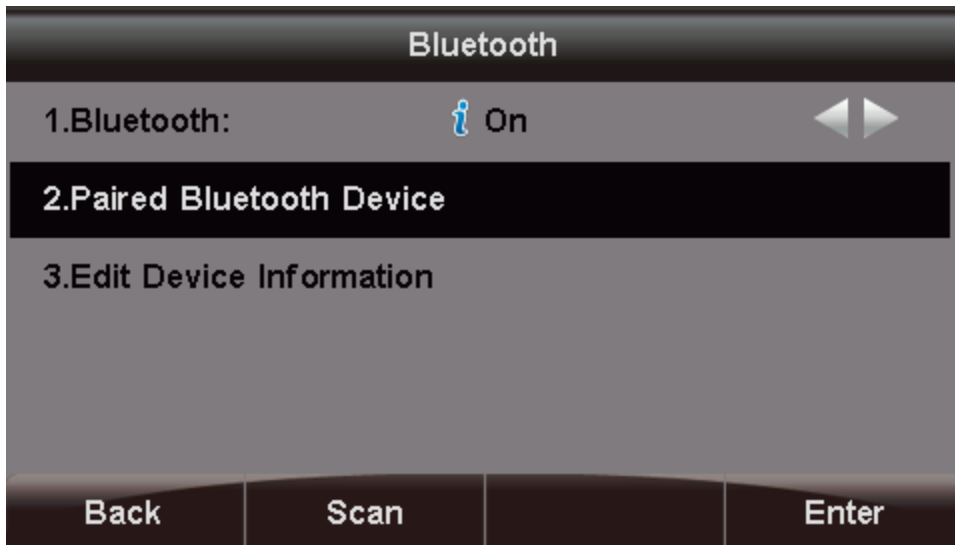


If you want to delete the Bluetooth device, please press the "Delete" or "Delete all" button, then Bluetooth device will be deleted.

6. When you back to idle interface, you will see the connected successfully icon:


## How to edit device information?

### How to edit device information on phone interface:

- 1) Find Menu then navigate as follows:  
Menu->Settings->Basic Setting->Bluetooth: Edit Device Information.

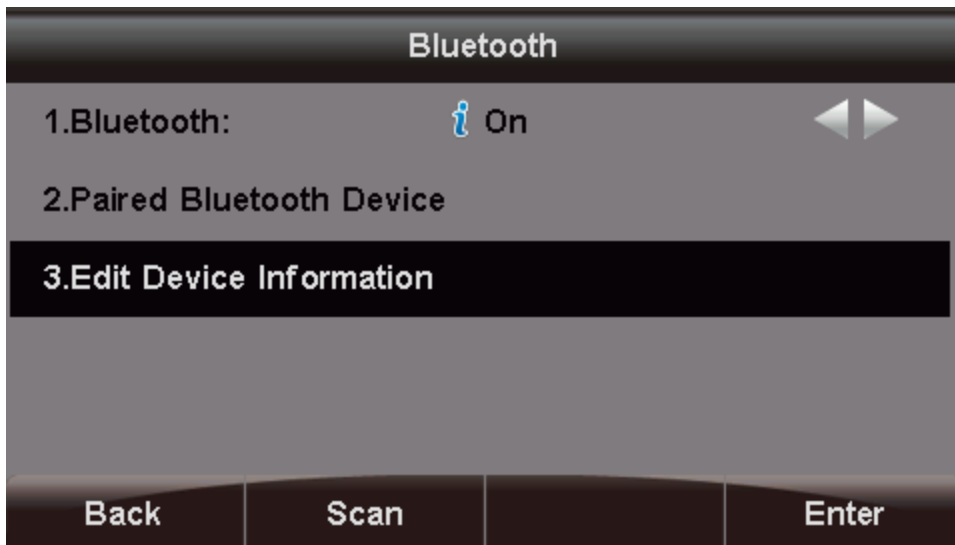

- 2) Press the enter button, you can edit the Device Name:

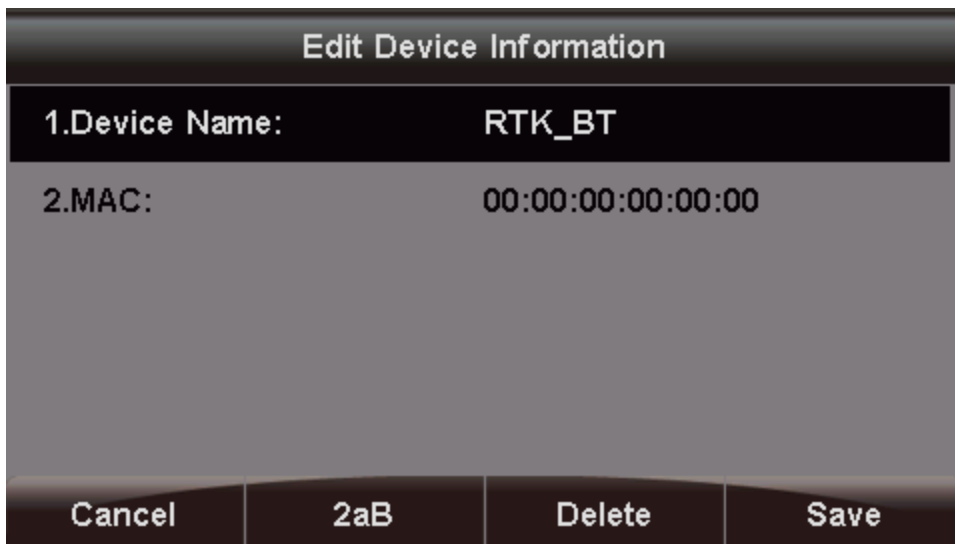

**Note:**

If the Bluetooth headset has a PIN, you need to configure the PIN via web interface:  
Default PIN is 0000.

1. Login the phone's webpage->Setting->Feature



2. Click the "Save" button to save the configuration

## Answering Calls

### How to answer an incoming call?

With the Bluetooth headset paired, press the multifunction key on the Bluetooth headset to answer an incoming call.

## How to Adjusting the Earphone Volume

### How to adjust the earphone volume during a call?

With the Bluetooth headset paired, you can do the following:

- Press the Volume key (+) on the Bluetooth headset to increase the volume.  
Press the Volume key (-) on the Bluetooth headset to decrease the volume.
- Press the Volume key (+) on the phone to increase the volume.  
Press the Volume key (-) on the phone to decrease the volume.

## How to Ending Calls

### To end a call:

With the Bluetooth headset paired, press the multifunction key on the Bluetooth headset to end a call.

## Troubleshooting



**Why can't the phone detect the Bluetooth headset?**

- Ensure the Bluetooth headset is turned on.
- Ensure the Bluetooth headset is in pairing mode, when the phone is searching for Bluetooth headsets.

**Why there is a noise?**

- Check the battery level. If the battery level is low, charge the Bluetooth headset.
- Ensure the Bluetooth headset and the phone are within the working range of 10 meters (32 feet) and there is no obvious interference (walls, doors, etc.) between them.

**Why the Bluetooth headset can not be off-hook?**

- Bluetooth headset industry rules is not possible to achieve off-hook, but the Bluetooth headset can be achieved to answer the phone, double-click the answer key to call back, hang up the phone and other operations


## WIFI Feature

Our new model UC924EE supports the Wi-Fi feature which allows users to experience the flexible deployment.


### How to Connect the UC924EE To an Available Wireless Network?

**Enabling Wi-Fi feature via phone interface:**

5. Find Menu then navigate as follows  
Menu->Settings->Basic Setting->Wi-Fi:

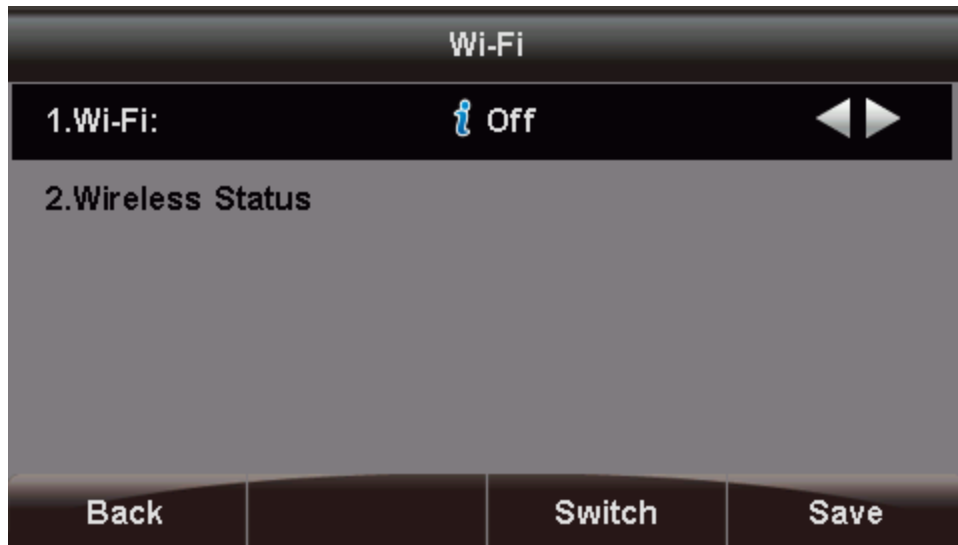


6. Press the Switch button to turn on Wi-Fi feature.
7. Press the Save button to save the configuration.

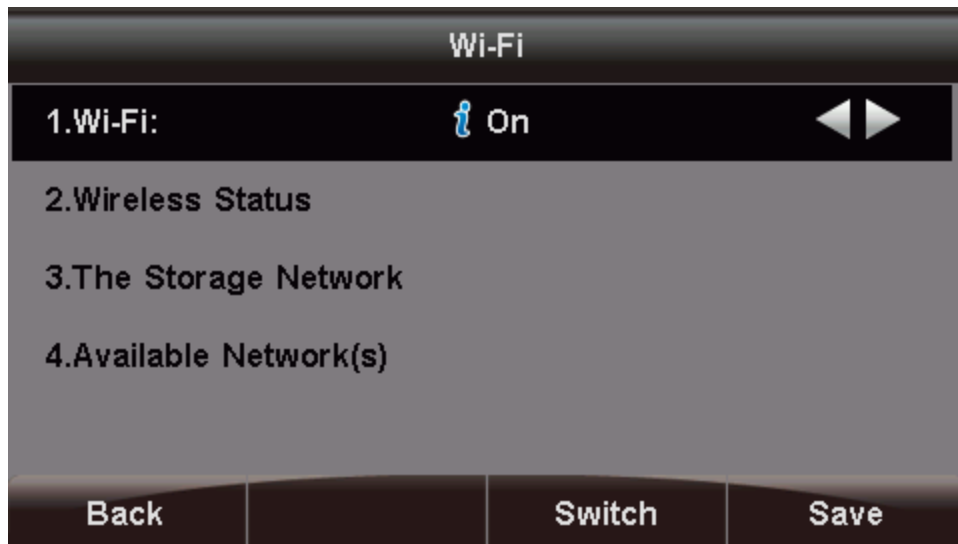


## How to Connect the UC924EE To an Available Wireless Network?

**Connect to an available wireless network via phone interface:**


1. Find Menu then navigate as follows  
Menu->Settings->Basic Setting->Wi-Fi: Available Network(s)

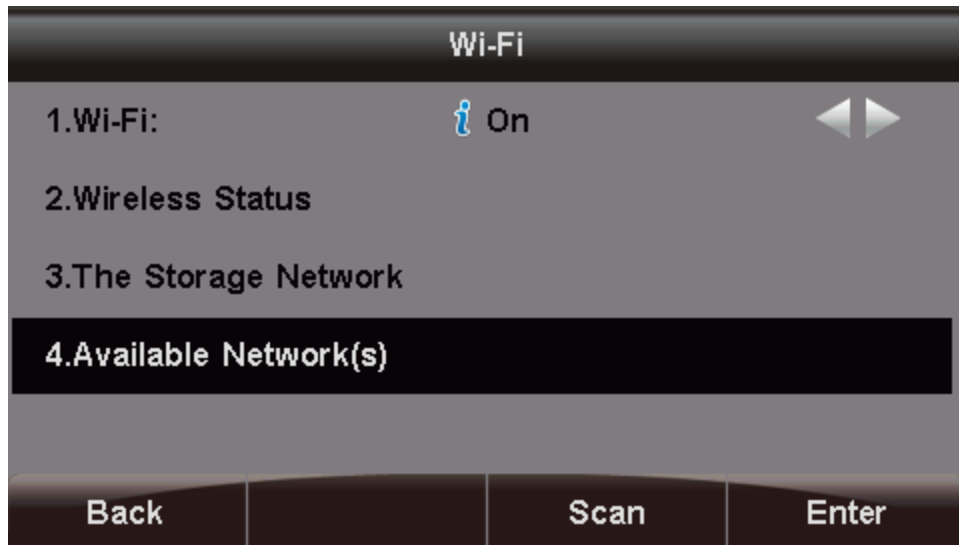


2. Press the Enter button, you will see many available wireless networks:

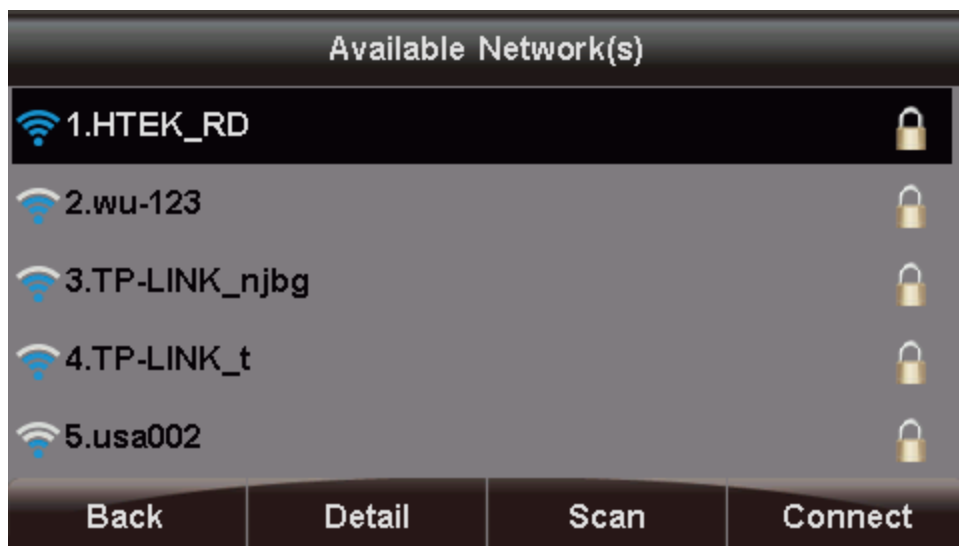


3. You can press the “scan” button to scan the wireless network
4. You can press the “Detail” button to view a wireless network’s detail information.
5. Choose desired wireless network and then press the “Connect” button:

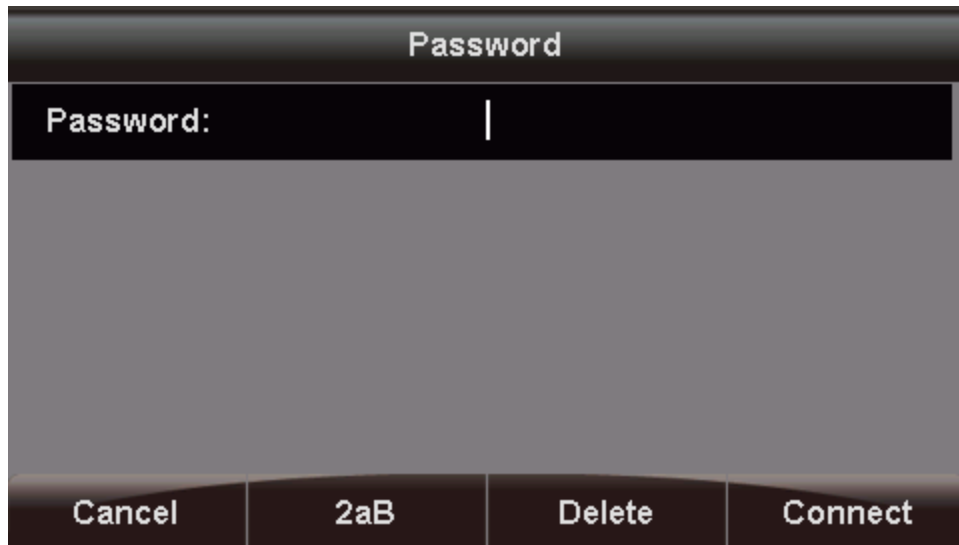

6. You must enter the wireless network's password:

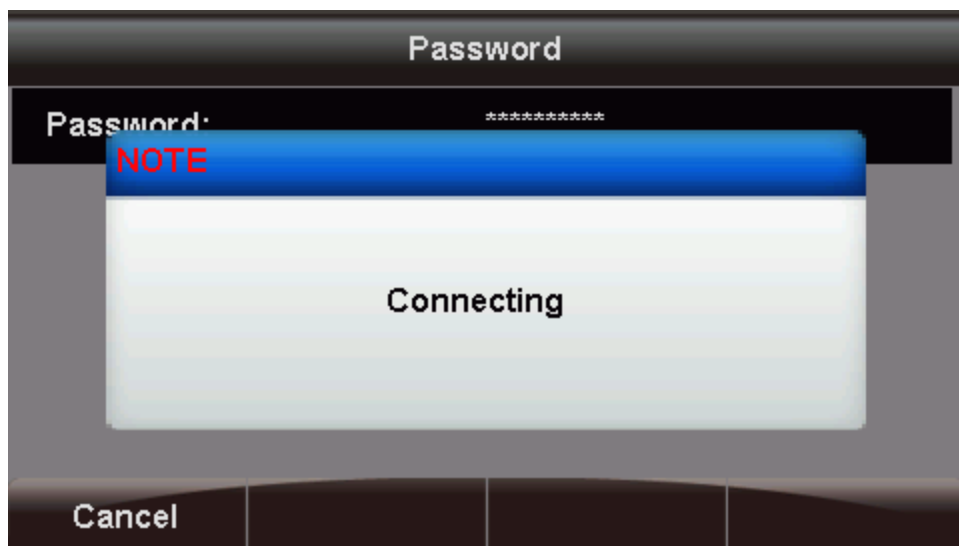


7. If the wireless network's password is correct, the wireless network will connect successfully:

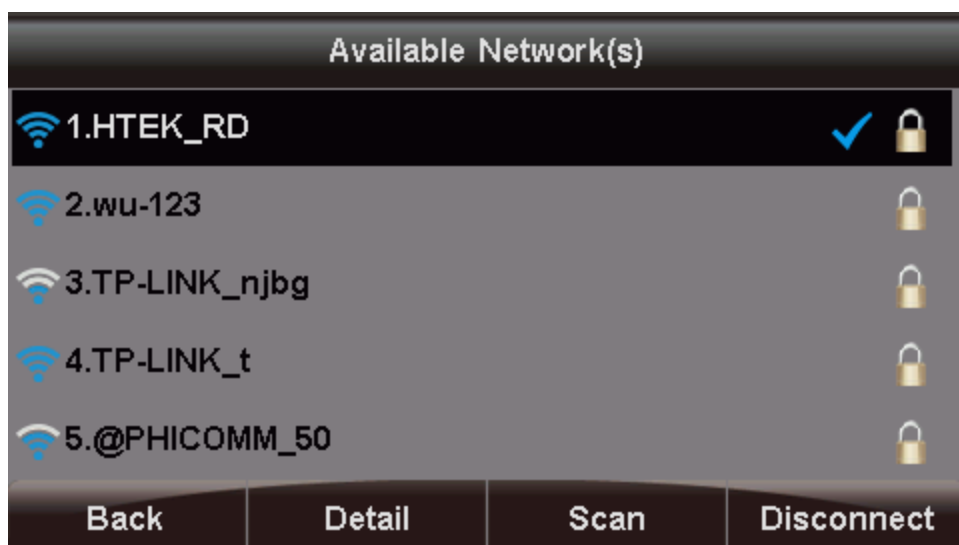

## How to view Wireless Network status?

1. You will see the wireless network connected successfully icon when phone connects wireless network successfully and back to idle interface:
2. You can see the wireless network' detail information as follow:  
Menu->Status->Information:

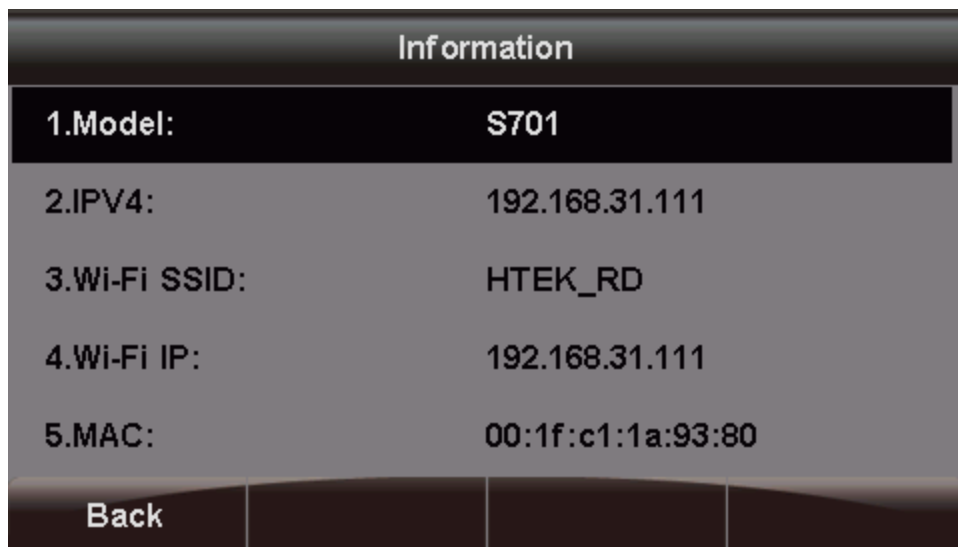





Information	
1.Model:	S701
2.IPV4:	192.168.31.111
3.Wi-Fi SSID:	HTEK_RD
4.Wi-Fi IP:	192.168.31.111
5.MAC:	00:1f:c1:1a:93:80

Back

Or as follow:

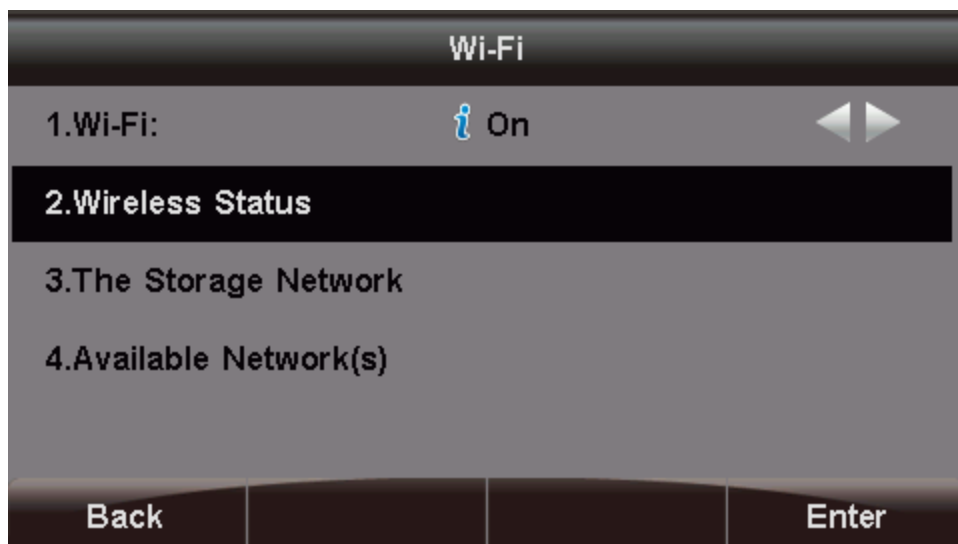Menu->Settings->Basic Setting->Wi-Fi: wireless status:



Wi-Fi	
1.Wi-Fi:	 On  
<b>2.Wireless Status</b>	
3.The Storage Network	
4.Available Network(s)	


Back Enter




## How to Disconnect Wireless Network?

Disconnect wireless network via phone interface:

1. Find Menu then navigate as follows  
Menu->Settings->Basic Setting->Wi-Fi: The Storage Network:

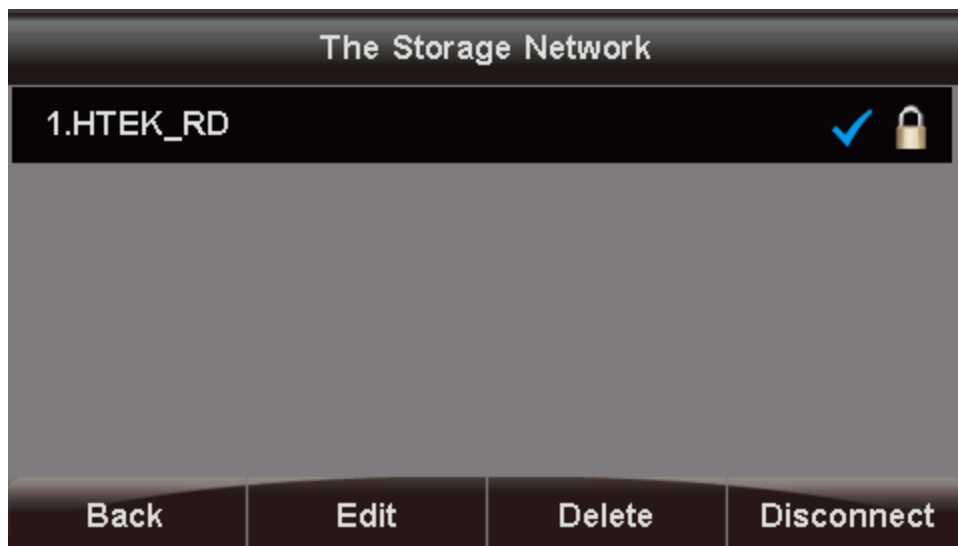


2. Press the "Disconnect" button to disconnect this wireless network:

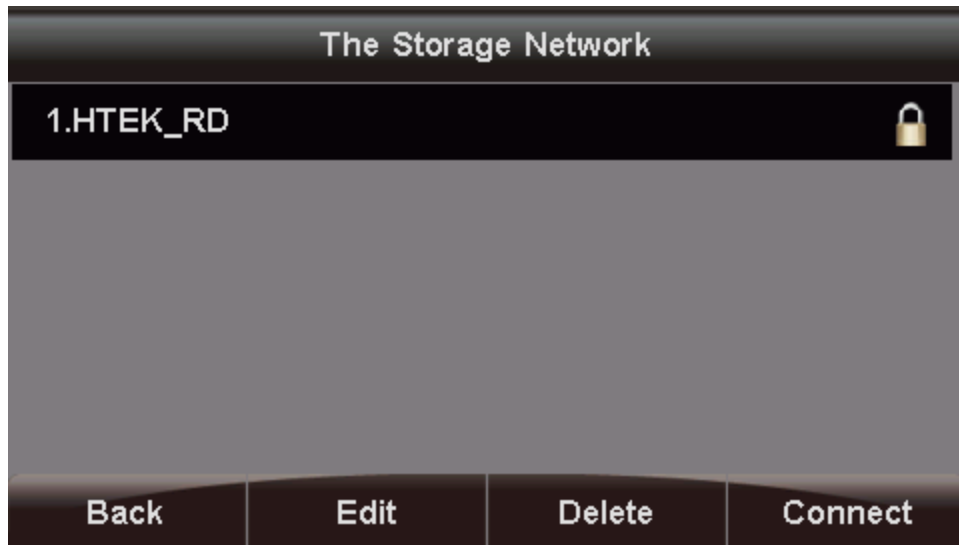


## How to Manually add a Wireless Network?

### Add a Wireless Network Manually via phone interface?

1. Find Menu then navigate as follows  
Menu->Settings->Basic Setting->Wi-Fi: The Storage Network:

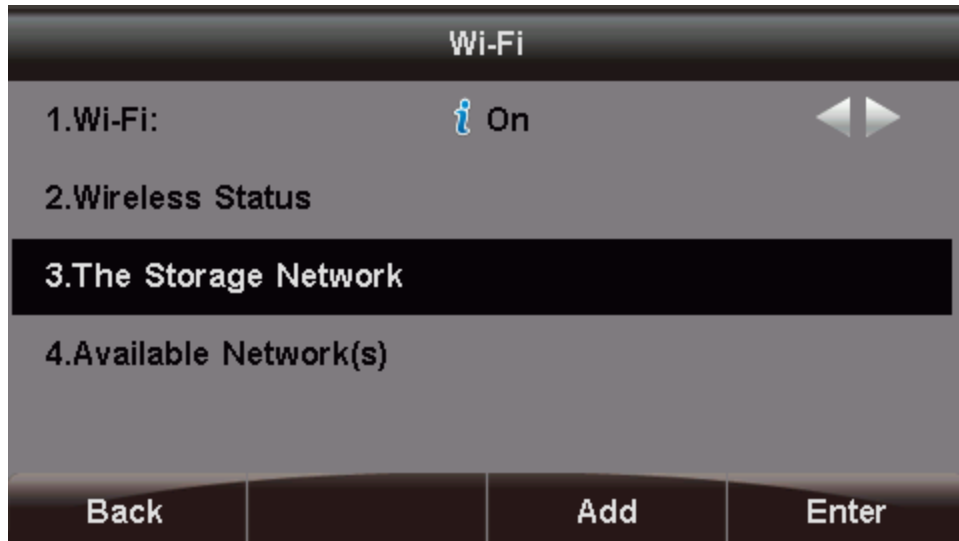

2. Press the "Add" button to add a wireless network:

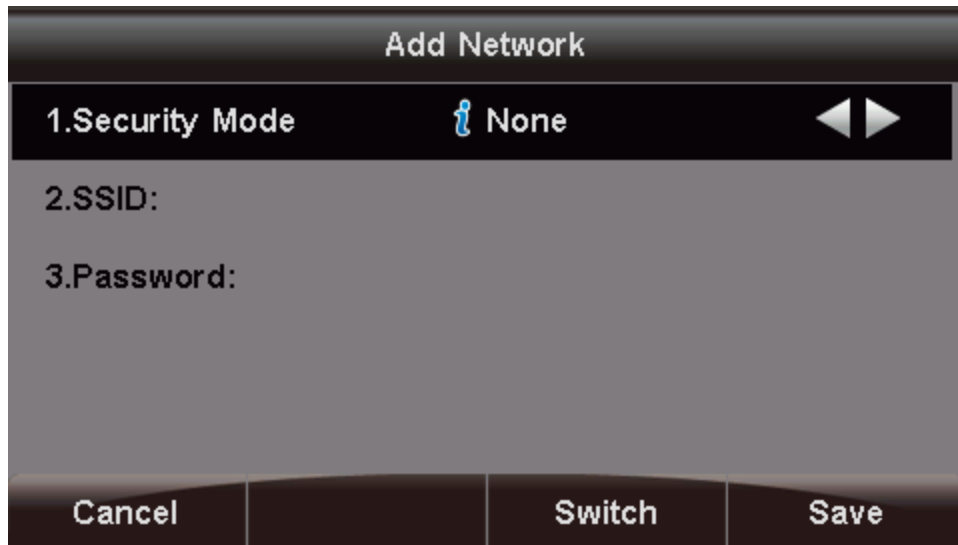


Select a Security Mode

Enter the desired wireless network (SSID)

If the wireless network is secure, please enter its password in the password field.

3. Press the “Save” button to save the configuraion:

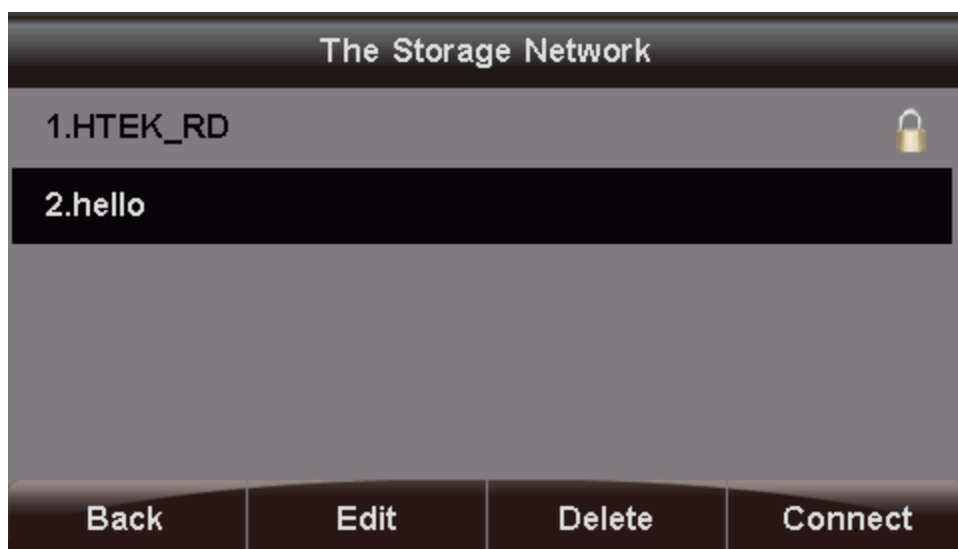

You can choose this wireless network to connect it.

### Note:

Contact your network administrator for the Wi-Fi password.

## How to Disable Wi-Fi feature?

To disable the Wi-Fi feature via phone interface:



1. Find Menu then navigate as follows  
Menu->Settings->Basic Setting->Wi-Fi:
2. Press the Switch button to turn off Wi-Fi feature
3. Press the Save button to save the configuration.

## Troubleshooting

### Why can't the IP phone connect to Wi-Fi?

- If the network is secure, ensure the entered password is right.
- Ensure your gateway/router enables the wireless network feature.
- Reboot your gateway/router.
- Turn off the Wi-Fi feature on the IP phone and then turn it on again.

### Why is the wireless signal strength low?

- Ensure the IP phone and your gateway/router are within the working range and there is no obvious interference (walls, doors, etc) between them.

## Upgrade


### Factory Reset

#### To set Factory Reset by phone interface

1. Press Menu → Setting → Advanced Setting( default password: admin)→ Factory Reset
2. Press OK soft key in the warning page.

#### To set Factory Reset via web interface


1. Click Management → Upgrade
2. Click  and then confirm the setting.

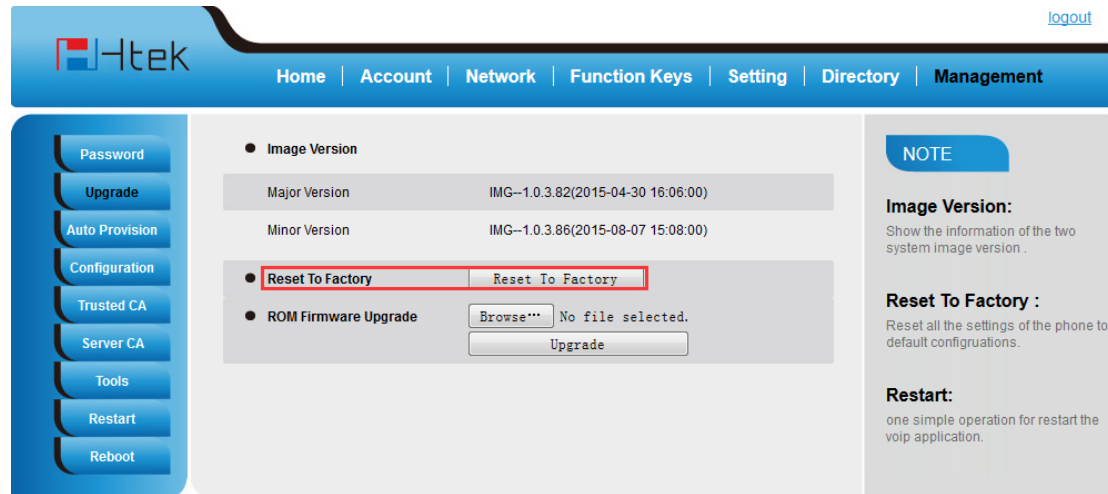

## Pcap Feature


To use pcap via web interface:

1. Click Management → Tools
2. Click Start and then operation the phone
3. When finish the operation, click stop and then click Export.
4. Then you'll get the Pacp captures.

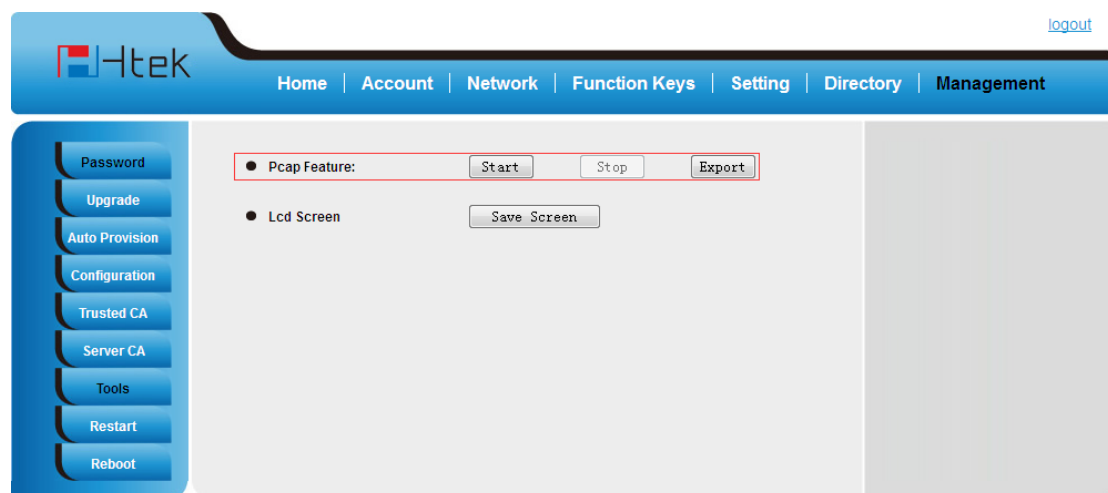

## System Log

To download system log via web interface:

1. Click Management→Configuration
2. Click  of the system Log
3. Then you'll get a txt file: syslog.txt.



● **System Log**

Download System Log	<input type="button" value="Download"/>
Syslog Server	<input type="text"/>
Syslog Level	NONE ▼

## Upgrade

To upgrade via HTTP, the “Management”->“auto provision” ->“ Firmware Upgrade”->“Upgrade Mode” field needs to be set to HTTP, respectively. “Firmware Server Path” needs to be set to a valid URL of a HTTP server, server name can be in either FQDN or IP address format. Here are examples of some valid URL.

e.g. firmware.mycompany.com:5688/Htek

e.g. www.mycompany.com:5688/fm/ Htek

e.g. 218.2.83.110

### Instructions for firmware upgrade via HTTP:


(1) End users can choose to download the free HTTP server from <http://httpd.apache.org/> or use


Microsoft IIS web server. Then setup HTTP server.

(2) Unzip the firmware file and put all of them under the *root/fm* directory of the HTTP server.

(3) Visiting “HTTP:\\192.168.0.254\fm\fw8xx.rom on localhost by browser” to verify the HTTP Server. If visiting “HTTP: \\192.168.0.254\fm\fw8xx.rom on other computer is no prompt to download fw8xx.rom file, please check the firewall (Suggest close the firewall).

**To configure the server path via web interface:**

1. Click Management → Auto provision:
2. Select the upgrade mode in the upgrade mode field
3. Enter the Firmware server path and config server path (192.168.0.254 is HTTP server).
4. Enter the HTTP server's username and password (optional).
5. Click the  button to save the configuration.
6. Restart the UC8xx, IP Phone will restart and auto-get firmware files from HTTP server.

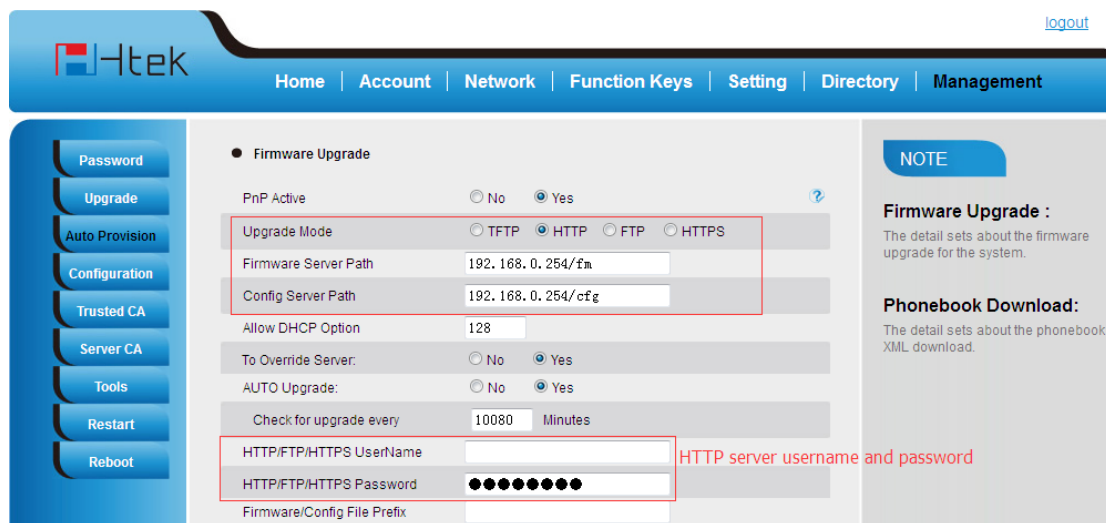


**NOTES:**


- Htek recommends end-user use the Htek HTTP server. For large companies, we recommend to maintain their own TFTP/HTTP/FTP/HTTPS server for upgrade and provisioning procedures.
- Once a “Firmware Server Path” is set, user needs to update the settings and restart the IP Phone. If the configured firmware server is found and a new code image is available, the UC8xx will attempt to retrieve the new image files by downloading them into the UC8xx’s SDRAM. During this stage, the UC8xx’s LEDs will blink fastly until the checking/downloading process is completed. Upon verification of checksum, the new code image will then be saved into the Flash. If TFTP/HTTP/FTP/HTTPS fails for any reason (e.g. TFTP/HTTP/FTP/HTTPS server is not responding, there are no code image files available for upgrade, or checksum test fails, etc), the UC8xx will stop the TFTP/HTTP/FTP/HTTPS process and simply boot using the existing code image in the flash.
- Firmware upgrade may take as long as 3 to 8 minutes over Internet, or just 1 minutes if it is performed on a LAN. It is recommended to conduct firmware

upgrade in a controlled LAN environment if possible. For users who do not have a local firmware upgrade server.

- Hanlong's latest firmware is available at <http://www.htek.com> →Support→Firmware Download.
- Oversea users are strongly recommended to download the binary files and upgrade firmware locally in a controlled LAN environment.

 **To upgrade manually via the Web configuration interface**

1. Click Management → Upgrade
2. Click Brower or the blank.
3. Select the firmware (fw8xx.rom )and then click .

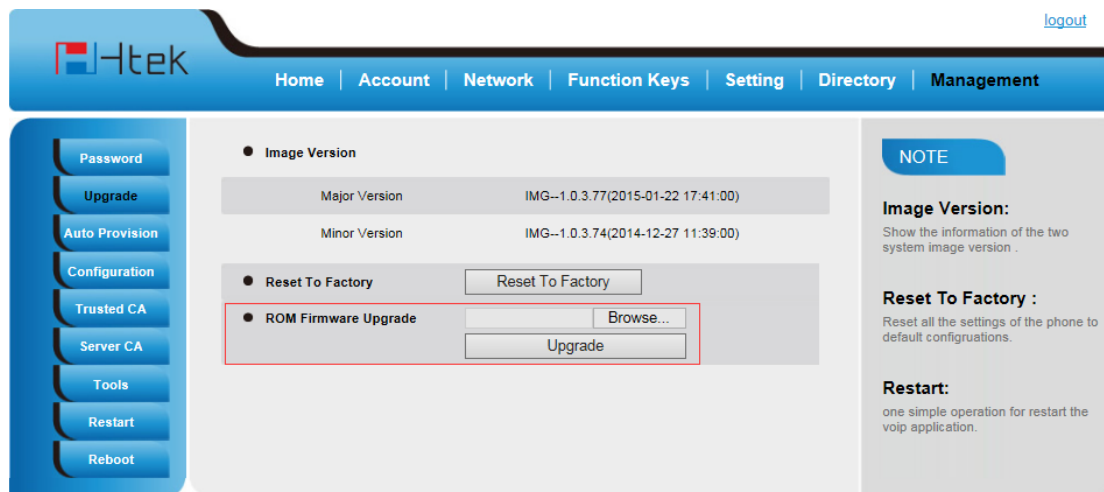

## Configuration File

**To download configuration file:**

1. Click Management → Configuration →Download Device Configuration
2. Then you can get a file: cfg.bin or cfg.xml

The screenshot shows the Htek web interface. The top navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. The left sidebar contains Password, Upgrade, Auto Provision, Configuration, Trusted CA, Server CA, Tools, Restart, and Reboot. The main content area is titled 'Configure File' and contains three sections: 'Configure File', 'System Log', and 'System Log'. The 'Configure File' section has buttons for 'Download Device Xml Configuration', 'Download Xml File', 'Restore Xml Configuration', and 'Browse...'. The 'System Log' section has buttons for 'Download Device Bin Configuration', 'Download Bin File', 'Restore Bin Configuration', and 'Browse...'. The 'System Log' section has a 'Download System Log' button, a 'Syslog Server' input field, and a 'Syslog Level' dropdown menu. The 'NOTE' section on the right contains information about 'Configure File' and 'System Log'. The 'Restore Bin Configuration' button is highlighted with a red box.

### To Restore a configuration file:

1. Click Management → Configuration → Restore configuration
2. Select the xxx.bin or xxx.xml file, and then Click the **Restore Bin Configuration**, then IP Phone will reboot.

This screenshot is identical to the one above, showing the Htek web interface. The 'Restore Bin Configuration' button is highlighted with a red box. The 'System Log' section is also visible.

## Troubleshooting

### Why is the phone LCD screen blank?

1. Ensure your phone is properly plugged into a functional AC outlet.
2. Ensure that the phone isn't plugged into a plug controlled by a switch that is off.
3. If the phone is plugged into a power strip, try plugging it directly into a wall outlet instead.
4. If your phone is powered from PoE, ensure you use a PoE compliant switch or hub, or contact your system administrator for more information.
5. Check that the power LED is on to ensure the phone is powered on.

### Why does the phone display “Network Unavailable”?

- Ensure that the Ethernet cable is plugged into the Internet port on the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is operational.
- Contact your system administrator for more information.

### Why can't I get a dial tone?

- Check for any loose connections and that the phone has been installed properly. For the Installation instructions, refer to [Phone Installation](#).
- Check whether dial tone is present on one of the audio modes.
- Switch between the Handset, Headset (if present) or Hands-Free Speakerphone to check whether dial tone is present for one of the audio modes.
- If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.

### Where to set the tone?

You can set the tone on web interface:

- Click Setting→Tones
- Define the dial tone, ringing, busy tone...
- For the tones, you can check with your system administrator.
- More Click [Tone Notes](#).

[logout](#)

Htek Home | Account | Network | Function Keys | **Setting** | Directory | Management

- Preference
- Features
- BLF Settings
- Date&Time
- Tones**
- SMS
- Action URL
- Softkey Layout
- TR069
- SIP

Select Country: Custom

Dial Tone: f1=350@-13,f2=440@-13,c=0/0;

Ringback Tone: f1=440@-19,f2=480@-19,c=2000/4000;

Busy Tone: f1=480@-24,f2=620@-24,c=500/500;

Reorder Tone: f1=480@-24,f2=620@-24,c=250/250;

Confirmation Tone: f1=350@-11,f2=440@-11,c=100/100-100/100-100/100;

Call Waiting Tone: f1=440@-13,c=300/10000-300/10000-0/0;

**NOTE**

**Select Country:**  
Select your country to generate the standard call tones. Or select Custom to customize the call tones.

## How to download XML Configuration?

- Click Management → Configuration →



## How to Import Trusted CA certificate?

- Click Management → Trusted CA

[logout](#)

Htek Home | Account | Network | Function Keys | Setting | **Directory** | Management

- Password
- Upgrade
- Auto Provision
- Configuration
- Trusted CA**
- Server CA
- Tools
- Restart
- Reboot

Index	Issued TO	Issued By	Expiration
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>
10			<input type="checkbox"/>

Import Trusted Certificate Files

Trusted Certificates

Default Certificates  
 Custom Certificates  
 All Certificates

**NOTE**


**Password:**  
If you login as an administrator, you can modify admin's password here.

**Trusted CA:**  
you can import TLS certificate file here.



## How to Import Server CA certificate?

- Click Management → Server CA

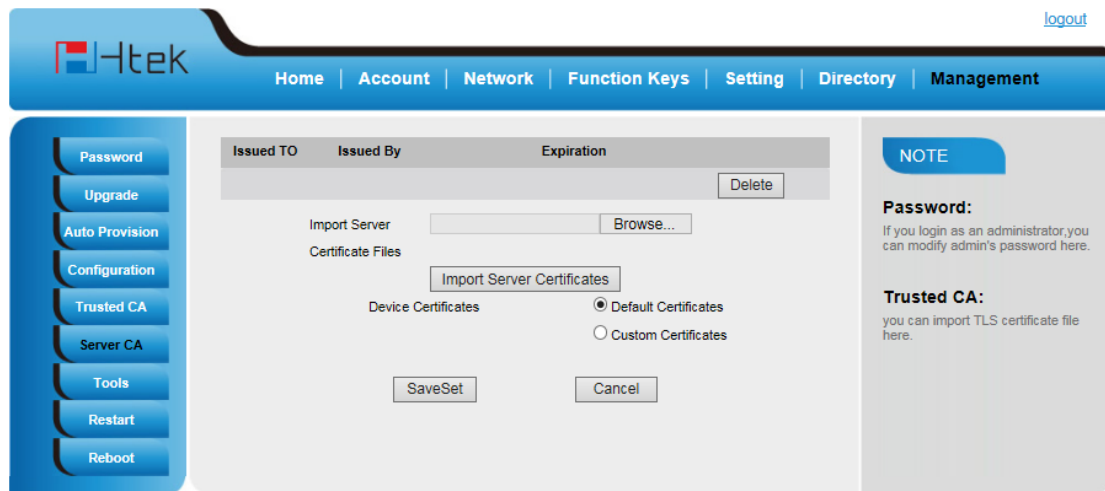

## How to use Vlan?

- For Vlan information, please click [VLAN Note](#)

## How to use LLDP?

- For LLDP information, please click [VLAN Note](#)
- VLAN Notes including:
  1. Voice VLAN
  2. Major Benefits of Using VLANs
  3. VLAN discovery method on Htek ip phones
  4. LLDP Feature on Htek IP Phones
  5. Supported TLVS of IP Phones
  6. Configuring LLDP Feature
  7. DHCP VLAN
  8. Open the DHCP VLAN on the Htek IP Phones
  9. VLAN under Bridge Mode
  10. VLAN under NAT Mode

## How to Set LCD and Web GUI?

- Click [LCD and Web GUI custom Guide](#)

## How to Upgrade via FTP?

- Click [How to Upgrade Note](#)

## How to make Ringtone?

- Click [How to Make Ringtone](#)

## How to use Open VPN?

- Click [Open VPN note](#)

## Provisioning Guide on Free PBX

- Click [Set Auto Provision on FreePBX](#)

## Redundancy Server

- Click [Redundancy Server](#)

## How to Use Auto Provision Phonebook?

- Click [About AP Phonebook](#)

## All Documents

- Click [Documents Guide](#), you can get all tech files.