

WiFi

How to enable WiFi feature via phone interface:

- 1) Find Menu then navigate as follows Menu->Settings->Basic Setting->WiFi
- 2) Press the Switch button to turn on WiFi feature.
- 3) Press the Save button to save the configuration.

How to connect to an available wireless network via phone interface:

- 1) Find Menu then navigate as follows Menu->Settings->Basic Setting->WiFi: Available Network(s)
- 2) Press the Enter button, you will see many available wireless networks.
- 3) You can press the "scan" button to scan the wireless network.
- 4) You can press the "Detail" button to view a wireless network's detail information.
- 5) Choose desired wireless network and then press the "Connect" button.
- 6) Enter the password if needed.
- 7) Normally, the phone will successfully connect to WiFi.

How to add a Wireless Network Manually via phone interface?

- 1) Find Menu then navigate as follows Menu->Settings->Basic Setting->WiFi: The Storage Network.
- 2) Press the "Add" button to add a wireless network. Select a Security Mode. Enter the desired wireless network (SSID). Enter the password if needed
- 3) Press the "Save" button to save the configuration. You can choose this wireless network to connect it.

How to view Wireless Network status?

- 1) If the connection is successful, a wireless network icon will be displayed in the idle status bar. If the WiFi is unreachable, the icon will have a yellow exclamation point. If there is no connection, the icon will have a red fork sign.

Note: Contact your network administrator for the WiFi password.

How to Disable WiFi feature?

To disable the WiFi feature via phone interface:

- 1) Find Menu then navigate as follows: Menu->Settings->Basic Setting->WiFi
- 2) Press the Switch button to turn off WiFi feature.
- 3) Press the Save button to save the configuration.

Troubleshooting

Why can't the IP phone connect to WiFi?

- 1) If the WiFi requires authentication, ensure the entered password is right.
- 2) Ensure your gateway/router enables the wireless network feature.
- 3) Reboot your gateway/router.
- 4) Turn off the WiFi feature on the IP phone and then turn it on again.

Why is the wireless signal strength low?

- 1) Ensure the IP phone and your gateway/router are within the working range and there is no obvious interference (walls, doors, etc) between them.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



RF Power: WiFi: 16dBm@11b, 14dBm@11g, 13dBm@11n

BT: 10dBm

Operating Frequency Range: 2.4GHz~2.4835GHz

IP Phone



User Guide For WiFi

--- UC921E