


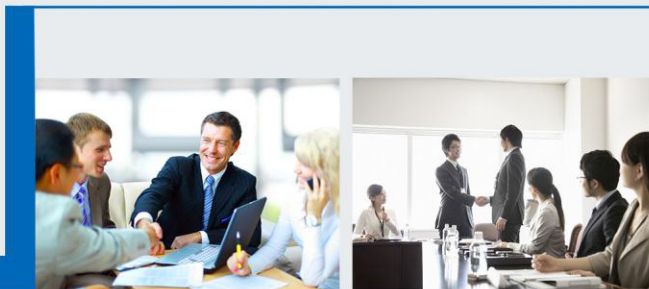

Htek IP Phones UC903 User Manual



Version 2.0.4.4.24
Feb. 2018

Notices Information

Copyright

Copyright © 2005 - 2018 Nanjing Hanlong Technology CO., LTD. All rights reserved.

Nanjing Hanlong Technology Co., LTD. owns all the rights to modify and copy this document at any time. And all the illustrations and text in this document are copyright protected. Therefore, no parts of this document may be used or reproduced, transmitted by the third parties for any purposes without the express written permission of Nanjing Hanlong Technology CO., LTD.

When this document is made available on www.htek.com , Nanjing Hanlong Technology Co., LTD. gives its right to download and print copies of this content only for private use as a user manual. No parts shall have the right to alter, modify or use as commercial means without prior written permission from Nanjing Hanlong Technology Co., LTD.

Safety Instructions

- To use the Phone, please follow the instructions in this user manual.
- Use the power adapter supplied with your phone. Other power adapters may damage the phone.
- This phone is only for indoor use. And also avoid in high humidity, water and some other liquids.
- Do not use the phone during thunderstorms.
- CE
- FCC

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might

damage the surface or internal electronics of the phone.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Summary of changes

This section describes the changes to this user manual for each release and user manual version.

Change for Release x.0.4.0.10, Manual version

x.0.4.0.10

Major updates have occurred to the following sections:

- [Label Scroll](#)

Change for Release x.0.4.0, Manual version x.0.4.0

Major updates have occurred to the following sections:

- [IPv6](#)
- [IPv4&IPv6](#)

Change for Release x.0.3.98.O, Manual version

x.0.3.98.O

Major updates have occurred to the following sections:

- [Reboot in Talking](#)

Change for Release x.0.3.98.A, Manual version

x.0.3.98.A

Major updates have occurred to the following sections:

- [Auto Logout Time](#)

Change for Release x.0.3.98, Manual version x.0.3.98

Major updates have occurred to the following sections:

- [Daylight Saving Time](#)

Change for Release x.0.3.93, Manual version x.0.3.93

Major updates have occurred to the following sections:

- [Check-Syn With Authenticate](#)
- [Call Back](#)

Change for Release x.0.3.88, Manual version x.0.3.88

Major updates have occurred to the following sections:

- [Detect IP Conflict](#)

Change for Release x.0.3.72, Manual version x.0.3.72

Major updates have occurred to the following sections:

- [Voice Mail Tone](#)
- [Backup NTP Server](#)
- [Intercom Barge](#)

Change for Release x.0.3.65, Manual version x.0.3.65

Major updates have occurred to the following sections:

- [Redial Mode](#)

Change for Release x.0.3.63, Manual version x.0.3.63

Major updates have occurred to the following sections:

- [Suppress DTMF Display](#)
- [Suppress DTMF Display Delay](#)

Change for Release x.0.3.62, Manual version x.0.3.62

Major updates have occurred to the following sections:

- [Auto Redial](#)

Table of Content

Notices Information	2
Copyright.....	2
Safety Instructions.....	2
WEEE Warning	2
Cleaning.....	2
FCC Statement.....	3
Summary of changes.....	4
Change for Release x.0.4.0.10,Manual version x.0.4.0.10	4
Change for Release x.0.4.0,Manual version x.0.4.0.....	4
Change for Release x.0.3.98.O,Manual version x.0.3.98.O.....	4
Change for Release x.0.3.98.A,Manual version x.0.3.98.A	4
Change for Release x.0.3.98,Manual version x.0.3.98.....	4
Change for Release x.0.3.93,Manual version x.0.3.93.....	5
Change for Release x.0.3.88,Manual version x.0.3.88.....	5
Change for Release x.0.3.72,Manual version x.0.3.72.....	5
Change for Release x.0.3.65,Manual version x.0.3.65.....	5
Change for Release x.0.3.63,Manual version x.0.3.63.....	5
Change for Release x.0.3.62,Manual version x.0.3.62.....	5
Table of Content.....	6
Getting Started	10
Packing List.....	10
Phone Installation.....	12
1. Attach the phone stand	12
2. Connect the Handset and optional Headset.....	12
3. Connect the Network and Power	13
Initialization	13
Status.....	14
Registration.....	15
Idle Screen.....	17
Getting Familiar with Your Phone.....	18
Hardware Components Preview	18
Icon Preview.....	20
LED Instruction.....	21
Power Indicator LED.....	22
Line LED:(Line or Line Key set as Line).....	22
BLF or BLF List Key LED :(Line/Line Key set as BLF)	22
Shared Line LED:.....	23
Other Key Led	23
User Interface.....	24
Line Key Function Overview	25
Basic Setting Configuration	27

General Settings.....	27
Web Login.....	27
Administrator Password.....	28
Language.....	29
Screen Saver.....	30
Gray Level.....	32
Time and Date.....	32
LED Status Setting.....	37
Key as Send.....	38
Network Setting.....	38
IPv4.....	39
IPv6.....	41
IPv4&IPv6.....	43
PC Port.....	44
Contact Settings.....	45
Local Directory.....	46
Remote Phonebook.....	49
LDAP Phonebook.....	49
Search Contact.....	52
Call History Setting.....	53
Call History.....	53
Audio setting.....	56
Ring Tone.....	56
Volume.....	58
Voice Mail Tone.....	59
Play Hold Tone.....	59
Play Hold Tone Delay.....	59
System Settings.....	60
Dial Plan.....	60
Dial-Now Timeout.....	61
No Key Entry Timeout.....	62
Emergency Call.....	62
Label Scroll.....	63
Show Missed Calls.....	64
Auto Logout Time.....	64
Reboot in Talking.....	64
Detect IP Conflict.....	65
Redial Mode.....	65
Suppress DTMF Display.....	65
Suppress DTMF Display Delay.....	66
Check-Syn With Authenticate.....	66
Other features settings.....	66
Action URL.....	66
Softkey Layout.....	67

Programmable Key.....	68
Basic Call Features	69
Place a Call.....	69
End a Call	71
Redial a Call.....	71
Receive a Call.....	72
Incoming Call Show Mode	72
Auto Answer	73
Call Hold	74
Call Transfer.....	74
Call Conference.....	77
Call Forward.....	79
Call Return.....	82
Call Back.....	83
Call Waiting Tone.....	83
Hide Caller ID	85
Reject Anonymous	85
Call Mute.....	86
DND	86
Keypad Lock.....	87
Hot Line.....	88
Auto Redial.....	89
Function Key Features and Settings.....	90
Line.....	90
Speed Dial.....	91
BLF	92
BLF List.....	94
Voice Message.....	95
Direct Pickup.....	97
Group Pickup	98
Call Park	99
Intercom.....	100
Intercom Barge.....	101
DTMF.....	102
Prefix.....	103
Local Group.....	104
XML Group.....	105
LDAP	106
XML Browser.....	107
Broadsoft Group.....	108
Conference.....	109
Forward.....	110
Transfer.....	111
Hold	111


Group Listening.....	112
DND	113
Redial.....	114
SMS	114
Send SMS	114
Set SMS Line Key	115
Record	116
URL Record	117
Paging.....	118
Share Line.....	118
Public Hold	120
Private Hold.....	121
Hot Desking.....	122
ACD	123
Zero Touch.....	124
Multicast Paging.....	125
Sending RTP Stream.....	126
Receiving RTP Stream	126
Upgrade	128
Factory Reset.....	128
Pcap Feature.....	129
System Log	130
Upgrade	130
Configuration File	132
Troubleshooting.....	133
Why is the phone LCD screen blank?.....	133
Why does the phone display "Network Unavailable"?	133
Why can't I get a dial tone?	134
Where to set the tone?	134
How to download XML Configuration?.....	134
How to Import Trusted CA certificate?.....	134
How to Import Server CA certificate?.....	135
How to use Vlan?	135
How to use LLDP?	136
How to Set LCD and Web GUI?	136
How to Upgrade via FTP?	136
How to make Ringtone?	136
How to use Open VPN?	136
Provisioning Guide on Free PBX	136
Redundancy Server.....	136
How to Use Auto Provision Phonebook?.....	137
All Documents	137

Getting Started


Packing List

The package contains the following parts, please check if all the items are not missed:


1. The phone station

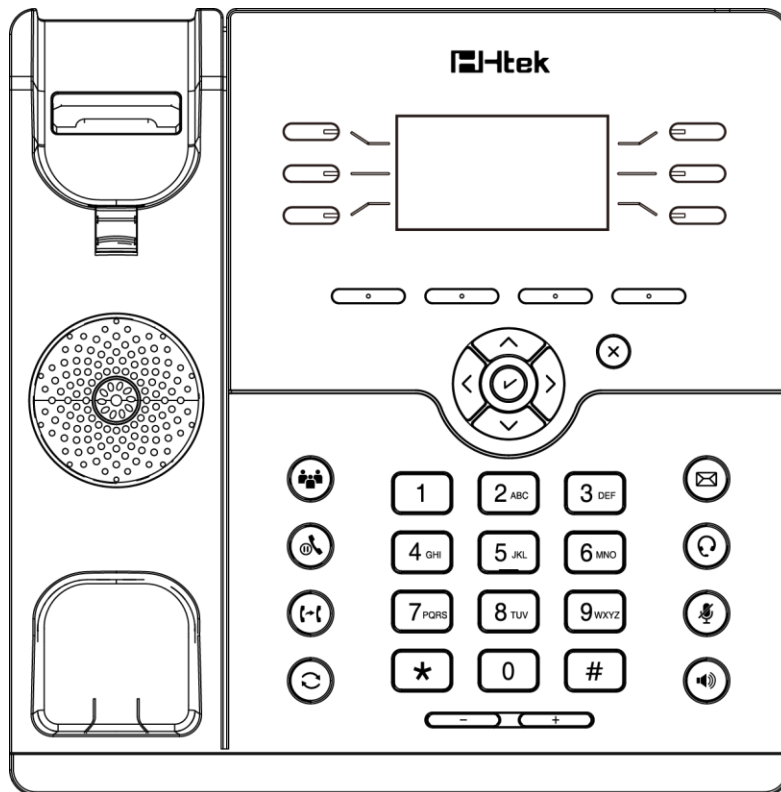


2. The phone stand

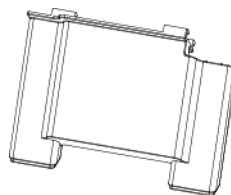


3. Handset




4. Headset cord

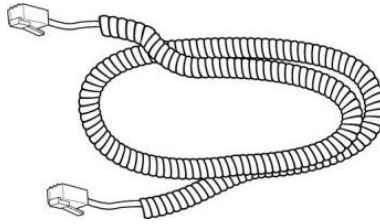

5. Power adapter

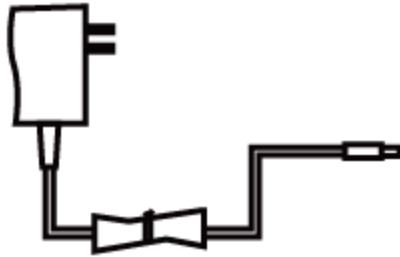

6. Ethernet cable

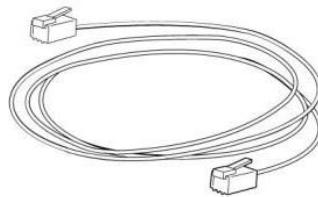


7. User Manual




Phone Installation


1. Attach the phone stand

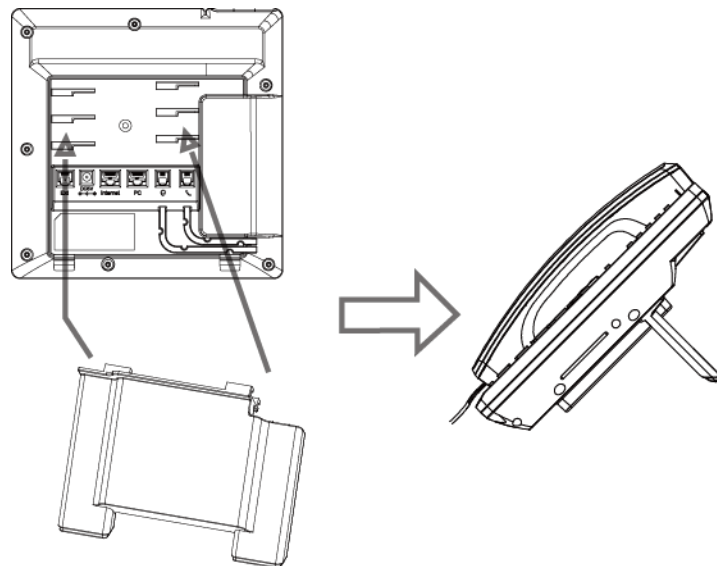

2. Connect the Handset and optional Headset

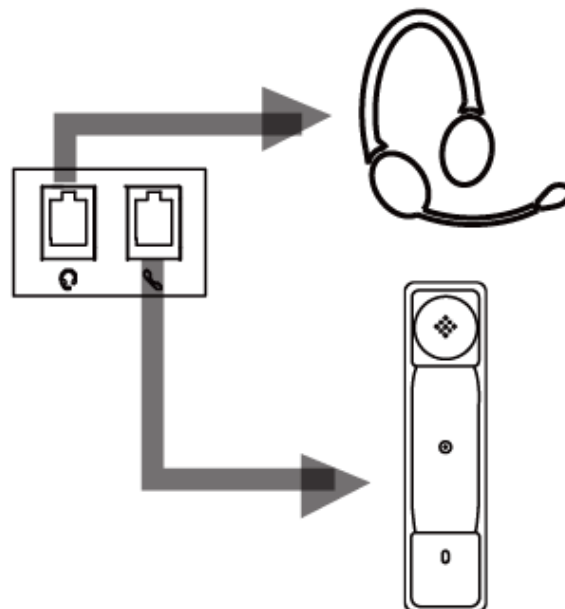

3. Connect the Network and Power

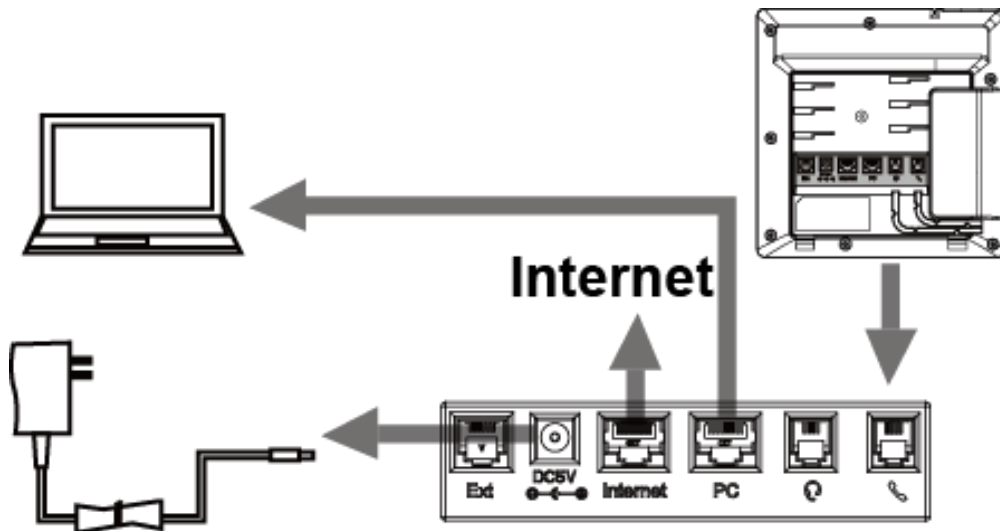


Initialization


After your phone has been powered up, the system boots up and performs the following steps:

Automatic Phone Initialization

The phone finishes the initialization process by loading the saved configuration. The phone LCD screen will display "Booting".

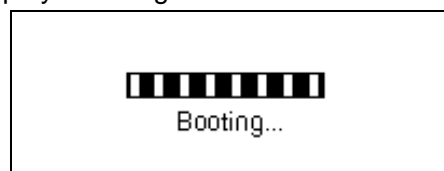

And then show "Initializing" during the initialization.

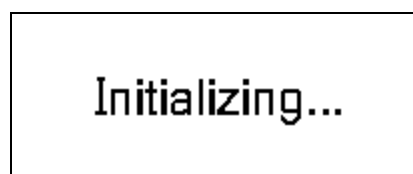

The IP Phone will upgrade the firmware if there is a new firmware on your server. And the IP Phone will show "Check firmware, please waiting..." after initialization.

Check firmware Please wait

Then IP Phone will show Reboot information:

Device Reboot Please wait...


By default, the phone attempts to contact a DHCP server in your network in order to obtain its valid network settings, e.g. IP address, subnet mask, default gateway, DNS server.

Status

You can view the system status of your phone via phone user interface or web user interface. The information of phone status includes: Information(e.g., Model, IP, MAC, Firmware, Hardware), Network(e.g., WAN Type, IP, Mask, LAN Type, Gateway, DNS...), Account (e.g., register status of accounts).


To view the phone status via phone interface:

1. Press Menu →Status →Information.



```
1.Model:UC903
2.IPv4:192.168.1.2
3.MAC:00:1f:c1:1c:1f:d4
Back
```

2. Press Menu →Status →Network.

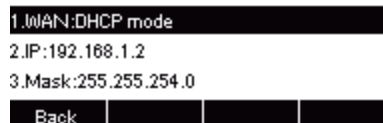


```
1.WAN:DHCP mode
2.IP:192.168.1.2
3.Mask:255.255.254.0
Back
```

3. Press Menu →Status →Accounts.

1.824:Registered			
2.Empty:Not Registered			
3.Empty:Not Registered			
Back			

To view the phone status via Web interface:

1. Login Web interface (For How to login, please refer to [Web Login](#)).
2. View the information of Version, Account and Network.

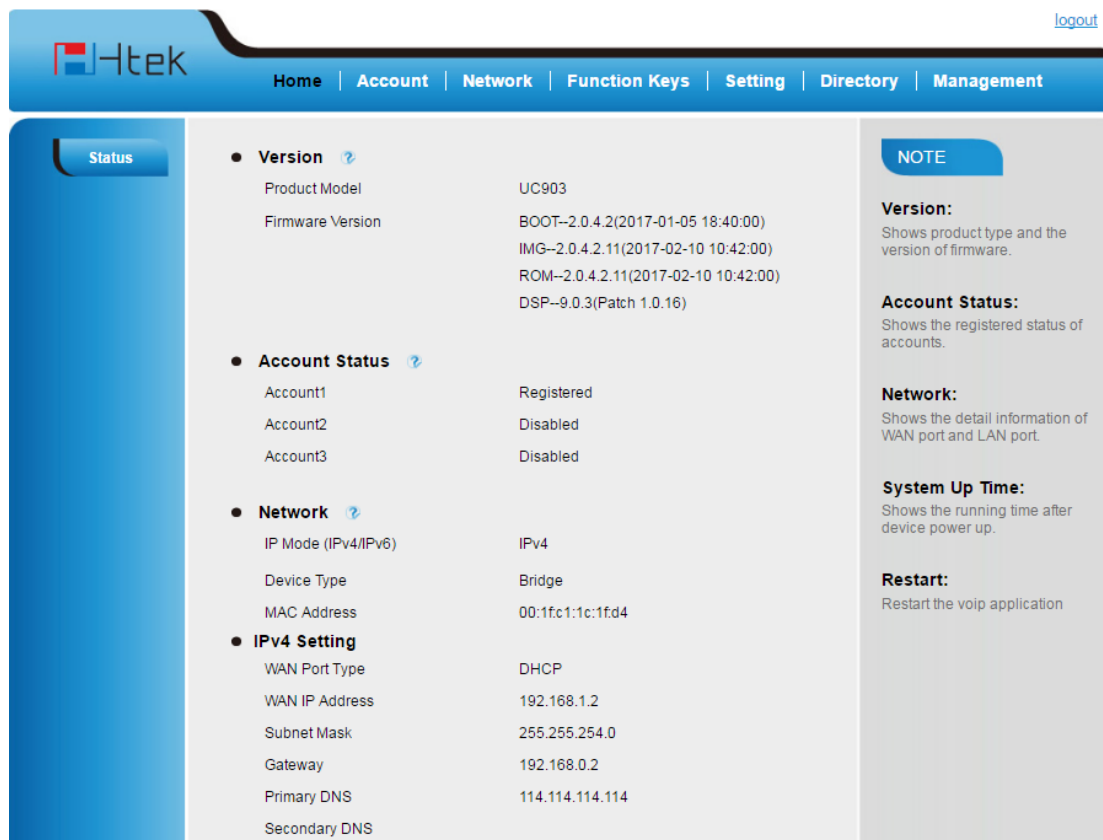

The screenshot shows the Htek web interface. The top navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. The main content area is titled 'Status' and contains the following sections:

- Version:** Product Model (UC903), Firmware Version (BOOT--2.0.4.2(2017-01-05 18:40:00), IMG--2.0.4.2.11(2017-02-10 10:42:00), ROM--2.0.4.2.11(2017-02-10 10:42:00), DSP--9.0.3(Patch 1.0.16))
- Account Status:** Account1 (Registered), Account2 (Disabled), Account3 (Disabled)
- Network:** IP Mode (IPv4/IPv6) (IPv4), Device Type (Bridge), MAC Address (00:1fc1:1c:1fd4)
- IPv4 Setting:** WAN Port Type (DHCP), WAN IP Address (192.168.1.2), Subnet Mask (255.255.254.0), Gateway (192.168.0.2), Primary DNS (114.114.114.114), Secondary DNS

The NOTE section on the right provides additional information:

- Version:** Shows product type and the version of firmware.
- Account Status:** Shows the registered status of accounts.
- Network:** Shows the detail information of WAN port and LAN port.
- System Up Time:** Shows the running time after device power up.
- Restart:** Restart the voip application

Registration

To register via phone interface:

1. Press Menu → Setting → Advanced setting (default password: admin) → Accounts.
2. Select the desired account.
3. Select Enable for Account active.
4. Fill the SIP Server.

5. Fill the Failover SIP server if need (Optional).
6. Fill the Outbound Proxy (Optional).
7. Fill the SIP User ID, Authenticate ID.
8. Fill the password, Name (shown on LCD) and Ringtone.
9. Press Save to save the configuration.

**Note:**

If there is a port of sip server, you need to press “1” on the keypad, then you will find the “.”.

Additional Information:

When the current input method is ABC/abc/2ab,


Pressing “1”, you will find “, . ?;”.

Pressing “0”, you will find “ < > () { } [] ”.

Pressing “*”, you will find “* / ! @ \$ ”.

Pressing “#”, you will find “# ' % & * ”.


To register via web interface:

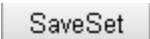1. Login Web interface and Click Account→Basic.
2. Select the desired Account.
3. Select Yes for Account Active.
4. Fill the Primary SIP Server and other account information.
5. Click  to save the configuration.



Note:

1. All fields with * must be filled. If changed, it requires a phone restart.
2. Account Status says the account registered successfully or not.

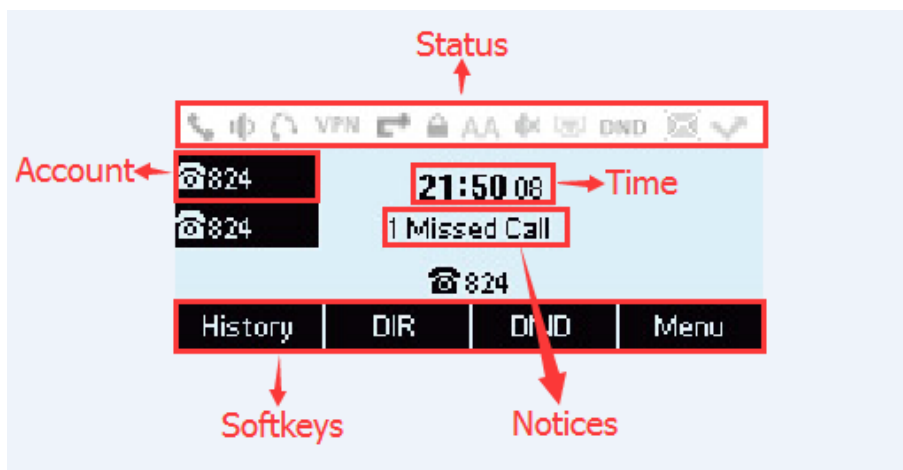Idle Screen




Name	Description
1. Date & Time	It is the area that displays the current set date and time of the phone.
2. Notice	It is the area to display the phone's notifications such as missed calls, SMS, do not disturb mode and many more. For more info,







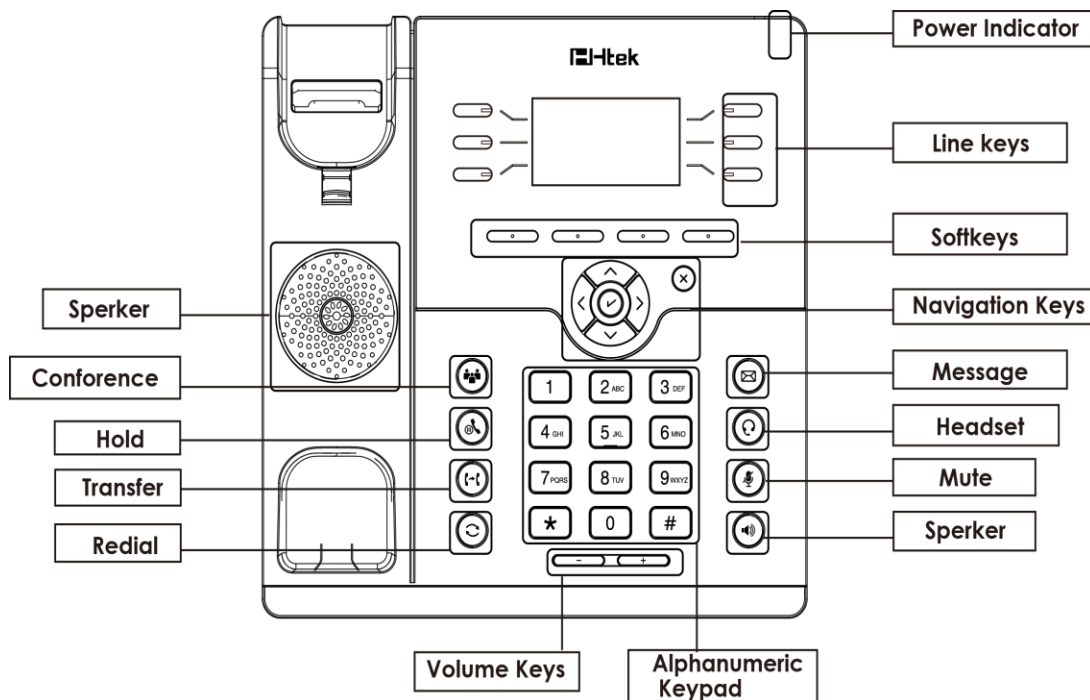

	see Icon Preview .
3. Line Keys	This area shows the line key labels. Line keys can also be used as other function keys. For more information you can refer to Line Keys .
4. Soft Key	This area shows the soft key labels. The default soft key labels are “History”, “Directory”, “DND” and “Menu”. For more information, see Programmable Key .
5. Default Account	This shows the current account. User can use   to change the default account.









Getting Familiar with Your Phone

Hardware Components Preview
















Item	Description
LCD screen	To present all information about the date& time, accounts, soft keys, messages, calls and other some information.
Power Indicator LED	To indicate the power status
Line keys	The phone supports up to 3 accounts. 1. Steady green: idle interface, during a call. 2. Blink red: a call incoming.

Soft keys	Labels automatically identify their context-sensitive features.
Navigation keys	<p> 1. OK.</p> <p> Up arrow key: To move up of the selection shown on the screen.</p> <p> Right arrow key: To move right of the selection shown on the screen.</p> <p> Left arrow key: To move left of the selection shown on the screen.</p> <p> Down arrow key: To move down of the selection shown on the screen.</p> <p> 1. To return to idle screen. 2. To cancel the information or call on the screen.</p>
Mute key	<p> 1. To mute the voice during the call (red light). 2. To un-mute the call.</p>
Conference	<p> To place a conference call</p>
Line Keys	<p>To be configured as different function as:</p> <ol style="list-style-type: none"> 1. Line 2. Speed Dial 3. BLF 4. BLF List 5. Voice mail 6. Direct Pickup 7. Group Pickup 8. Call Park 9. Intercom 10. DTMF 11. Prefix 12. Hold 13. Conference 14. DND 15. Redial 16. Transfer 17. SMS 18. Hot -desking 19. Call Return 20. Paging

	<p>21. Record</p> <p>22. Shared Line</p> <p>The LED lights status when set as Shared Line:</p> <p>Stay green: Idle</p> <p>Stay red: Busy</p> <p>Blinked green: Ring Back</p> <p>Blinked red: A call incoming</p> <p>Blinked green: Private Hold</p> <p>Light Drown: Unregistered</p> <p>23. Hot Desking</p> <p>24. ACD</p> <p>25. Zero Touch</p> <p>26. Multicast paging</p>
Speaker	 Press this button to place a call in hands-free mode.
Redial	 <p>To dial the previous dialed number.</p> <p>To act as send key.</p>
Volume	 <p>To decrease the volume.</p>  <p>To increase the volume.</p>
Hold	 To hold or to resume a call during a conversation.
Alphanumeric keypad	To enter the phone numbers, letters and so on.
Message	 To indicator the New message, and press to read.
Headset	 To indicate that the phone is or not in Headset mode.
Transfer	 <p>To transfer a call to a third party.</p> <p>To enable or disable Forward feature during the idle page.</p>

Icon Preview

Icon	Description
------	-------------

	Network
	Line(Registered succeed)
	Line (Unregistered)
	Speakerphone mode
	Handset mode
	Headset mode
	Mute
	Forward
DND	Do Not Disturb
	SRTP
	Received calls
	Dialed Calls
	Missed calls
	Forward calls

LED Instruction

This part mainly instructs the LED status. The Power LED Status describes on the premise that the LED settings all set as Yes. For LED status setting, please refer to: [LED](#)

[Status Setting](#)

Power Indicator LED

LED Status	Description
Blinked Green	Ringing or have missed call
Steady Green	Idle status(Power on)
Off	Powered off

Line LED:(Line or Line Key set as Line)

LED Status	Description
Blinked Green	Hold
Steady Green	Off hook or during a conversation
Blinked Red	Ringing
Off	Idle status

BLF or BLF List Key LED :(Line/Line Key set as BLF)

LED Status	Description
Steady Green	Idle status for the monitored line
Steady Red	The monitored line is calling or during a call
Blinked red	The monitored line is ringing
Off	All other unknown status

Shared Line LED:

LED Status	Description
Off	Idle status
Stay green	a member of the SCA group in off-hook status
Stay red	Other member of the SCA group's led status when a member of the SCA group in off-hook status
Blinked green every 500ms	a member of the SCA group in Private hold status.
Stay red	Other member of the SCA group's led status when a member of the SCA group in Private hold status
Blinked green every 500ms	a member of the SCA group in public hold status
Blinked red every 500ms	Other member of the SCA group's led status when a member of the SCA group in public hold status
Blinked green every 500ms	a member of the SCA group in progressing status
Stay red	On other member of the SCA group's led status when a member of the SCA group is in progressing status
Blinked red every 100ms	Alerting
Stay green	a member of the SCA group in active status when there is an incoming call designated for the SCA group
Stay red	Other member of the SCA group's led status when a member of the SCA group in active status

Other Key Led

Key	Description
Headset Key	When using in headset mode, the led is steady green or the LED is off.
Message Key	Blinked green when there is a new message or the LED is off.

Mute Key	Red when muting the call, or the LED is off.
----------	--

User Interface

There are two ways to customize specific configurations on your IP phone:

- The user interface on the IP phone
- The user interface in a web browser on your PC

The hardware components keypad and LCD screen constitute the phone user interface, which allows the user to execute all call operation tasks and basic configuration changes directly on the phone. In addition, you can use the web user interface to access all configuration settings. In many instances, it is possible to use both the phone user interface and the web user interface to operate the phone and change settings. However, in some instances, it is only possible to use the phone or the web user interface.

Phone Interface Overview

Option	
Status	Model
	IP
	MAC
	Firmware(IMG, BOOT, ROM)
	Hardware
	EHS Version
	Network
	Account
	Device Cert
	Language
Features	Call Forward
	Function Key(Line and Line Key setting) More Key see Line Key Overview
	Key as Send
	Hot Line
	Anonymous Call
	DND
	History Setting
Basic Settings	Language
	Time & Date
	Time & Date Format

	DHCP Time
	Ring tone
	Headset
	Screensaver...
Advanced Settings	Accounts
	Network
	Factory Reset
	Auto provision
Directory	All Contacts
	Local Contacts
	Remote Contacts
	Broadsoft Contacts
	Blacklist Contacts
	AP Contacts
History	Local History
	Network CallLog
Message	Voice Mail set and View.
	Text Message view and set.
Others	Factory Function
	System Restart
	Device Reboot
	Pcap Feature

Line Key Function Overview

Line
Speed Dial
BLF
BLF List
Voice Mail
Direct Pick Up
Group Pick Up

Call Park
Intercom
DTMF
Prefix
Local Group
XML group
LDAP
XML Browser
Broadsoft group
Conference
Forward
Transfer
Hold
Group Listening
DND
Redial
Call Return
SMS
Record

URL Record
Paging
Shared Line
Public Hold
Private Hold
Hot Desking
ACD
Zero Touch
Multicast Paging

Basic Setting Configuration

This part will mainly introduce the basic configuration as the Time, Language, and Volume...



General Settings

Web Login

1. Get the IP address: Press Menu → Status → Information.

```

1.Model:UC903
2.IPV4:192.168.1.2
3.MAC:00:1f:c1:1c:1f:d4
Back
    
```

2. Input the IP Address in the web browser.
3. Input the user name (default is admin), password (default is admin).
4. Login successfully.

The screenshot shows the Htek web interface with a navigation menu (Home, Account, Network, Function Keys, Setting, Directory, Management) and a 'Status' section. The 'Status' section contains several tables of system information:

- Version:**
 - Product Model: UC903
 - Firmware Version: BOOT--2.0.4.2(2017-01-05 18:40:00), IMG--2.0.4.2.11(2017-02-10 10:42:00), ROM--2.0.4.2.11(2017-02-10 10:42:00), DSP--9.0.3(Patch 1.0.16)
- Account Status:**
 - Account1: Registered
 - Account2: Disabled
 - Account3: Disabled
- Network:**
 - IP Mode (IPv4/IPv6): IPv4
 - Device Type: Bridge
 - MAC Address: 00:1f:c1:1c:1f:d4
- IPv4 Setting:**
 - WAN Port Type: DHCP
 - WAN IP Address: 192.168.1.2
 - Subnet Mask: 255.255.254.0
 - Gateway: 192.168.0.2
 - Primary DNS: 114.114.114.114
 - Secondary DNS:

On the right side, there is a 'NOTE' section with the following information:


- Version:** Shows product type and the version of firmware.
- Account Status:** Shows the registered status of accounts.
- Network:** Shows the detail information of WAN port and LAN port.
- System Up Time:** Shows the running time after device power up.
- Restart:** Restart the voip application

Note:
 The PC and phone should be in the same segment.
 When registering the accounts in web and the server port is not "5060", then "SIP Server" should be set as "SIP Server's IP address: server port", for example, "192.168.0.122: 5090".

Administrator Password

The password is mainly used for login the web interface or set the advanced settings through phone interface. And the default password of the administrator is: **admin**.

To change password via Phone Interface

1. Press Menu → Settings → Advanced Settings → password (default admin) → Phone Setting → Set Password.
2. Enter the current PWD (password), new password and confirm the new password.
3. Press save soft key or  to save the new password.

1.Current PWD:	<input type="password"/>		
2.New PWD:	<input type="password"/>		
3.Confirm:	<input type="password"/>		
<input type="button" value="Cancel"/>	<input type="button" value="2aB"/>	<input type="button" value="Delete"/>	<input type="button" value="Save"/>

To change password via Web Interface

1. Management → Password.
2. Fill the value.
3. Click to save the configuration.

NOTE

Password:
If you login as an administrator, you can modify admin's password here.

Trusted CA:
you can import TLS certificate file here.


Note:
When you use the web interface: user name: admin password: admin(default)

Language

The default Phone interface language is English.

To change the language via Phone interface

1. Press Menu → Settings → Basic Settings → Language.

2. Press  or Save soft key to save the configuration.




To change the language via Web Interface

1. Setting → Preference → Web Language.

2. Select the necessary one.

3. Press  to save the configuration.

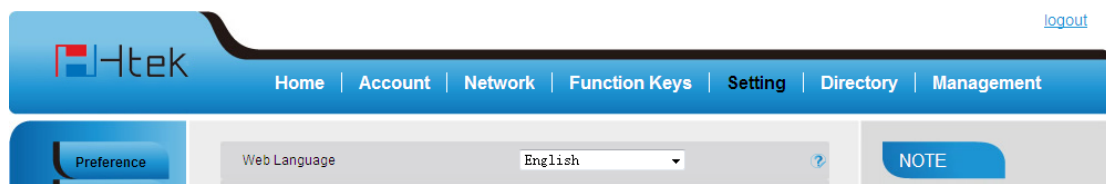

Note:



All languages may not be available for selection. The available languages depend on the language packs currently loaded to the IP phone.

Screen Saver


There are two types of screen saver: Logo only, Time & Logo .

To enable screen saver via Phone interface




1. To press Menu → Settings → Basic Settings → Screensaver...

2. Press  and  or press Switch soft key to Choose the Time-out as 1 min or 2/5/10/30 minute, then press the Save button.

3. Enter the Screensaver Type to choose one of the type: Logo only, Time & Logo.

- Press  or Save soft key to save the selected configuration.

To disable screen saver via Phone interface


- To press Menu → Settings → Basic Settings → Screensaver...
- Press  and  or press Switch soft key to Choose the Time-out as off.
- Press  or Save soft key to save the selected configuration.

To Enable screen saver via Web interface

- To Click Setting → Preference.
- To choose the Time-out as 1 min or 2/5/10/30 minute.
- To select the screen Type as Logo only or time & logo.
- Click Saveset to save the configuration.

To Disable screen saver via Web interface

- To Click Setting → Preference
- To choose the Time-out as Off
- Click Saveset to save the configuration.

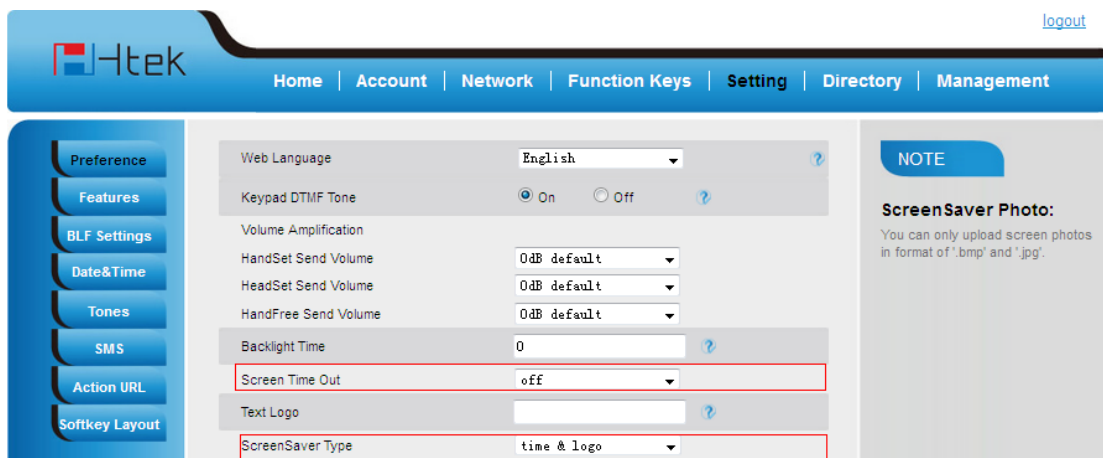


The screenshot shows the Htek web interface with the following elements:

- Header:** Htek logo and navigation links: Home | Account | Network | Function Keys | **Setting** | Directory | Management. A [logout](#) link is in the top right.
- Left Sidebar:** Preference (selected), Features, BLF Settings, Date&Time, Tones, SMS, Action URL, Softkey Layout.
- Main Content Area:**
 - Web Language: English
 - Keypad DTMF Tone: On Off
 - Volume Amplification: 0dB default
 - HandSet Send Volume: 0dB default
 - HeadSet Send Volume: 0dB default
 - HandFree Send Volume: 0dB default
 - Backlight Time: 0
 - Screen Time Out: off** (highlighted with a red box)
 - Text Logo: [Empty field]
 - ScreenSaver Type: time & logo** (highlighted with a red box)
- Right Sidebar:** NOTE: ScreenSaver Photo: You can only upload screen photos in format of '.bmp' and '.jpg'.

To custom text logo via web interface :

1. Click Setting→Preference.
2. choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the desired value in the Text Logo field.
4. Click Saveset to save the configuration.

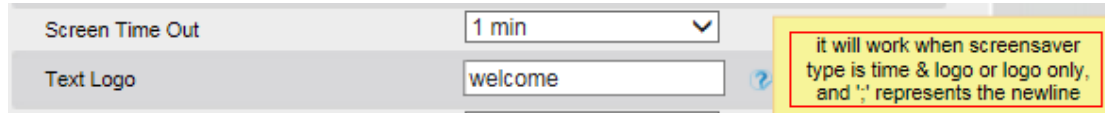


Screen Time Out	1 min
Text Logo	welcome

it will work when screensaver type is time & logo or logo only, and '\n' represents the newline

To wake up screen saver via Web interface:

1. Click Setting → Preference
2. Choose Dial First Digit: Screensaver Wakes up or Screensaver Wakes up and Dial

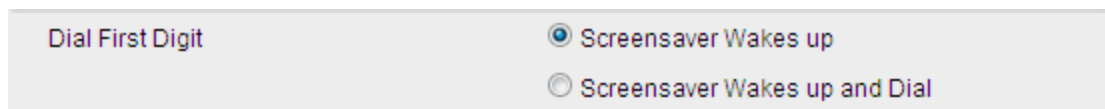




Dial First Digit	<input checked="" type="radio"/> Screensaver Wakes up
	<input type="radio"/> Screensaver Wakes up and Dial

Gray Level

There are 12 levels. you can change the LCD's brightness according to your visual perception

To change the gray level via Phone interface




5. To press Menu → Setting → Basic Setting → Gray level
6. Press  and  or press Switch soft key to Choose the level from 1 to 20
7. Press  or Save soft key to save the selected configuration

Time and Date

Time and date is displayed on the idle page, and it can be set automatically by SNTP server or manually by manual setting.




To configure the time and Date by SNTP setting via phone interface

1. To press Menu → Setting → Basic setting → Time & Date → SNTP Settings






2. Press  or , or info soft key to change the Time zone.
3. Fill the NTP server1, NTP Server2, and Daylight Saving.
4. Press  or Save soft key to save the configuration.






To configure time and date manually via phone interface

1. To press Menu → Setting → Basic setting → Time & Date → Manual Settings
2. Press  and  or change the right time, or you can input the right time.
3. Press  or Save soft key to save the configuration.

To configure the Time & Date Format via phone interface

1. To press Menu → Setting → Basic setting → Time & Date Format
2. Press  and  or press Info to change between 12 Hour or 24 Hour time display.
3. Press  and  or press Info to change date display format among Y-M-D(year-month-day), M-D-Y(month-day-year), D-M-Y(day-month-year).
4. Press  or Save soft key to save the configuration.

To configure the DHCP time via phone interface

1. To press Menu → Setting → Basic setting → DHCP time
2. Press  and  or press Info to change between Disable and Enable.
3. Press  or Save soft key to save the configuration.

To configure the NTP Server by web interface


1. Login

- a) Login name: admin, password: admin (default)
2. Setting → Date &Time →NTP Server
3. Fill the value in the blank.


The screenshot shows the Htek web interface with the following elements:

- Header: Htek logo, Home | Account | Network | Function Keys | **Setting** | Directory | Management
- Left Sidebar: Preference, Features, BLF Settings, **Date&Time**, Tones, SMS, Action URL, Softkey Layout
- Main Content Area:
 - DHCP Time: No Yes
 - Time Zone: -5 United States-Eastern Time
 - NTP Server is Covered with DHCP: No Yes
 - NTP Server**: time.windows.com (highlighted with a red box)
 - Backup NTP Server: (empty)
 - Daylight Saving Time: Disable
 - Start Date: Month 1 Day 1 Hour 0
 - End Date: Month 12 Day 31 Hour 23
 - Time Format: 24 Hour 12 Hour
 - Date Display Format: Year - Month - Day, Month - Day - Year, Day - Month - Year
- Right Side: NOTE: Time Zone: Choose the time zone you are in.
- Buttons: SaveSet, Cancel

To change the Time Zone and Date Display Format via web interface


1. Setting → Date &Time
2. Select the necessary one.
3. Press  to save the configuration.


To change the SIP Date Override Time via web interface

1. Setting → Date & Time → Account
2. Select On or Off for SIP Date Override Time .
3. Click  to save the configuration.

To change the Account via web interface


1. Setting → Date & Time → Account.

2. Select desired Account.
3. Click  to save the configuration.

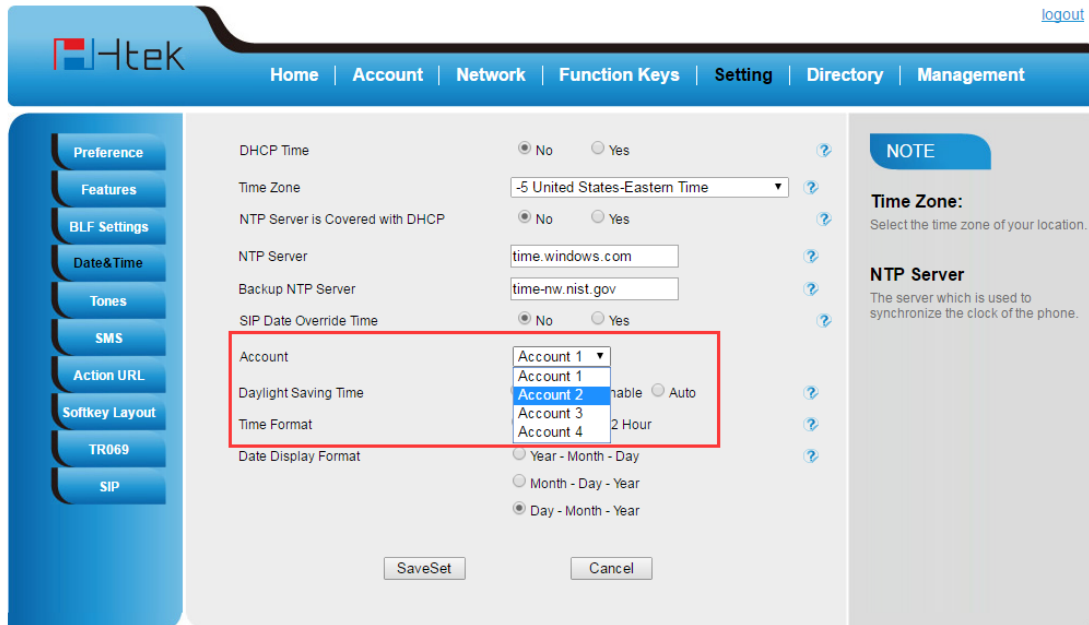

The screenshot shows the Htek web interface with the 'Setting' menu selected. The 'Date & Time' section is active, and the 'Account' dropdown menu is open, highlighting 'Account 2'. The 'Daylight Saving Time' setting is currently set to 'Auto'. The 'SaveSet' button is visible at the bottom of the settings area.

To change the Daylight Saving Time via web interface

1. Setting → Date & Time → Daylight Saving Time
2. Select Disable or Enable or Auto for Daylight Saving Time.
3. Click  to save the configuration.

The screenshot shows the Htek web interface for basic setting configuration. The navigation menu on the left includes: Preference, Features, BLF Settings, Date & Time (selected), Tones, SMS, Action URL, Softkey Layout, TR069, and SIP. The main settings area includes: DHCP Time (No/Yes), Time Zone (-5 United States-Eastern Time), NTP Server is Covered with DHCP (No/Yes), NTP Server (time.windows.com), Backup NTP Server (time-nw.nist.gov), SIP Date Override Time (No/Yes), Account (Account 1), Daylight Saving Time (Disable/Enable/Auto), Time Format (24 Hour/12 Hour), and Date Display Format (Year-Month-Day, Month-Day-Year, Day-Month-Year). The 'Daylight Saving Time' row is highlighted with a red box. The 'NOTE' section on the right contains: 'Time Zone: Select the time zone of your location.' and 'NTP Server: The server which is used to synchronize the clock of the phone.' Buttons for 'SaveSet' and 'Cancel' are at the bottom.


Note:

If the IP Phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP) server, please contact your system administrator for more information.

LED Status Setting

The LED Status setting mainly defines the power indicator LED.

To configure LED Status via web interface:

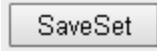1. Click Setting → Preference
2. Select Yes or No for Power Status, Ringing Status, Miss Calls Status and Voice Message Status.
3. Click  for the setting.




For the LED status description, see: LED Instruction [Power Indicator LED](#)

LED Status Setting:




Power Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Ringing Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
MissCalls Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No
Voice Message Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No

Key as Send

To configure Key as Send via phone interface

1. Press Menu → Features → Key as Send
2. Press  and  or press info/switch soft key to select the enable choice.
3. Press  or Save soft key to save the configuration

To cancel # Key as Send via phone interface


1. Press Menu → Features → Key as Send
2. Press  and  or press info/switch soft key to select the disable choice.
3. Press  or Save soft key to save the configuration.

Network Setting

Htek IP Phone supports IPv4、IPv6、IPv4&IPv6.They have three mode of Network: DHCP, Static, and PPPoE. The default mode is DHCP, it will obtain IP address and other information automatically.

If your phone cannot contact a DHCP server for any reason, you need to configure a static IP address manually.

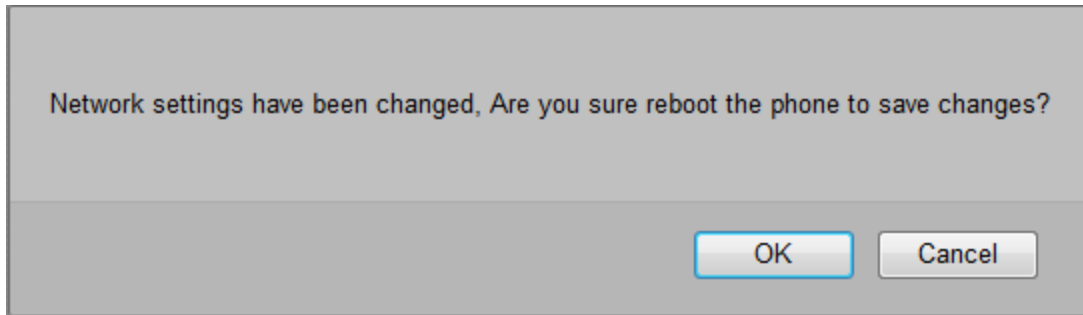


When switch DHCP, Static IP and PPPoE to each other, or change the Static IP on webpage, it will show the warning of restart as following.



IPv4


If you set IP Mode to IPv4, IP phone will use IPv4 address. IPv4 has three network modes: DHCP, Static, and PPPoE


To configure IPv4 via phone interface:

1. Press Menu → Setting → Advanced Settings (password: admin) → Network → WAN Port → IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.



To configure IPv4 via Web interface:

1. Click Network → Basic → Internet Port
2. Select IPv4 for Internet Port
3. Click  for the setting.

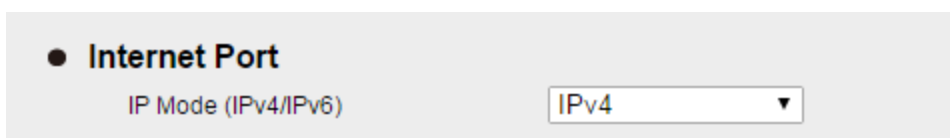

To configure DHCP via phone interface:

1. Press Menu → Setting → Advanced Settings (password: admin) → Network → WAN Port IPv4 → DHCP mode.
2. Click Save and restart the phone.

To configure a static IP address via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IPv4 →Static mode.
2. Enter the parameters: IP, Netmask, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.

1.IP: 192.168.1.2
2.Netmask: 255.255.254.0
3.Gateway: 192.168.0.2
Cancel 123 Delete Save

3. Click Save and restart the phone.

NOTE			
System will restart, Are you sure ?			
Cancel			OK

Press the Save soft key to accept the change or the Cancel soft key to cancel. If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. You can set a WAN port to be a PPPoE port. The PPPoE port will perform a PPP negotiation to obtain the IP address. Contact your system administrator for the PPPoE user name and password.

To configure PPPoE via phone interface:


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →PPPoE mode.
2. Enter the User ID and password
3. Click Save and restart the phone.

1.User ID: 02584685230
2.Password: xxxxxxxx
Cancel 2aB Delete Save

To configure Network via web interface:

1. Click Network→Basic→IPv4 setting

2. Select the desired Type: DHCP, Static or PPPoE
3. Filled the necessary information.
4. Click the SaveSet and restart the phone.

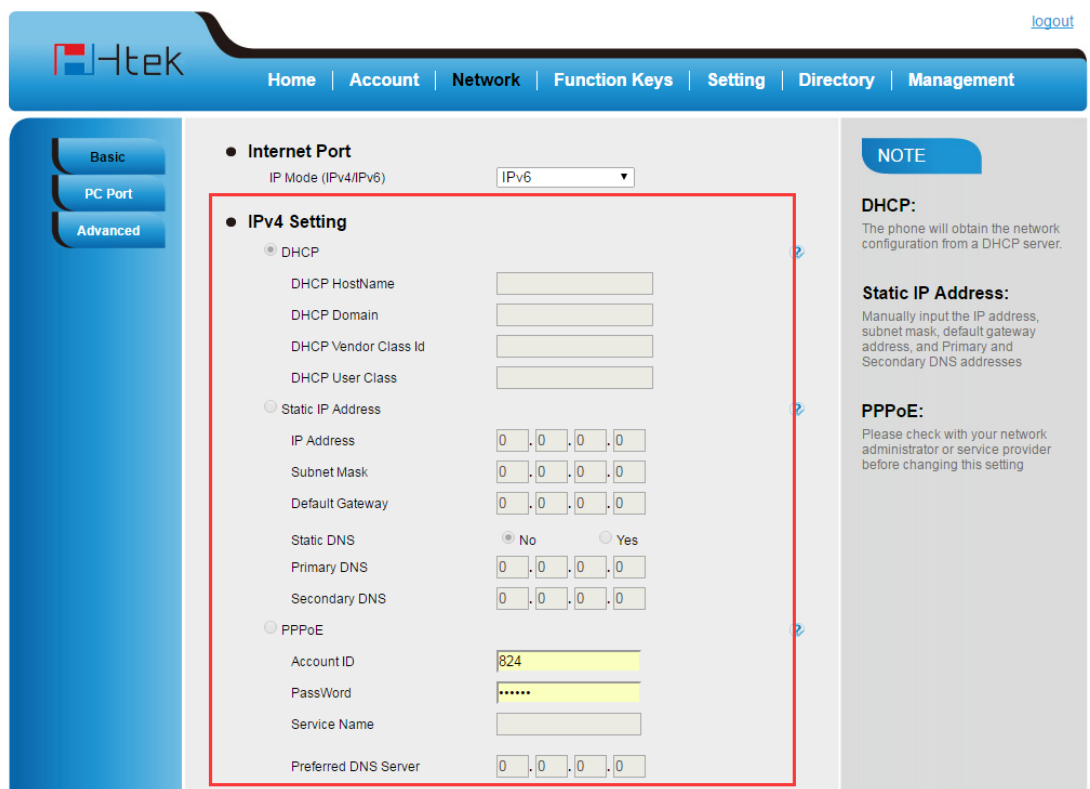

IPv6


If you set IP Mode to IPv6, IP phone will use IPv6 address. IPv4 has two network modes: DHCP, Static


To configure IPv6 via phone interface:

1. Press Menu → Setting → Advanced Settings (password: admin) → Network → WANPort → IP Port Mode.
2. Press or to change the IP Port Mode..
3. Press or Save soft key to save the configuration.



To configure IPv6 via Web interface:

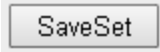1. Click Network→Basic→ Internet Port
2. Select IPv6 for Internet Port
3. Click  for the setting.

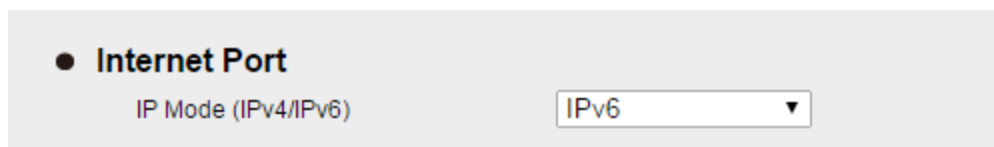**To configure DHCP via phone interface:**


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port IPv6→DHCP mode.
2. Click Save and restart the phone.

To configure a static IP address via phone interface:


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IPv6 →Static mode.
2. Enter the parameters: IP, IPV6 Prefix, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.



3. Click Save and restart the phone.

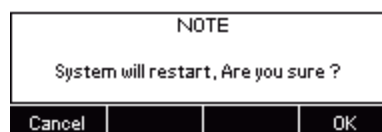**To configure Network via web interface:**

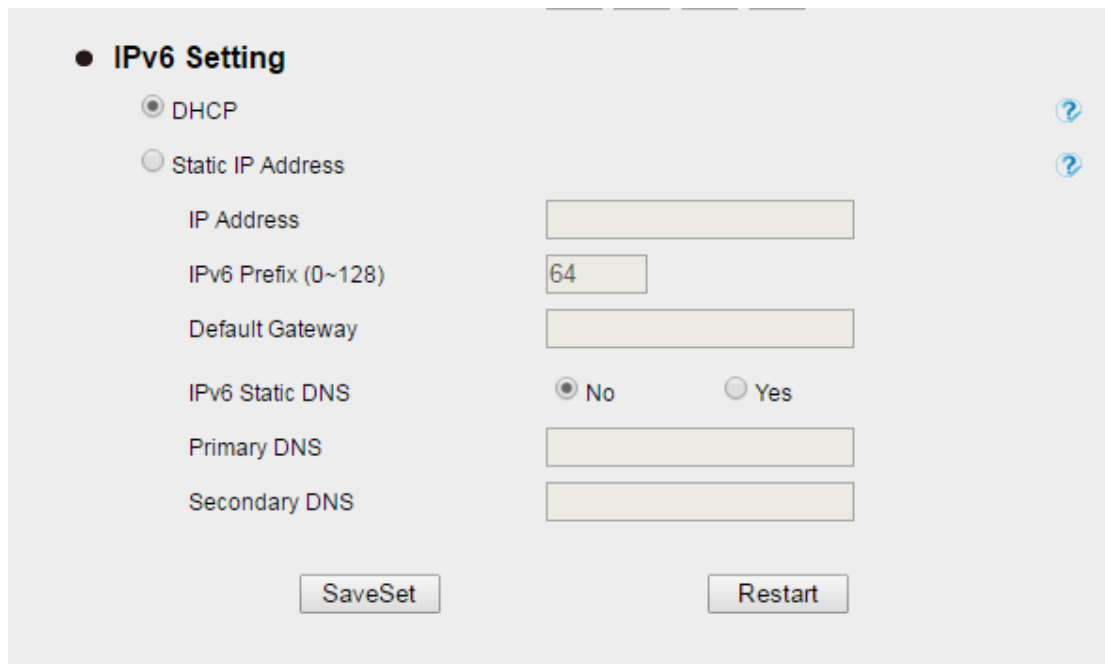


1. Click Network→Basic→IPv6 setting
2. Select the desired Type: DHCP, Static
3. Fill required fields.
4. Click the SaveSet and restart the phone.



IPv4&IPv6


If you set IP Mode to IPv4&IPv6, IP phone will support both IPv4 and IPv6 address. The settings of DHCP, Static, and PPPoE are same as above.


To configure IPv4&IPv6 via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.



To configure IPv4&IPv6 via Web interface:

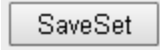1. Click Network→Basic→ Internet Port
2. Select IPv4&IPv6 for Internet Port
3. Click  for the setting.

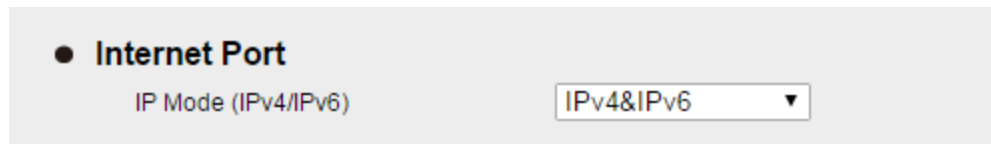

Note:
Wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance. For more information about these parameters, contact your system administrator.

PC Port

Two modes for PC port: bridge and router.

To configure PC Bridge via Phone interface:


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port →Bridge mode.
2. Click Save
3. Click the OK button, then the phone will reboot.

To configure PC router via Phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port →Router mode.
2. Enter the IP, Netmask and DHCP server
3. Click Save.
4. Click the OK button, then the phone will reboot.


To configure Bridge via web interface:

1. Click Network→Basic
2. Select As Bridge
3. Click and the phone will reboot automatically.

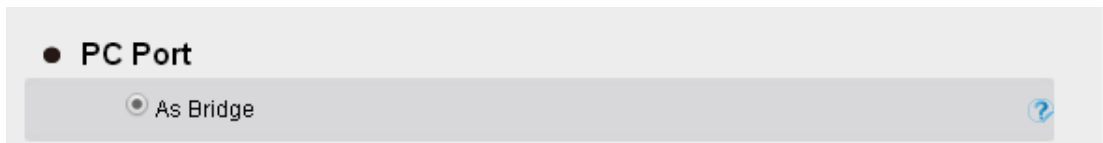

To configure Router via web interface:

1. Click Network→Basic
2. Select As Router
3. Fill the IP address and other necessary information.
4. Click and the phone will reboot automatically

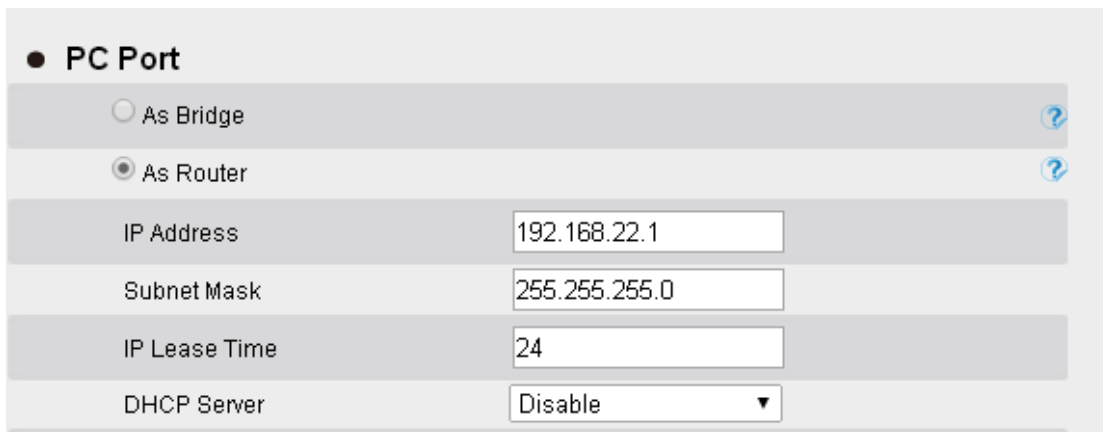

Contact Settings

This section provides the operating instructions for managing contacts. The topics include:

- Local Directory
- Remote Phonebook
- LDAP
- Search Contact

Local Directory

In the directory, you can add or delete your friends, business partner or anyone others' phone No. so you will not forget their number. Or put some anonymous phone No. in the blacklist to prevent from being disturbed. The local Directory can add up to 1000 contacts.


A. To add contacts list into local directory

To add contacts manually via phone interface






1. Press Menu → DIR→ Local Contacts
2. Press Add soft key



A screenshot of a mobile phone's contact addition interface. It shows three input fields: '1.Name: |', '2.Number:', and '3.Mobile Number:'. Below the fields are four buttons: 'Cancel', '2aB', 'Delete', and 'Save'.

3. Enter the necessary information as Name, Phone number ...
4. Press save soft key or  to add the contacts successfully.

To add contacts from History via phone interface

1. Press History soft key or press Menu →History
2. Press  and  to select the targeted one. (Press  and  switched among the All calls, Dialed calls, Received calls, Missed Calls and Forward Calls).
3. Press Option soft key → Add to Contacts
4. Edit the necessary information as Name, Phone number ...
5. Press save soft key or  to add the contacts successfully.

To add contacts via web interface

1. Click Directory→Directory
2. Enter the name, number and some other information.




- Press **Add** and then press **Save** button.

B: To add contacts into blacklist

To add blacklist manually via phone interface

- Press Menu → DIR
- Press and or press Switch soft key to Choose the Local Contact.
- Press More soft key.
- Press More soft key.
- Press Option soft key. Add to blacklist.
- Press save soft key or to add the contacts successfully.

To add blacklist from history

1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one.
3. Press Option soft key → Add to Blacklist
4. Edit the necessary information as Name, Phone number...
5. Press save soft key or  to add successfully.

To import or export the contact list

You can manage your phone's local directory via phone or web interface. But you can only import or export the contact list via web interface.

To import an XML file of contact list via web interface:

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .xml) from your local system.
3. Click Import XML to import the contact list.

To export an XML file of contact list via web interface:

1. Click on Directory
2. Click Export XML to export the contact list.

To import a CSV file of contact list via web interface:

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .csv) from your local system.
3. Click Import Csv to import the contact list.

To export a CSV file of contact list via web interface:

1. Click on Directory

- Click Export Csv to export the contact list.


Note:

If the xml file and CSV file more than 1000 contacts, the phone will only upload 1000 contacts.

Remote Phonebook

To set Remote Phonebook via web interface:

- Login the Web interface and click Directory→Remote Phone Book
- Fill the path of the remote file in the Phone Book URL field.
For example,
<http://192.168.0.240/Phonebook/Phonebook.xml>
- Fill the Name and then click to save the configuration.

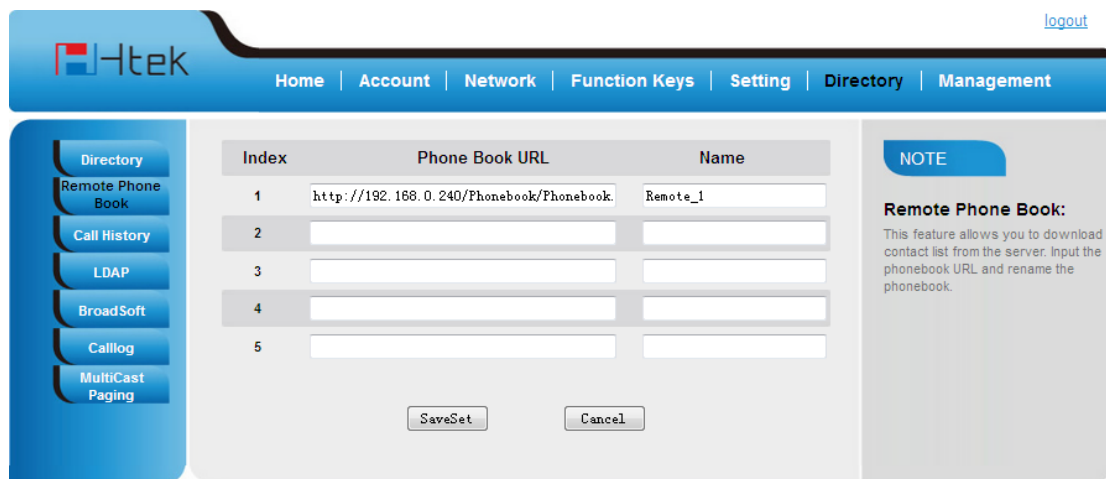

To check the contacts via phone interface:

Press Directory→Left Button→Left Button, and then you can see the item you set, press enter you will find the detail.

For More detail, please refer to: [Remote Phonebook](#) on www.htek.com .

Note:

Every remote contact only supports 1000 contacts.

LDAP Phonebook

When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure LDAP via web interface:

1. Login Web interface and click Directory→LDAP
2. Filled the LDAP Name Filter:
 - a) This parameter specifies the name attributes for LDAP searching. The “%” symbol in the filter stands for the entering string used as the prefix of the filter condition.
 - b) For example (cn=%), when the name prefix of the cn of the contact record matches the search criteria, the record will be displayed on the IP PHONE LCD.
3. Filled LDAP Number Filter:

This parameter specifies the number attributes for LDAP searching.
4. Filled Server Address: Fill the domain name or IP address of the LDAP Server.
For example: 192.168.0.124
5. Port(the port of the LDAP Serve) Base, User Name, Password
6. Max.Hits(1-32000): the maximum number of the search results to be returned by the LDAP server.
7. LDAP Display Name: the display name of the contact record displayed on the LCD screen.
8. Filled the relative value and then click save button the save the settings.

Following is the example screenshot for the configuration.

[logout](#)

Htek Home | Account | Network | Function Keys | Setting | Directory | Management

Directory

Remote Phone Book

Call History

LDAP

Network Directory

MultiCast Paging

LDAP Name Filter: (cn=%)

LDAP Number Filter: ((telephoneNumber=)

Server Address: 192.168.0.9

Port: 389

Base: dc=pbx,dc=com

User Name: cn=admin,dc=pbx,dc=

Password:

Max.Hits(1~32000): 32000

LDAP Display Name: cn

Search Delay(0~2000ms):

Protocol: Version2 Version3

LDAP Lookup For Incoming Call: On Off

LDAP Sorting Results: On Off

LDAP Synchronize Time(0~9999mins):

NOTE

To Configure LDAP Key

To configure LDAP Key via web interface:

1. Click Function Key→Line Key→ choose Line Key 1(for example)
2. Select LDAP in the Type field.
3. Click to save the configuration.

[logout](#)

Htek Home | Account | Network | Function Keys | Setting | Directory | Management

Line Key

Memory Key

Programmable Key

Memory Key	Type	Value	Account	Pickup Code
Key1	LDAP		Account 1	
Key2	N/A		Account 1	
Key3	N/A		Account 1	
Key4	N/A		Account 1	
Key5	N/A		Account 1	

NOTE

Key Type:
The free function key Type Speed Dial,BLF,Key Event,intercom,URL.

BLF:
BLF setting require a phone restart

To Configure LDAP Key via phone interface:

1. Press Menu→Feature→Function Keys→Line Keys as Function Keys→Line Key 1
2. Select LDAP in the Type field
3. Press save or OK key to save the configuration.

When press the LDAP Key the LCD will display as following:




For More detail, please refer to [LDAP Notes](http://www.htek.com) on www.htek.com

Search Contact

You can search contact in all contacts, local contacts, remote contacts and LDAP contact.

To search contact in all contacts:

1. Click the Directory softkey on Idle interface.
2. Click the More Softkey, then you can see the Search softkey
3. Click the Search softkey, you can enter the desired part of name or part of number.
4. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

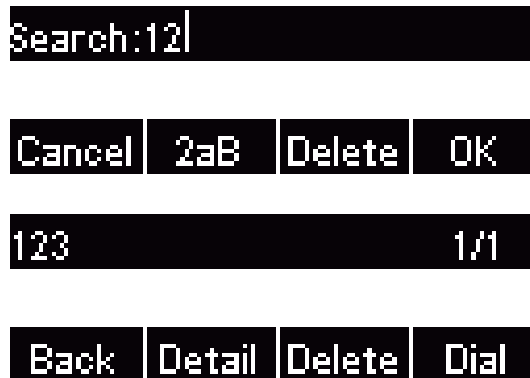


Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

To search contact in Local contacts:


1. Click the Directory softkey on Idle interface.

2. Click the  button and select the Local contacts list.
3. Click the More Softkey, then you can see the Search softkey
4. Click the Search softkey, you can enter the desired part of name or part of number.
5. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

To search contact in Remote contacts:

1. Click the Directory softkey on Idle interface.
2. Click the  button and select the remote contacts list.
3. Select the desired the remote contact and click Enter softkey.
4. Click the Search softkey, you can enter the desired part of name or part of number.
5. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

To search contact in LDAP contacts:



1. Click the LDAP function key.
2. Enter the first character or more of contact's name.
3. Select the desired the remote contact and click Enter softkey.
4. Then IP Phone will display the relevant contacts automatically within Search Delay.

Call History Setting

Call History

This phone maintains call history lists of Dialed Calls, Received Calls, Missed Calls and Forwarded Calls. The call history list supports up to 100 entries in all on phone interface and more than 1500 items. You can check the call history, dial a call, add a contact or delete an entry from the call history list. You should enable the history record feature in advance.

To enable the history record feature via phone interface:


1. Press Menu→Feature→History Setting
2. Press  and  or Switch soft key to enable History record.

3. Press Save soft key to save the configuration.



To check the call history via phone interface :

1. Press the History soft key. The LCD screen displays All Calls list.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press to select the desired entry.
4. Press the Option soft key, and then select Detail from the prompt list.
5. The detailed information of the entry appears on the LCD screen.

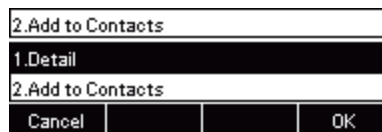

To delete an entry from the call history list via phone interface :

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press UP or DOWN key to select the desired entry.
4. Press the Delete soft key.

To delete all entries from the call history list via phone interface :

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press the Option soft key, and then select Delete All from the prompt list.

4. Press the OK soft key.
5. Press the OK soft key to confirm the deleting or the Cancel soft key to cancel.

To check the call history via web interface:

1. Click Directory → Call History
2. Click Dialed List, Missed List, Received List, Forwarded List then you can see the history list.

Dialled List						Missed List						Received List						Forwarded List						
Index	Date	Time	Local Identity	Name	Tel Number	Index	Date	Time	Local Identity	Name	Tel Number	Index	Date	Time	Local Identity	Name	Tel Number	Index	Date	Time	Local Identity	Name	Tel Number	
1	2014-06-16	04:06:51	800@192.168.0.9	810086	810086																			
2	2014-06-16	04:04:05	800@192.168.0.9	910086	910086																			
3	2014-06-16	03:41:35	800@192.168.0.9	910086	910086																			
4	2014-06-16	03:41:29	225@192.168.0.2	910086	910086																			
5	2014-06-16	03:40:22	225@192.168.0.2	910086	910086																			
6	2014-06-16	03:35:24	800@192.168.0.9	910086	910086																			
7	2014-06-16	03:27:44	800@192.168.0.9	910086	910086																			
8	2014-06-16	03:27:39	800@192.168.0.9	910086	910086																			
9	2014-06-16	03:20:03	800@192.168.0.9	910086	910086																			
10	2014-06-16	02:20:53	800@192.168.0.9	915205188613	915205188613																			
11	2014-06-16	01:37:39	800@192.168.0.9	803	803																			
12	2014-06-16	01:36:32	800@192.168.0.9	803	803																			
13	2014-06-16	01:25:51	800@192.168.0.9	915205188613	915205188613																			
14	2014-06-16	00:47:46	225@192.168.0.2	320	320																			
15	2014-06-16	00:45:43	225@192.168.0.2	320	320																			
16	2014-06-16	00:45:08	225@192.168.0.2	320	320																			
17	2014-06-16	00:42:00	225@192.168.0.2	71	71																			
18	2014-06-16	00:41:55	800@192.168.0.9	71	71																			
19	0000-00-00	00:03:20	225@192.168.0.2	320	320																			
20	0000-00-00	00:03:07	225@192.168.0.2	320	320																			

To dial a call from Call History via web interface:

1. Click Directory → Call History
2. Select the desired history item, and click Tel Number.
3. Then the call is dialed on phone.

Dial List						
Index	Date	Time	Local Identity	Name	Tel Number	
1	2014-06-16	06:07:29	800@192.168.0.9	810086	810086	
2	2014-06-16	04:06:51	800@192.168.0.9	810086	810086	
3	2014-06-16	04:04:05	800@192.168.0.9	910086	910086	
4	2014-06-16	03:41:35	800@192.168.0.9	910086	910086	
5	2014-06-16	03:41:29	225@192.168.0.2	910086	910086	
6	2014-06-16	03:40:22	225@192.168.0.2	910086	910086	
7	2014-06-16	03:35:24	800@192.168.0.9	910086	910086	
8	2014-06-16	03:27:44	800@192.168.0.9	910086	910086	
9	2014-06-16	03:27:39	800@192.168.0.9	910086	910086	
10	2014-06-16	03:20:03	800@192.168.0.9	910086	910086	
11	2014-06-16	02:20:53	800@192.168.0.9	915205188613	915205188613	
12	2014-06-16	04:27:26	800@192.168.0.9	910086	910086	

To Dial a call from Call History via phone interface:

1. Press History soft key or press Menu → History → Local history
2. Press and to select the targeted one.
3. Press the Send soft key, or , or , or the corresponding line key.

Audio setting

Ring Tone


You can adjust the type and volume of the ring tone.


To adjust the Ring Tone Type via Phone interface

1. Press Menu → Setting → Basic Settings → Ring Tone.
2. Press and to select the aimed one.
3. Press or Save soft key to save the configuration.





To adjust the Ring Tone Type via Web Interface

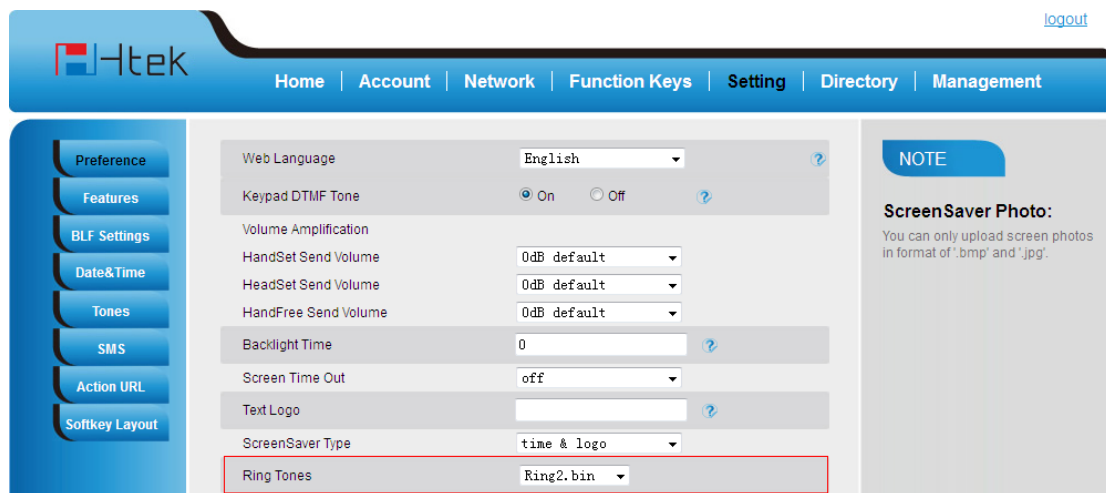

1. Setting → Preference → Ring Tone
2. Select the wanted one
3. Click  to save the configuration.



To configure Distinctive Ring Tone via Phone Interface

1. Press Directory
2. Select the target contact
3. Press Detail soft key to edit the contact.
4. Press  and  to select the wanted Ring Tone for the contact
5. Press Save soft key to save the contact.

To configure Distinctive Ring Tone via Web Interface

1. Directory → Directory → Contact
2. Choose the Ring Tone you want to use.
3. Click  →  to save the configuration.

The screenshot shows the 'Contact/BlackList' configuration page. At the top, there's a 'Contact' tab and a 'BlackList' tab. Below them is a table with columns: Index, Display Name, Office Number, Mobile Number, Other Number, Account, and a checkbox for 'Contacts'. The first row is highlighted in orange and contains: 1, Martin, 863, (empty), (empty), Auto, and checked. Below the table are buttons for 'Save', 'Delete', and 'Move to Contact/blacklist'. The 'Save' button is highlighted with a red box. Below the table are form fields for 'Name' (Martin), 'Office Number' (863), 'Mobile Number', 'Other Number', 'Account' (Auto), 'Ring' (Ring4.bin, highlighted with a red box), 'Group' (Contacts), and 'Photo' (Auto). There are also 'Add', 'Edit', and 'Search' buttons. To the right, there's an 'Import Local Contacts' section with buttons for 'Import XML', 'Export XML', 'Import Csv', and 'Export Csv'. Below that is a 'GroupInfo' section with 'Group' and 'Ring' dropdowns and 'Add', 'Edit', 'Delete', and 'Delete All' buttons. On the far right, there's a 'NOTE' section with instructions for adding, deleting, and moving contacts, and an 'Export' section.

Click [Ring tone](#) for more information.

Volume

You can adjust the volume for the phone by the volume keys: and .

To adjust the Ring tone volume via phone interface

- Option 1: To press and on the idle page



- Option 2: To press and during the call is ringing.

To adjust the handset volume via phone interface

To press and during a call in handset mode.



To adjust the headset volume via phone interface

To press and during a call in headset mode.



To adjust the speaker Volume via phone interface


To press and during a call in speaker mode.



Voice Mail Tone

This option can set whether to play the beep for phone's voice mail


1. Click the Setting → Preference
2. Select On or Off for Voice Mail Tone.
3. Click for the setting.



Play Hold Tone

When you hold the phone, Whether to play hold tone

1. Click the Setting → Preference
2. Set On or Off for Play Hold Tone.
3. Click for the setting.



Play Hold Tone Delay

When you hold the phone. How many seconds to play beep?

1. Click the Setting → Preference
2. Set Enable or Disable for Play Hold Tone Delay.
3. Click for the setting.

Play Hold Tone Delay

System Settings

Dial Plan

Dial plan is a string of characters that governs the way this phone processes the inputs received from your phone keypad. This phone supports dial plan with following accept digits:

1,2,3,4,5,6,7,8,9,0,*,#

Grammar	Description
x	any digit from 0-9;
xx+	at least 2 digit number;
^	exclude;
,	hear dial tone;
[3-5]	any digit of 3, 4, or 5;
[147]	any digit 1, 4, or 7;
<2=011>	replace digit 2 with 011 when dialing.

To configure dial plan via web interface:

1. Click Account—Advanced—Dial Plan.
2. Filled the value in dial plan field.
3. Click to save the configuration.


Note:

Illegal input will fall back to default: {[[*]*+}. For More, please refer to [dial plan](http://www.htek.com) on www.htek.com

Dial-Now Timeout

Dial-Now Timeout means that when you enter the number which is matching with dial plan, it will dial out automatically after some time when you stop entering the number.


To configure Dial-Now Timeout via web interface:


1. Click Web interface Setting → Preference
2. Fill the blank of Dial-Now Timeout: for example 5(seconds).(0 means dial out immediately).
3. Click the  button to save the configuration

No Key Entry Timeout

No Key Entry Timeout means that when you enter the number, it will dial out automatically after some time when you stop enter the number.

To configure No Key Entry Timeout via web interface

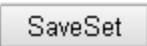1. Click Web interface Setting → Preference
2. Fill the blank of No Key Entry Timeout: for example 5(seconds).0 means never timeout, you should press the send key the dial out the number.
3. Click the  button to save the configuration.

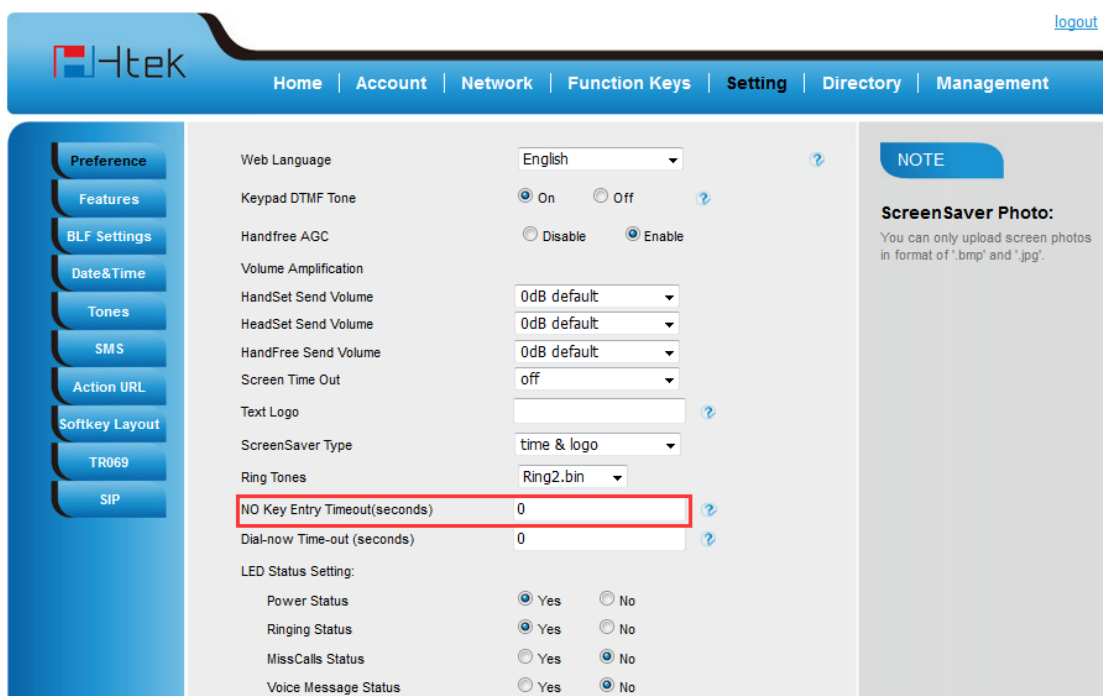

The screenshot shows the Htek web interface with the 'Preference' section selected in the left sidebar. The 'NO Key Entry Timeout(seconds)' field is highlighted with a red box and contains the value '0'. Other visible settings include:

- Web Language: English
- Keypad DTMF Tone: On Off
- Handfree AGC: Disable Enable
- Volume Amplification: 0dB default
- HandSet Send Volume: 0dB default
- HeadSet Send Volume: 0dB default
- HandFree Send Volume: 0dB default
- Screen Time Out: off
- Text Logo: [Empty field]
- ScreenSaver Type: time & logo
- Ring Tones: Ring2.bin
- Dial-now Time-out (seconds): 0
- LED Status Setting:
 - Power Status: Yes No
 - Ringing Status: Yes No
 - MissCalls Status: Yes No
 - Voice Message Status: Yes No

A 'NOTE' box on the right states: 'ScreenSaver Photo: You can only upload screen photos in format of '.bmp' and '.jpg'.'

Emergency Call


Public telephone networks in countries around the world have a single emergency telephone number (emergency services number), that allows a caller to contact local emergency services for assistance when required. The emergency telephone number may differ from country to country. It is typically a three-digit number so that it can be easily remembered and dialed quickly. Some countries have a different emergency

number for each of the different emergency services.

You can specify the emergency telephone numbers on the IP phone for contacting the emergency services in an emergency situation.

To configure emergency call via web interface:


1. Click Setting→Features→Phone Lock
2. Enter the emergency services number in the Emergency field
3. Click SaveSet to save the configuration.

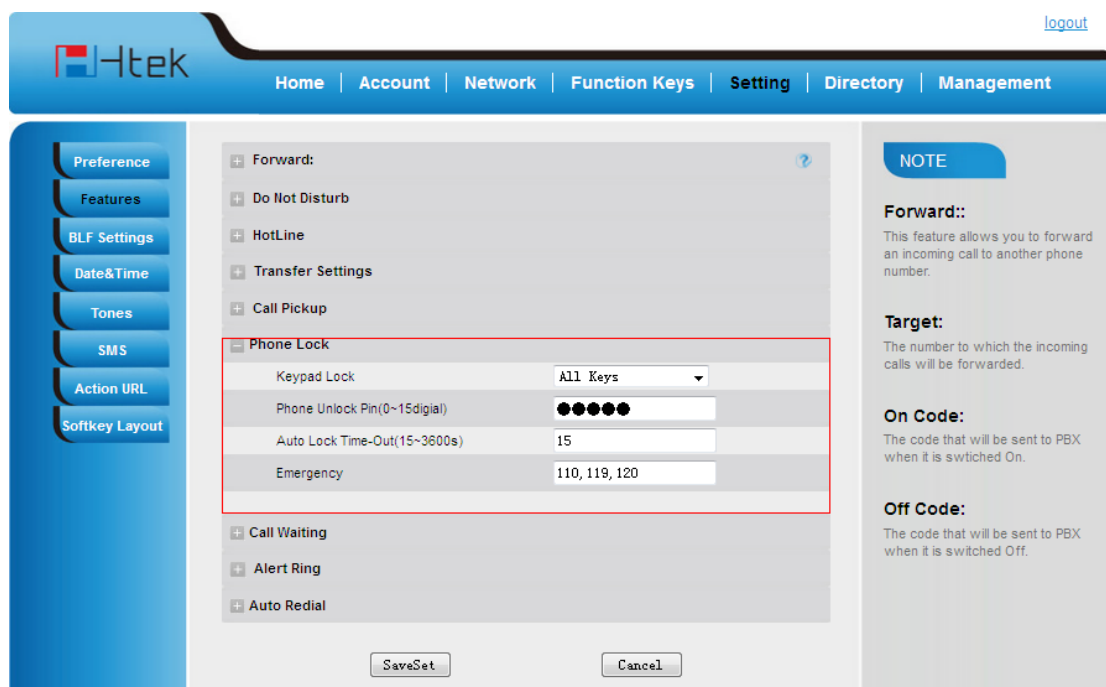

Label Scroll

When setting function keys, you need to set the label of the function keys. If the words are too long to show on the label, you can use this function to make labels scroll. Another approach is to set the labels to long label mode.

To configure Label Scroll via web interface:

1. Click the Setting → Preference
2. Select Enable or Disable for Label Scroll.
3. Click  for the setting.

Lable Scroll	<input type="text" value="Disable"/>
	<input type="text" value="Disable"/>
	<input type="text" value="Enable"/>

Show Missed Calls

Whether to show missed call notification on LCD

To configure Label Scroll via web interface:

1. Click the Setting → Preference
2. Select Yes or No for Show Missed Calls.

3. Click for the setting.

Show Missed Calls	<input checked="" type="radio"/> Yes	<input type="radio"/> No	<input data-bbox="1129 853 1158 882" type="button" value="?"/>
-------------------	--------------------------------------	--------------------------	--

Auto Logout Time

Set the Web login timeout

1. Click the Setting → Preference
2. Set number 1~5000 min for Auto Logout Time.

3. Click for the setting.

Auto Logout Time (1 ~ 5000 min)	<input type="text" value="6"/>
---------------------------------	--------------------------------

Reboot in Talking

This function is to allow reboot during the calls or not

1. Click the Setting → Preference
2. Set Enable or Disable for Reboot in Talking.

3. Click for the setting.


Reboot in Talking	<input type="text" value="Disable"/>
-------------------	--------------------------------------

Detect IP Conflict

LCD can display message when IP conflict

1. Click the Setting → Preference
2. Set Enable or Disable for Detect IP Conflict.

3. Click  for the setting.




Redial Mode

Call redial has two ways:(1) To redial the last placed call from the IP Phone (2) To redial the call from all calls list

1. Click the Setting → Preference
2. Set Direct Mode or Select Mode for Redial Mode.

3. Click  for the setting.




Suppress DTMF Display

In order to ensure safety in Call process, you can choose whether to hide DTMF

1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display.

3. Click  for the setting.




Suppress DTMF Display Delay

In order to ensure safety in Call process, you can choose whether to hide DTMF

1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display Delay.

3. Click  for the setting.




Check-Syn With Authenticate

If this option is enabled, the server needs to be authenticated before the phone agrees to synchronize.

1. Click the Setting → Preference
2. Set Enable or Disable for Check-Syn With Authenticate.

3. Click  for the setting.



Other features settings

Action URL

To configure action url via web interface:

1. Click Setting→Action URL
2. Fill the needed values in the designated blank spaces.






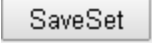
3. Click  to save the setting.

Click [Action URL](#) for more how to use, or check on www.htek.com

Softkey Layout

This feature mainly defines which shown on the soft key in some status. For example, what the soft key displays when dialing, or talking.

To configure Soft key via web interface :

1. Click Setting→Softkey Layout
2. Select Enable for Custom Softkey
3. Select call States.
4. Select the feature form the disable key to enable key field by 
 Disable to Enable field.  Delete the Enable, and it will back to Disable field.
5. Click  or  to change to position or each feature.
6. Click  to save the configuration.

Note:

1. When there more than 5 items in the Enable field, the last softkey will display More, and last two item will show in the next page softkey, you can check by press more.


Programmable Key

For the default keys as Soft keys, Navigation keys and so on, you can define them as some specific feature, and it works only on the idle page.

To configure Programmable Key via web interface:

1. Click Function Keys→Programmable Keys
2. Select the desired Key to set.

3. Click  to save the setting.

4. By clicking , all setting of the keys will be back to default.

[logout](#)

Htek

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key
Programmable Key

Key	Type	Label	Account	Value
SoftKey1	History		Account 1	
SoftKey2	Directory		Account 1	
SoftKey3	DND		Account 1	
SoftKey4	Menu		Account 1	

Key	Type	Account	Value
Up	History	Account 1	
Down	Directory	Account 1	
Left	Switch Account Up	Account 1	
Right	Switch Account Dov	Account 1	
OK	Status	Account 1	
Cancel	N/A	Account 1	
MUTE	N/A	Account 1	


NOTE

Basic Call Features



Place a Call

There are three ways to dialing a call: Handset, Headset and Hands-free speakerphone.

To place a call by Handset

1. Pick up the handset, or press a line key and dial the necessary number.
2. Press  or press the send softkey, then the call is sending.

To place a call by Headset:

1. Press the  (light is Green)
2. Enter the desired number.
3. Press  or press the Send softkey, then the call is sending.

Using headset to place and answer calls for all time

1. Click Web interface Setting → Preference
2. HeadSet Priority → Enable

3. Ring Device For HeadSet → User Headset

4. Press

Refresh Caller Id Via Contact	Disable
HeadSet Priority	Enable
Ringer Device For HeadSet	Use Speaker
Redial Mode	<input checked="" type="radio"/> Direct Mode <input type="radio"/> Select Mode
Intercom Barge	<input type="radio"/> On <input checked="" type="radio"/> Off
Show Missed Calls	<input checked="" type="radio"/> Yes <input type="radio"/> No
Suppress DTMF Display	<input type="radio"/> Off <input checked="" type="radio"/> On
Suppress DTMF Display Delay	<input type="radio"/> Off <input checked="" type="radio"/> On
Voice Mail Tone	<input checked="" type="radio"/> On <input type="radio"/> Off
Busy Tone Timer (0~5s)	4


Placing a call by hands-free speakerphone

1. Press the , or press the Line key, then you can hear the dial tone.
2. Press the number.
3. Press or press the Send soft key, then the call is sending.


To place a call by call history or Directory via phone interface

1. Press the History soft key (On the idle page) or Menu → History /Directory
2. Press and to select the targeted one.
3. Press the Send soft key, or , or , or the corresponding line key, then the call is sending.

Note:

1. The  key is set to be a send key. For more information, refer to the Key as Send on page
2. During the call, you can also change among Headset, Handset or Free-speaker mode.

Making two calls with one line and one account

1. Press a line key and dial one phone number, then make a call.
2. Press the corresponding line key
3. Dial another phone number,
4. Press the Send soft key, or , then make the second call.



End a Call

Here shows to end a call during three modes:



To end a call by Handset

Press the Cancel soft key or hang up the handset, or press .

To end a call under Headset Mode

Press the Cancel soft key or press , or press .


To end a call under hands-free speakerphone Mode

Press the Cancel soft key or press , or press .

Note:

During the conference, to end the call is same as mentioned above.

Redial a Call

1. To redial the last placed call from the IP Phone
2. Press  directly when LCD is on the idle interface.


Receive a Call

There are three ways to receive a call when the phone is ringing:


To receive a call by handset

Pick up the handset the conversation is built.


To receive a call by headset

Press  and now the conversation is built.

To receive a call by hands-free speaker

1. Option 1: Press  directly.
2. Option 2: Press Answer soft key.
3. Option 3: Press the Line key (flashes red).

Moreover, some other action can be done by soft key when the call is coming.

1. To press the Reject soft key to reject the call. Or press  to reject the current call.
2. To press Forward softkey to forward to another phone.
3. To press Silence soft key, and then the call will keep silent, no ring tone display.

Incoming Call Show Mode

There are two incoming call show modes for this phone:

1. name and number of the contacts
2. name and number of the incoming call and the account which is connecting

To set incoming call show mode via web interface:

1. Click setting → preference
2. Select the desire mode for the incoming call show mode

3. Click to save the setting.

LED Status Setting:	
Power Status	<input checked="" type="radio"/> Yes <input type="radio"/> No
Ringing Status	<input checked="" type="radio"/> Yes <input type="radio"/> No
MissCalls Status	<input type="radio"/> Yes <input checked="" type="radio"/> No
Voice Message Status	<input type="radio"/> Yes <input checked="" type="radio"/> No
Incoming Call Show Mode	<input checked="" type="radio"/> Peer Name & Peer Number <input type="radio"/> Peer Name & Peer Number & Self Name

Auto Answer

Enable auto answer feature, you will answer all incoming call automatically.

To enable Auto Answer via Web interface

1. To Click Account → Advanced
2. To choose Yes for the Auto Answer.
3. To click Saveset to save the configuration.

Send Anonymous	<input checked="" type="radio"/> No <input type="radio"/> Yes ?
Anonymous Call Rejection	<input checked="" type="radio"/> No <input type="radio"/> Yes
Check SIP User ID	<input checked="" type="radio"/> No <input type="radio"/> Yes
Auto Answer	<input type="radio"/> No <input checked="" type="radio"/> Yes
Allow Auto Answer By Call-Info	<input type="radio"/> No <input checked="" type="radio"/> Yes
Turn off Speaker on remote disconnect	<input type="radio"/> No <input checked="" type="radio"/> Yes

To Disable Auto Answer via Webpage

1. To Click Account → Advanced
2. To choose No for the Auto Answer.

3. To click Saveset to save the configuration.

Call Hold

When use hold feature, the Hold icon will show on the display.

To make a call on hold during three modes:

To hold a call under handset mode:

1. Press Hold soft key to hold the current call.



2. Press Resume soft key to resume the call on hold.



To hold a call under headset mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

To hold a call during the speaker mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

Call Transfer

This phone supports blind, attended and Semi-Attended Transfer.

Blind Transfer

When you use this feature, you can transfer

1. Press Transfer soft key during the conversation, the call is on hold now.




2. Enter the number that transfers to.



3. Press Transfer soft key , and now the blind transfer completed.

Attended Transfer


When you use this feature, you can

1. Press transfer soft key during the conversation, the call is on hold now.
2. Enter the number that transfer to, and press the send soft key or .
3. Start the second conversation, press the transfer soft key, then, transfer completed.

NOTE:

To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains. Blind transfer will usually use the primary account SIP profile.


Semi-Attended Transfer

1. Press the transfer soft key during the conversation, the call is on hold now.
2. Enter the number transfer to, and then press , then you can hear the ring tone.
3. Press the Transfer soft key, and now the Semi-attended transfer completed.

BLF Transfer

1. Set a Programmable Key or line key is set as BLF. For how to set BLF, please refer to [BLF](#)
2. Press the transfer soft key during the conversation, the call is on hold now.


3. Press BLF key then realize blind, attended and Semi-Attended Transfer. (Webpage--Setting--Features)

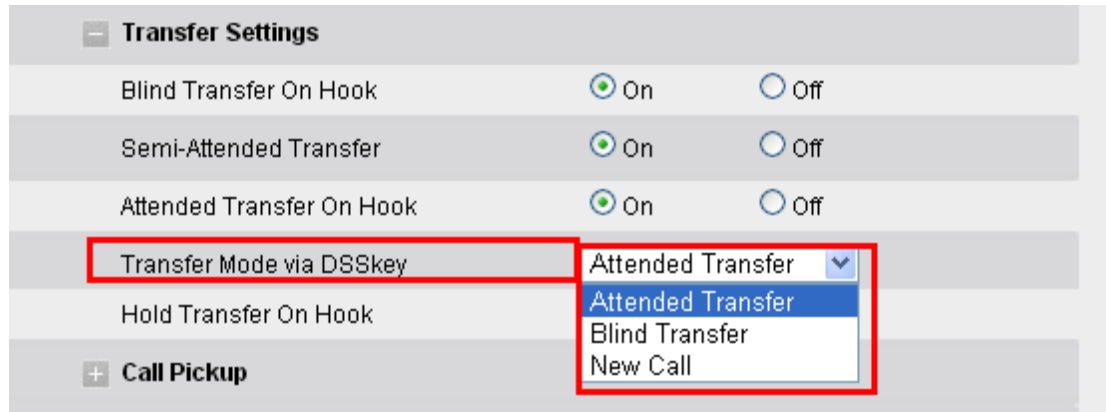

Hold transfer on hook:

Setting → Features → Transfer Setting: Hold Transfer On Hook: ON.



A place a call to B, B answer, A press the hold softkey and place a call to C, A cancel the call when C is ringing or answering, then C and B in the same call and the transfer is successful.

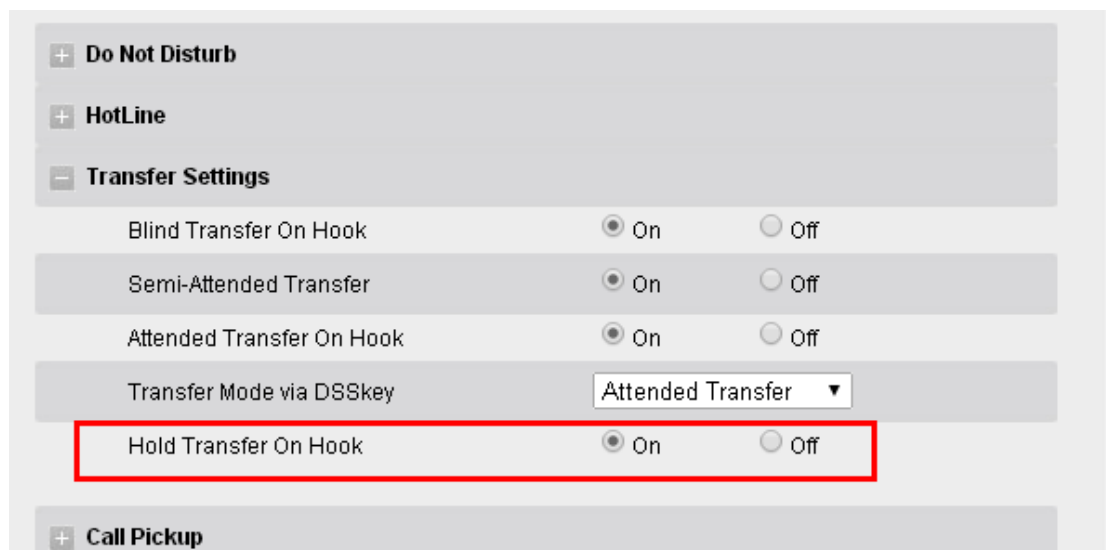

Transfer to New Call via web interface

1. Click Setting → Feature
2. Select Transfer Mode via DSS key → New Call

3. Select the desired Line or Line Key and select Transfer in the Type.
4. Enter the phone number in the Value field.

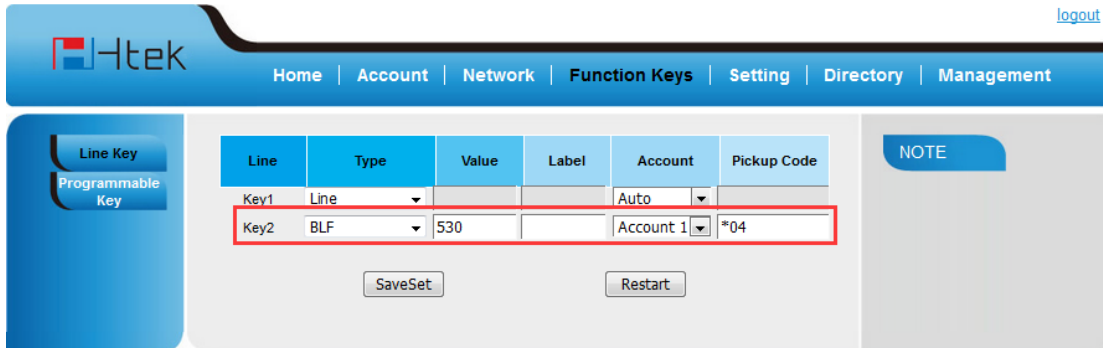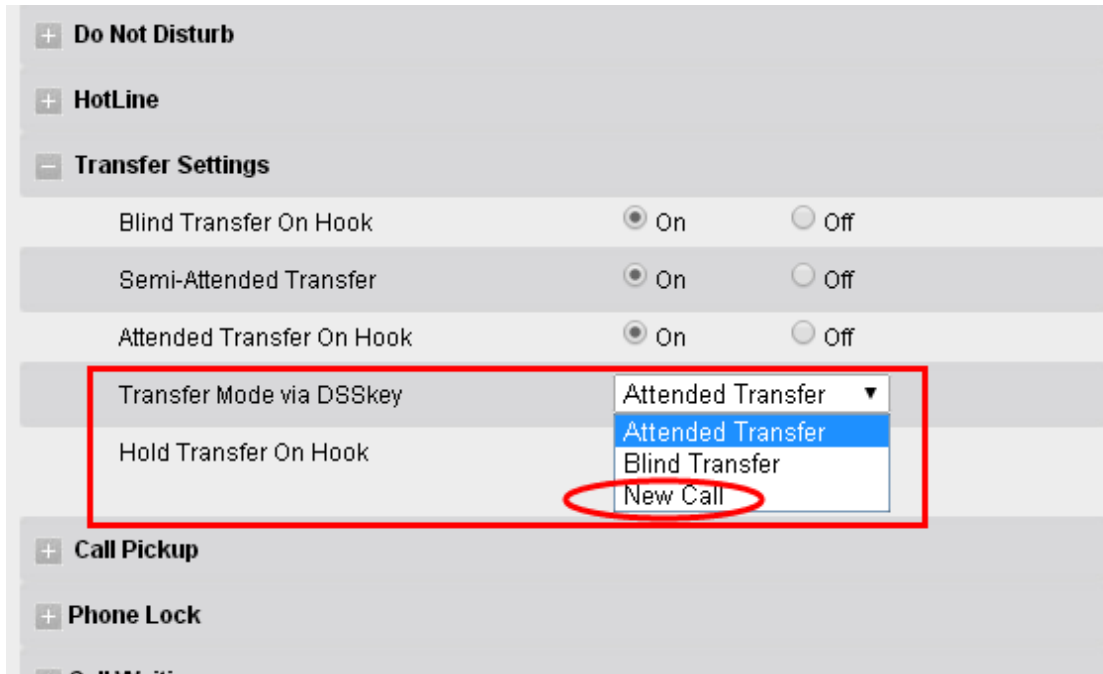


Note: if the person that wanted to be spoken to do not want to answer the call, then the person that answered the coming call could use this function.

Call Conference



This IP Phone supports up to 5-way conference.

5-way conference

1. Assuming that call party A and B are in conversation. A wants to bring C, D and E in a conference

2. A press line 2 key, the call is placed on hold.
3. A enter the number of C and then press send soft key or .
4. C answering the call.
5. A press conference soft key, then A, B and C are now in a conference.(and now this is **3-way conference**)



6. A press line key 3, the current 3-way conference is placed on hold.
7. A enter the number of D and then press send soft key or .
8. D answering the call.
9. A press the conference soft key, then A, B, C and D are now in a conference.(and now this is 4-way conference)
10. A press line key 4, the call is placed on hold.
11. A enter the number of E and then press send soft key or .
12. E answering the call.
13. A press the conference soft key, then A, B, C, D and E are now the **5-way conference** is built.
14. A end the call, the conference is finished.

Note:

1. If C does not answer the call, A can back to continue the conversation with B;
2. Once A hangs up the call, the conference is ended, while if B or C drops the call, A&C or A&B conversation continues.
3. The conference feature is not available on all servers. For more information, contact your system administrator.
4. To realize the 5 way conference, the line should be all available.



Call Forward

This phone supports static forward (always forward, busy forward and no answer forward) and dynamic forward


To configure static forward

To configure always forward

With this feature, all incoming calls will forward immediately to configured number.




1. Press Menu → Features → Call forward →Always Forward.
2. Press  and  or press info soft key to select the enable choice



3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.




To configure busy forward

With this feature, the incoming calls are immediately forwarded if the phone is busy.

1. Press Menu →Features → Call forward →Busy forward.
2. Press  and  or press info soft key to select the enable choice.
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.


To configure no answer forward

No Answer Forward: Incoming calls are forwarded if not answered after some time.

1. Press Menu → Features → Call forward → No answer forward.
2. Press  and  or press info soft key to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.

When the Forward feature is enabled, the Forward Icon will display on Top of the LCD.

To configure Forward via Web Interface

1. Setting → Features
2. Click On for the Always/Busy/No Answer
3. Fill the Forward to Number
4. (Optional) fill the on/off code
5. Click  to save the configuration

To cancel the forward feature via Phone Interface

1. Press Menu → Features → Call forward → Always/Busy/No answer Forward
2. Press and or press info soft key to select the disable choice
3. Press or Save soft key to save the configuration.

To cancel the forward feature via Web Interface


1. Setting → Features
2. Click Off for the Always/Busy/No Answer
3. Click to save the configuration

To configure dynamic forward

Forward an incoming call during the ringing.

1. When the phone is ringing, press Forward soft key.



2. Enter the forward number or select the desired number from Directory softkey (Precondition: local directory has one or more contacts).
3. Press  or press the send soft key, then the call is forwarded.






Note:

If the Programmable Key or line key is set as BLF, when an incoming call ringing, press this BLF key directly to realize the dynamic forward. You can choose a desired forward number from the Directory when you press the Forward key.


Call Return

This feature allows you to dial the last phone call you received.

To configure the Call Return via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press info soft key to select the Key Event in the type field.
4. Press  and  or press info soft key to select the Call Return.
5. Press  or Save soft key to save the configuration

To configure the Call Return via Web interface

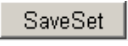1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Call Return in the Type.
3. Click the  button to save the configuration.

Call Back


When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for call-back, as shown in figure



If you press the callback, the phone will dial the Callback phone number.

To configure the Call Back via Web interface


1. Click Setting → Features → Callback .
2. Fill the Callback phone number.
3. Click to save the configuration.

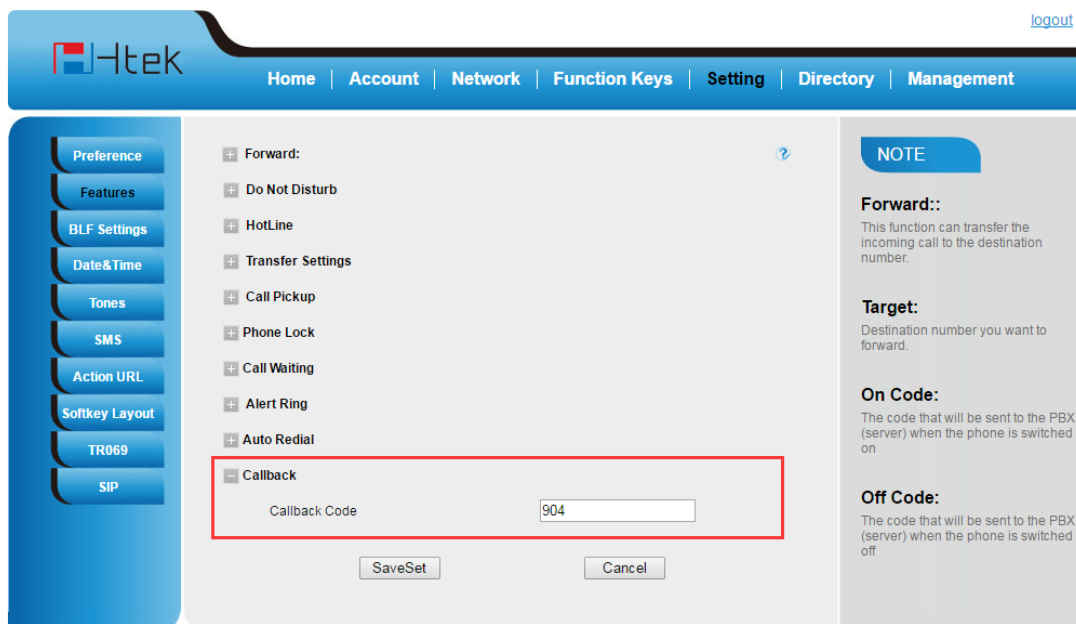

Call Waiting Tone


1. Click Setting → Features

2. Select Call Waiting: On and Call Waiting Tone: On

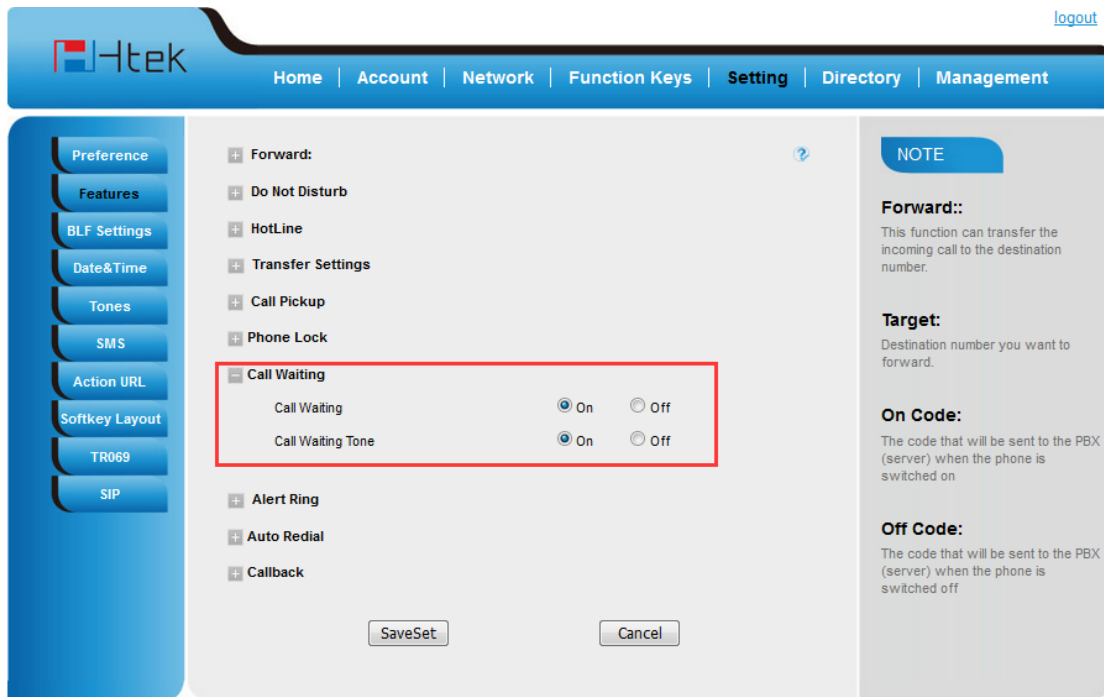

To Change the Call Waiting Tone time via Web interface

1. Click Setting → Tones

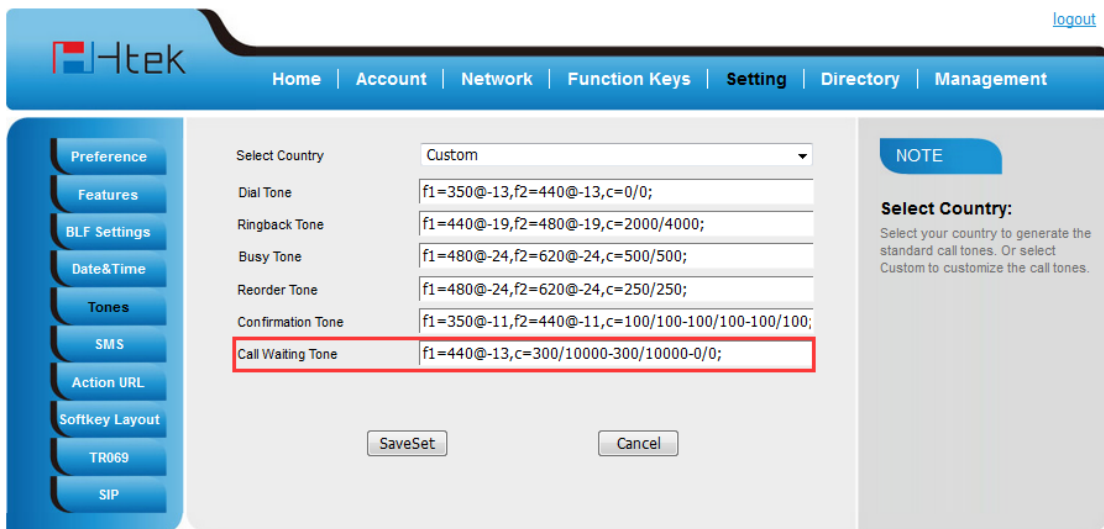






2. Change the Tone Time as you want (for example 3s)






Hide Caller ID

Just enable the unknown/hidden caller feature, by enabling Anonymous call feature thereby the receiver won't be able to know who is calling them.

To configure anonymous call

1. Press Menu →Features →Anonymous Call
2. Press  and  or press info soft key to change the Line ID
3. Press  and  or press info soft key to select the enable choice in Anonymous Call filed.
4. Enter the call on code (optional), call off code (optional).
5. Press  or Save soft key to save the configuration.

To cancel anonymous call feature






1. Press Menu →Features →Anonymous Call
2. Press  and  or press info soft key to select the disable choice in Anonymous Call filed.
3. Press  or Save soft key to save the configuration.

Reject Anonymous




If you do not want to be disturb by anonymous calls, you can set the reject anonymous call features, so you will not hear the unknown calls

To configure rejecting anonymous call

1. Press Menu →Features →Anonymous Call

2. Press  and  or press info soft key to change the Line ID
3. Press  and  or press info soft key to select the enable choice in Rejection filed.
4. Press  or Save soft key to save the configuration


To cancel rejecting anonymous call

1. Press Menu →Features →Anonymous Call
2. Press  and  or press info soft key to select the disable choice in Rejection filed.
3. Press  or Save soft key to save the configuration.

Call Mute

When you use the Mute feature, the other parties will not hear your voice while you can hear their voice. Call mute applies to all modes (handset, headset, and speakerphone).

To mute the call during a call (including a conference call)

1. Press the mute key , then the mute key glows green, and the LCD display Mute Icon.



2. To disable the mute function, press  again.

DND

When you use the DND feature, the phone is to reject all incoming calls automatically and

you can see the DND icon shown on the Top of the LCD on idle page.

To enable DND feature

Press the DND soft key when the phone is idle, and then DND icon shown on the LCD.

To disable DND feature

Press the DND soft key again, and then there is no DND icon on the LCD.

Keypad Lock

To enable Keypad Lock via Phone interface


1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change choose lock type: All Keys Menu Key Function Key Lock & Answer
3. Press Save or OK key to save the configuration.

To disable Keypad Lock via Phone interface

1. Press Menu--Settings--Advanced Setting(Password: admin)--Phone Setting--Lock
2. Press Info or Switch to change to choose Off.
3. Press Save or OK key to save the configuration.

To enable Keypad Lock via Web interface

1. Click Web interface Setting → Features
2. To choose the Phone Lock.
3. To fill the unlock PIN and auto lock time
4. Fill the Emergence Number, when the phone is Lock, only Emergency Number can be sent.
5. To click Saveset to save the configuration.

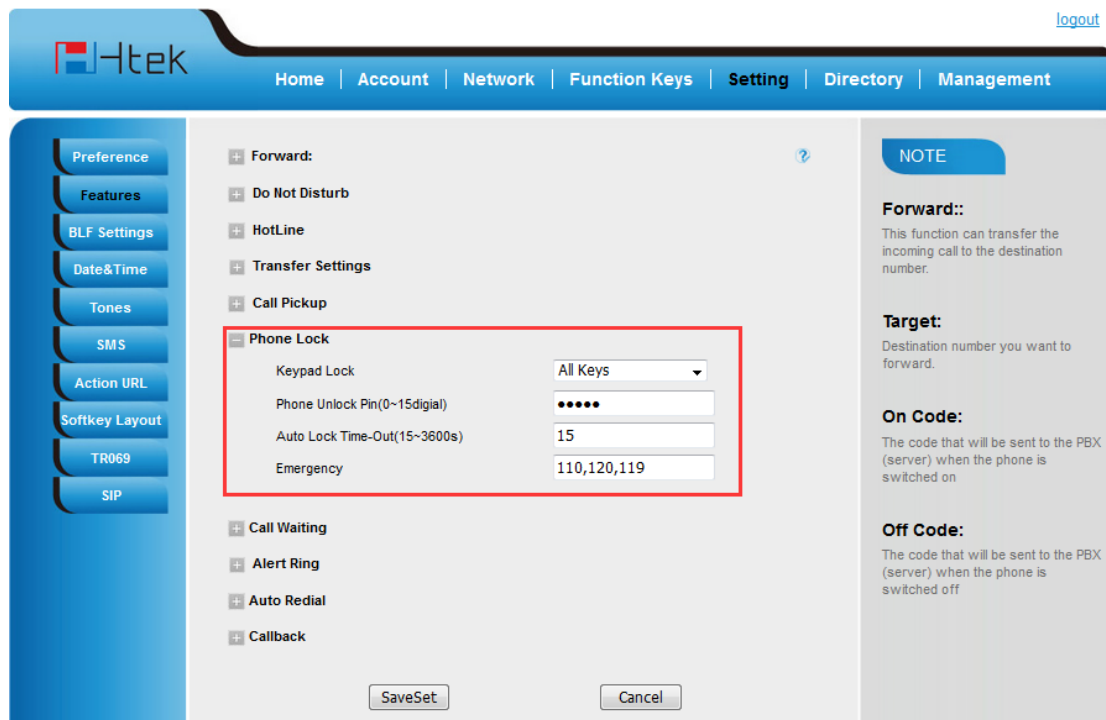


To Disable Keypad Lock via Web interface

1. Click Web interface Setting → Features
2. To choose Disable for the Phone Lock.
3. To click Saveset to save the configuration.


Hot Line

To configure Hot Line

1. Press Menu → Features → Hot Line
2. Enter the Number and delay time (as present, we support off hook auto dial).
3. Press  or Save soft key to save the configuration

To configure Hotline auto dial via Web Interface

1. Setting → Features.
2. Fill the number in the Hotline Number and Hotline Time-out.
3. Click **SaveSet** to save the configuration.

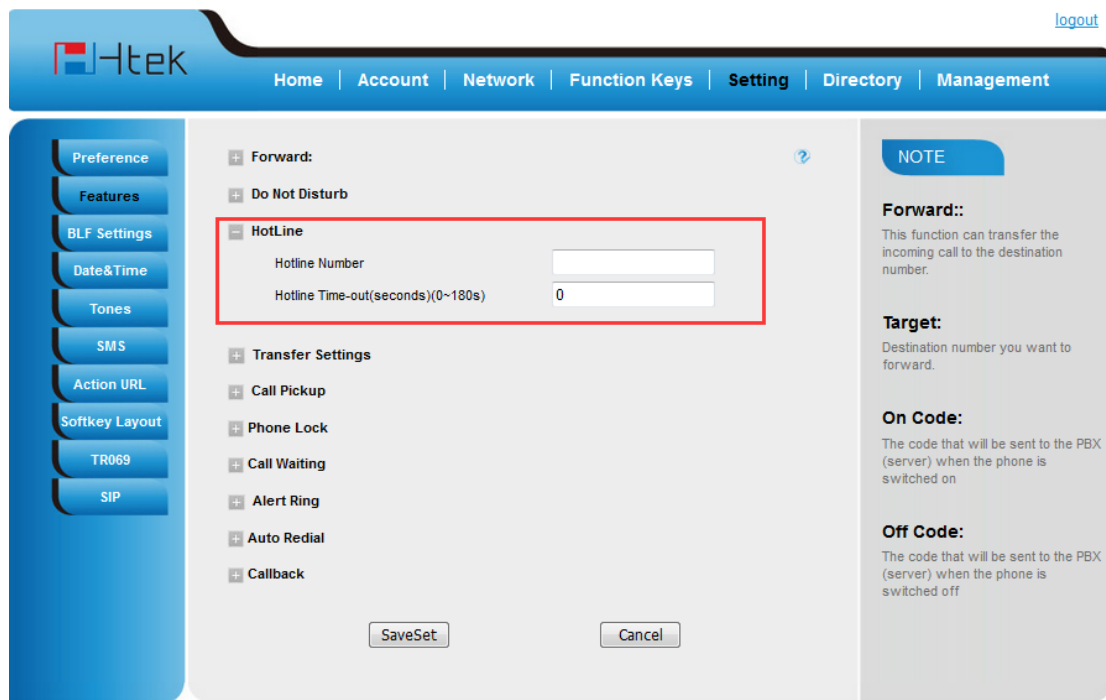

Delete the hotline number and save the configuration, then now the Hotline auto dial is cancelled.

Auto Redial

When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for Auto Redial, as shown in figure.



If you press OK, your LCD will prompt Auto Redial Interval and Auto Redial Times



To configure Auto Redial via Web Interface

1. Click Setting → Features → Auto Redial
2. Select On or Off for Auto Redial.
3. Fill the number 1~300 seconds for the Auto Redial Interval.
4. Fill the number 1~300 times for the Auto Redial Times.
5. Click **SaveSet** to save the configuration.

The screenshot shows the Htek web interface for configuring features. The top navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. A sidebar on the left lists various settings categories, with 'Features' selected. The main content area displays the 'Auto Redial' configuration page. The 'Auto Redial' section is highlighted with a red box. It includes a checkbox for 'Auto Redial' (checked), radio buttons for 'On' and 'Off' (selected), and two input fields: 'Auto Redial Interval (1~300s)' and 'Auto Redial Times (1~300)', both containing the value '3'. Below this section is the 'Callback' section with a 'Callback Code' input field. At the bottom, there are 'SaveSet' and 'Cancel' buttons. A 'NOTE' section on the right provides details for 'Forward:', 'Target:', 'On Code:', and 'Off Code:'.


Function Key Features and Settings

Line

It works same as Line keys.

To configure Line Feature via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the wanted Key and set as Line.
3. Select the Account.
4. Click the SaveSet button to save the configuration.

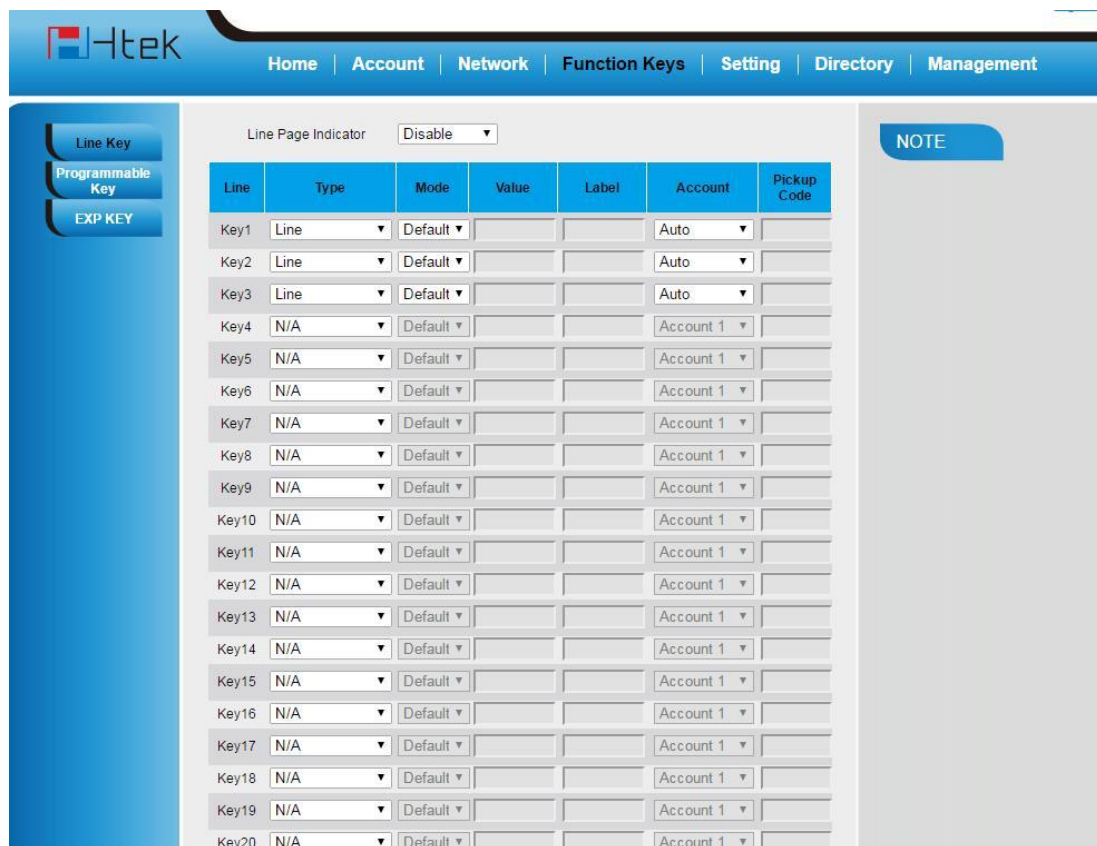




Speed Dial

With this feature, you can dial one number by pressing the configured speed dial key.


To configure Speed Dial feature via phone interface


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)

2. Press  and  key to select the Speed Dial in the type field.
3. Enter the targeted Number.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as Speed Dial.

To configure Speed Dial feature via Web Interface

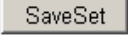1. Click Function keys → Line or Line Key.
2. Select the wanted Line or Line Key and set as Speed Dial.
3. Enter the desired phone number in the Value field.
4. Select the Account ID
5. Click the  to save the configuration.

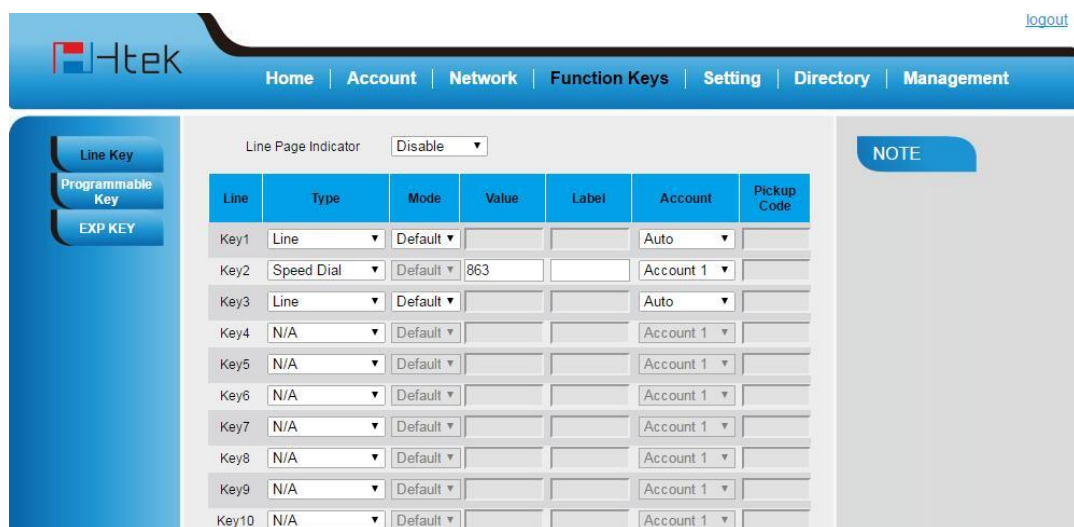

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Speed Dial	Default	863		Account 1	
Key3	Line	Default			Auto	
Key4	N/A	Default			Account 1	
Key5	N/A	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	
Key10	N/A	Default			Account 1	






BLF

You can use the BLF (Busy Lamp Field) feature to monitor a specific extension number whether the extension is busy or free.


1. When the extension you are monitoring is idle, the light is steady green.

2. When the monitored extension is ringing, the light is blinking red, press the BLF key to pick the phone up directly.
3. When the monitored extension is calling or in a conversation, the light is steady red.

To configure a BLF key by phone

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example).
2. Select the targeted Line or Line Key.
3. Press  and  or press info soft key to select the BLF in the type field.
4. Enter the targeted Value Number.
5. Press  and  to select the Account ID.
6. Enter the Pickup Code.
7. Press  or Save soft key to save the configuration

To configure a BLF key by web

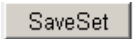1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select BLF in the Type.
3. Enter the monitored phone number in the Value field.
4. Select the Account ID
5. Filled the Pickup code.
6. Click  to save the configuration.

Note :

This feature is not available on all servers. For more information, contact your

system administrator.

After setting the BLF key, do not need to restart the phone.

BLF List

To configure BLF List via web interface:

1. Login and click Account

* Account Active	<input type="radio"/> No <input checked="" type="radio"/> Yes	
* Primary SIP Server	<input type="text" value="as.iop2.broadworks.net"/>	?
Failover SIP Server	<input type="text"/>	?
Second Failover SipServer	<input type="text"/>	?
Prefer Primary SIP Server	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
Outbound Proxy	<input type="text"/>	?
* SIP Transport	<input checked="" type="radio"/> UDP <input type="radio"/> TCP <input type="radio"/> TLS	?
NAT Traversal	<input type="radio"/> No <input checked="" type="radio"/> No,but send keep alive <input type="radio"/> STUN	
Lable	<input type="text"/>	?
* SIP User ID	<input type="text" value="2404984031"/>	?
* Authenticate ID	<input type="text" value="2404984031"/>	?
* Authenticate Password	<input type="text" value="*****"/>	?
Name	<input type="text" value="4031"/>	?
DNS Mode	<input checked="" type="radio"/> A Record <input type="radio"/> SRV <input type="radio"/> NAPTR/SRV	

2. Click Advanced and then fill the Eventlist BLF URL.

UAC Specify Refresher	<input type="radio"/> UAC
	<input type="radio"/> UAS
	<input checked="" type="radio"/> Omit(Recommended)
UAS Specify Refresher	<input checked="" type="radio"/> UAC
	<input type="radio"/> UAS(When UAC did not specify refresher tag)
Force Invite	<input checked="" type="radio"/> No <input type="radio"/> Yes ?
Hook Flash Timing	minimum: <input type="text" value="30"/> maximum: <input type="text" value="100"/> ?
Special Feature	<input type="text" value="Standard"/>
Eventlist BLF URL	<input type="text" value="blf_sales"/>
Shared Line	<input type="text" value="Disable"/>
SIP Server Type	<input type="text" value="Default"/>

3. To configure BLF List Keys

3.1 Click→Function Keys→Line Key

3.2 Select the BLF List in the Type Field.


3.3. Select Account

3.4 Click Saveset to save the configuration and then restart the Phone.


For more information, please check [BLF list Note](#) on www.htek.com web.

Voice Message






To configure the Voice mail feature via phone interface

1. Press Menu→Messages→Voice Mail→Set Voice Mail.
2. Enter the AccountNO.1/2/3
3. Press  or Save soft key to save the configuration

To configure Voice Mail Line Key via Web Interface:

1. Click Function keys → Line Key.
2. Select the wanted Key.
3. Enter the desired voicemail feature codes in the Value field.
4. Fill the Label name to be displayed on LCD.
5. Select the Account.
6. Click  to save the configuration.

To configure a Voice mail key by phone interface:


1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys→Line Key1(for example).
2. Select the targeted Line or Line Key.
3. Press  and  key to select the Voice mail in the type field.
4. Enter the Value Number.
5. Press  and  key to select the Account ID.
6. Press  or Save soft key to save the configuration

To leave a voice mail:

You can leave a voice mail when the receiver is busy or its inconvenient for them to answer the call. Follow the voice prompt from the system server to leave a voice mail, and then hang up.

To listen to voice mails:

When the phone interface prompts receiving new voice mail's icon, the power indicator LED flashes red(Setting->Preference: Enable Voice Message Status).

1. Pressing  or the targeted Line or Line Key to dial out the voice mail access code.
2. Follow the voice prompt to listen to voice mail.

To view the voicemail via phone interface

Press Menu->Messages->Voice Mail->View Voice Mail.

The LCD screen displays the amount of new and old voice mails

```
1.361:1 new, 2 old, 0 new urgent, 0 old urgent
2.Account2:Not Registered
3.Account3:Not Registered
Back
```

Note :

This feature is not available on all servers. For more information, contact your system administrator.




Before listening to voice mails, make sure the voice mail access code has been configured.

When all new voice mails are retrieved, the power indicator LED will go out.

Direct Pickup

With this feature, you can pick up the set line when it ringing.


To configure Direct Pickup feature via phone interface


1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  key to select the Speed Dial in the type field.
3. Enter the value.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as Direct Pickup.

To configure Direct Pickup feature via Web Interface

1. Click Function keys → Line or Line Key.

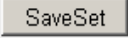2. Select the wanted Line or Line Key and set as Direct Pickup.
3. Enter the pickup code and followed the desired phone number in the Value field.
4. Select the Account ID
5. Click the  button to save the configuration.

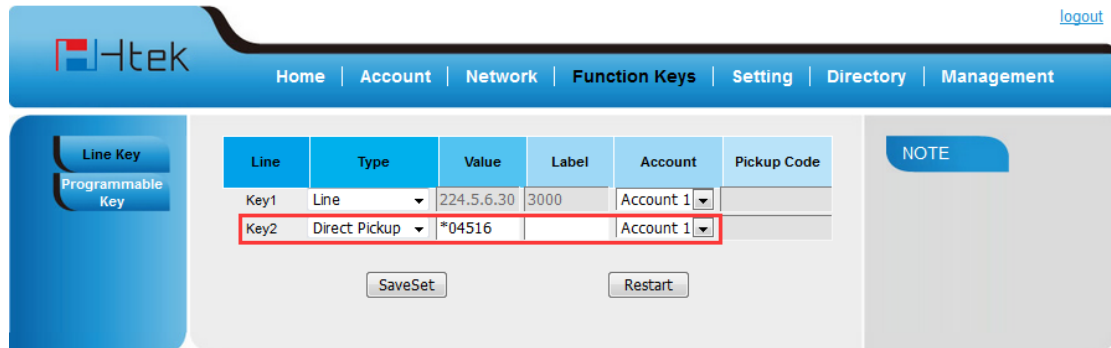




Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Direct Pickup	*04516		Account 1	

Group Pickup


With this feature, you can pick up the specified group that you want incoming calls.


To configure the Pick up via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press info soft key to select the Group Pickup in the type field.
4. Enter pickup code and followed the desired group number
5. Press  or Save soft key to save the configuration

To configure the Group Pick up via Web interface

1. Click Function keys → Line or Line Key.

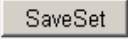2. Select the desired Line or Line Key and select Group Pickup in the Type.
3. Enter the pickup code and followed the desired Group number in the Value field.
4. Click the  to save the configuration.

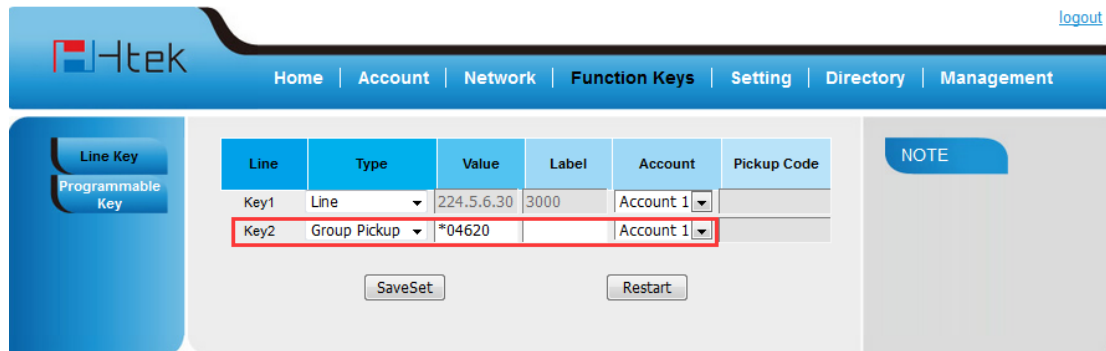




Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Group Pickup	*04620		Account 1	


Call Park

With this feature, you can put a call on hold and continue the conversation from another phone.

To configure the Call Park via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Press  and  or press Switch soft key to select the Call Park type.
3. Press  or Save soft key to save the configuration

To configure the Call Park via Web interface

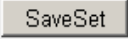1. Click Function key → Line or Line Key.
2. Select the desired Line or Line Key and select Call park in the Type.
3. Enter the call park code in the value field.
4. Click the  button to save the configuration.

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Speed Dial	Default	863		Account 1	
Key3	Call Park	Default	70		Account 1	
Key4	N/A	Default			Account 1	
Key5	N/A	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	
Key10	N/A	Default			Account 1	

For More information for Call Park, please see: [Call park note](#) on www.htek.com/

Intercom

When use the intercom feature, you can quickly get access connect to the configured one.


To configure intercom feature via phone interface


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Press and or press info soft key to select the intercom in the type field.
3. Enter the intercom codes followed by desired number.
4. Press or Save soft key to save the configuration

Then the selected Line or Line Key will work as intercom.

To configure Intercom feature via Web Interface


1. Click Function keys → Line or Line Key.
2. Select the wanted Line or Line Key.
3. Enter intercom codes followed by desired number in the Value field.

4. Select the Account ID
5. Click the  button to save the configuration.

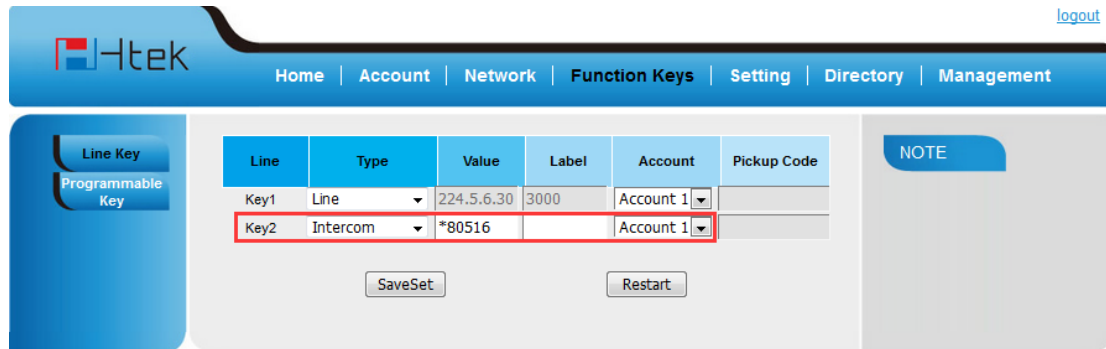

Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Intercom	*80516		Account 1	

If you want to achieve the intercom feature, you must enable the “Allow Auto Answer By Call-Info”


1. Click the account
2. Select the desired account from the pull-down list of Account in the Account field.
3. Click the advanced
4. Enable the “Allow Auto Answer By Call-Info”
5. Click the  button to save the configuration.




Send Anonymous	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Anonymous Call Rejection	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Check SIP User ID	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Auto Answer	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Allow Auto Answer By Call-Info	<input type="radio"/> No	<input checked="" type="radio"/> Yes	

Intercom Barge

If this option is enabled, when there is an active call and an incoming intercom call arrives, the previous call will be put on hold and the intercom call will be answered

1. Click the Setting → Preference
2. Set On or Off for Intercom Barge.
3. Click  for the setting.

**Note :**


This feature is not available on all servers. For more information, contact your system administrator.


DTMF




When the key is configured as DTMF key, you are allowed to send out the desired DTMF number during the conversation.

To use this feature, you should sure that the DTMF Tone is on.

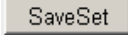
To configure the DTMF via Web Interface


1. Click Setting→Preference
2. Select On for Keypad DTMF Tone.
3. Click the  button to save the configuration.

**To configure the DTMF via Phone Interface**

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the DTMF in the type field.
4. Enter the value with the Desired DTMF number
5. Press  or Save soft key to save the configuration

To configure the DTMF via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select DTMF in the Type.
3. Fill the value with the Desired DTMF number.
4. Click the  button to save the configuration.

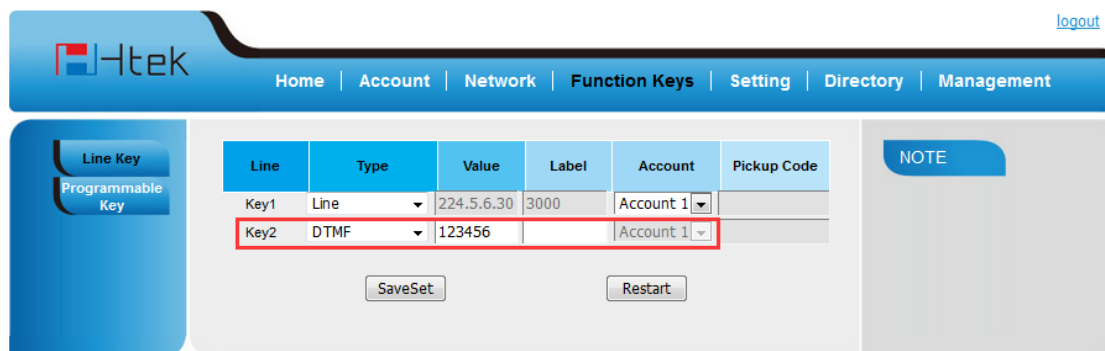




Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	DTMF	123456		Account 1	


Prefix

If the key is configured as Prefix key, you can set the number prefix (e.g. Before the number plus 9), then you don't input 9, press the key and 9 will display on the LCD interface.


To configure the Prefix via Phone Interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Prefix in the type field.
4. Enter the value with number that you want to set as prefix
5. Press  or Save soft key to save the configuration

To configure the Prefix via Web interface

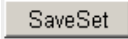1. Click Function key → Line or Line Key.
2. Select the desired Line or Line Key and select Prefix in the Type.
3. Fill the value.
4. Click the  button to save the configuration.

Then when you press this key, the set value is input directly.

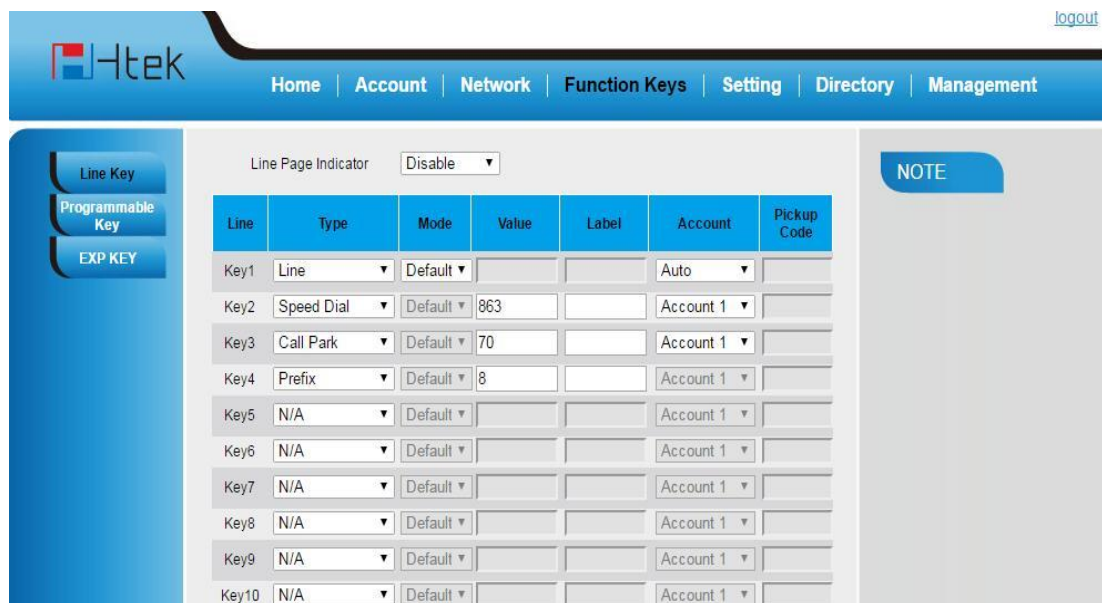




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Speed Dial	Default	863		Account 1	
Key3	Call Park	Default	70		Account 1	
Key4	Prefix	Default	8		Account 1	
Key5	N/A	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	
Key10	N/A	Default			Account 1	

Local Group


When use the Local Group feature, press the key and enter the local Contacts interface quickly.

To configure the Local group via Phone Interface


1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Local group in the type field.

4. Press  or Save soft key to save the configuration

To configure the Local Group via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select Local group in the Type.
3. Click the  button to save the configuration.

Then you can press the local group key to access the pre-defined contact group in the local directory quickly.

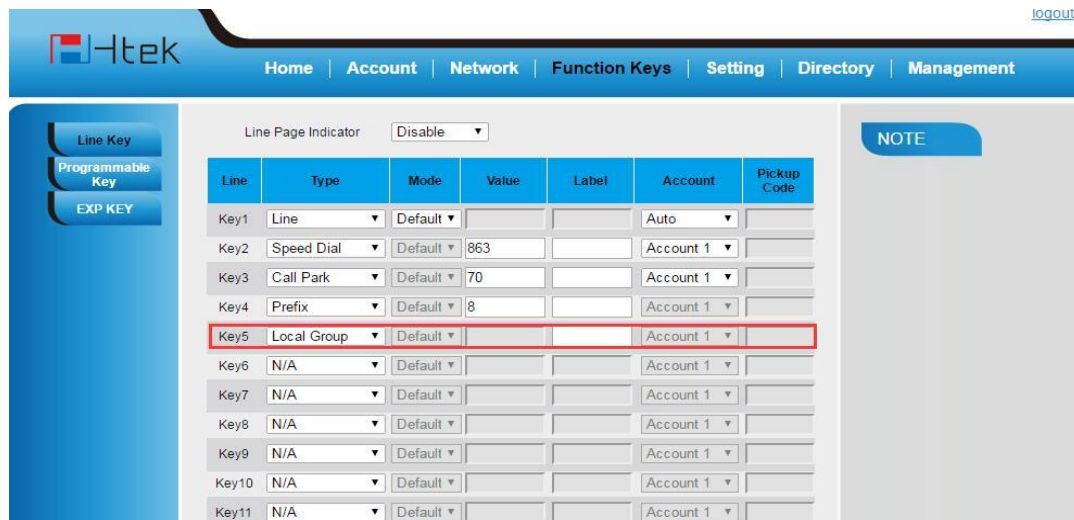

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Speed Dial	Default	863		Account 1	
Key3	Call Park	Default	70		Account 1	
Key4	Prefix	Default	8		Account 1	
Key5	Local Group	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	
Key10	N/A	Default			Account 1	
Key11	N/A	Default			Account 1	

XML Group

When use the XML Group feature, press the key and enter the Remote Contacts interface quickly.

To configure the XML group via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.

3. Press and key to select the XML group in the type field.
4. Press or Save soft key to save the configuration

To configure the XML Group via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select XML group in the Type.
3. Click the button to save the configuration.

The screenshot shows the Htek web interface with a navigation menu at the top: Home | Account | Network | Function Keys | Setting | Directory | Management. On the left, there are buttons for 'Line Key', 'Programmable Key', and 'EXP KEY'. The main content area has a 'Line Page Indicator' set to 'Disable'. Below this is a table with columns: Line, Type, Mode, Value, Label, Account, and Pickup Code. The table contains 10 rows, with Key7 highlighted in red. Key7 has 'XML Group' selected in the Type column and 'Account 1' in the Account column. Other keys have various types like 'Line', 'Speed Dial', 'Call Park', 'Prefix', 'Local Group', 'XML Browser', 'N/A'.

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Speed Dial	Default	863		Account 1	
Key3	Call Park	Default	70		Account 1	
Key4	Prefix	Default	8		Account 1	
Key5	Local Group	Default			Account 1	
Key6	XML Browser	Default	http://192.16		Account 1	
Key7	XML Group	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	
Key10	N/A	Default			Account 1	

LDAP

When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure the LDAP via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.

3. Press and key to select the LDAP in the type field.
4. Press or Save soft key to save the configuration

To configure the LDAP via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select LDAP in the Type.
3. Click the button to save the configuration.

The screenshot shows the Htek web interface with the following elements:

- Header: Htek logo and navigation menu (Home, Account, Network, Function Keys, Setting, Directory, Management).
- Left sidebar: Line Key, Programmable Key, EXP KEY.
- Main content area:

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Speed Dial	Default	863		Account 1	
Key3	Call Park	Default	70		Account 1	
Key4	Prefix	Default	8		Account 1	
Key5	Local Group	Default			Account 1	
Key6	XML Browser	Default	http://192.168		Account 1	
Key7	XML Group	Default			Account 1	
Key8	LDAP	Default			Account 1	
Key9	N/A	Default			Account 1	
- Right sidebar: NOTE section.

XML Browser

You can use this key feature to access the Xml browser quickly. The Xml browser allows you to create custom services which meet your functional requirements on the server. You can customize practical applications, such as weather report, stock information, Google search, etc.

To configure the XML Browser via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line

Key1(for example)

2. Select the wanted Line Key.
3. Press and key to select the XML Browser in the type field.
4. Filled the access URL for xml browser
5. Press or Save soft key to save the configuration

To configure the XML Browser via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select xml browser in the Type.
3. Filled the access URL for xml browser (e.g.: http://192.168.0.62/xmlbrowser/text.xml)
4. Click button to save the configuration.

The screenshot shows the Htek web interface with the following elements:




- Header: Htek logo, Home | Account | Network | **Function Keys** | Setting | Directory | Management, and a [logout](#) link.
- Left sidebar: Line Key, Programmable Key, EXP KEY.
- Main content area:

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	XML Browser	Default	http://192.		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	
- Right sidebar: NOTE


Broadsoft Group

When using the BroadSoft Group feature, by just pressing the key you can enter the Broadsoft Contacts interface quickly.


To configure the Broadsoft group via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Broadsoft group in the type field.
4. Press  or Save soft key to save the configuration




To configure the Broadsoft group via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select Broadsoft group in the Type.
3. Click the  button to save the configuration.


Conference

The Htek IP Phone supports up to 5-way conference. You are allowed to configure the programmable key to be used as a conference key. This key works same as .

To configure the Conference via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Conference in the type field.
4. Press  or Save soft key to save the configuration

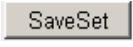


To configure Conference via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Conference in the Type.
3. Click the  button to save the configuration.


Forward

If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward interface and you can set the Forward to number, then when there is any call to the number will be forwarded to the set number automatically.

To configure the Forward via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Forward in the type field.
4. Enter the Number that to forward.
5. Press  or Save soft key to save the configuration

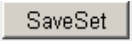


To configure Forward via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Forward in the Type.
3. Enter the Value with the number you want to forward
4. Click the  button to save the configuration.


Transfer

You are able to configure the key as a transfer key to perform the Blind/Attended/Semi-Attended Transfer.

To configure the Transfer via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Transfer in the type field.
4. Enter the Number that transfer to
5. Press  or Save soft key to save the configuration




To configure Transfer via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Transfer in the Type.
3. Enter the Value with the number that wanted transfer to
4. Click the  button to save the configuration.


Hold

The key can be configured as a hold key. You can use this key to hold and resume a call during the conversation.

To configure the Hold via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Hold in the type field.
4. Press  or Save soft key to save the configuration

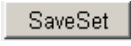


To configure Hold via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Hold in the Type.
3. Click the  button to save the configuration.


Group Listening

With this feature, when you have an active call, you can listen using Handset and Free-speaker, but only can use the handset to speak.

To configure the Group listening via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the group listening in the type field.
4. Press  or Save soft key to save the configuration




To configure Group listening via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Group listening in the Type.
3. Click the  button to save the configuration.


DND

If the key is configured as DND key, allows you to activate the DND function immediately when you press it and the phone will reject all incoming calls automatically. Press it again to deactivate DND mode.

To configure the DND via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the DND in the type field.
4. Press  or Save soft key to save the configuration

To configure DND via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select DND in the Type.
3. Click the  button to save the configuration.

To enable DND feature

Press the DND soft key when the phone is idle status, and then DND icon shown on the LCD.


To disable DND feature

Press the DND soft key again, and then there is no DND icon on the LCD.

Redial

If the key is configured as Redial key, you can redial the last placed call from the IP Phone.

To configure Redial via Web Interface


1. Click Function keys →Line key/Line Key
2. Select the desired Key and select redial in the Type.
3. Enter the Label displayed on LCD.
4. Click the  button to save the configuration.

SMS

Send SMS

To send SMS via web Interface

1. Click Setting→SMS
2. Select the account(from which account the SMS sent)
3. Enter the target number
4. Input the content of SMS, and click Send.

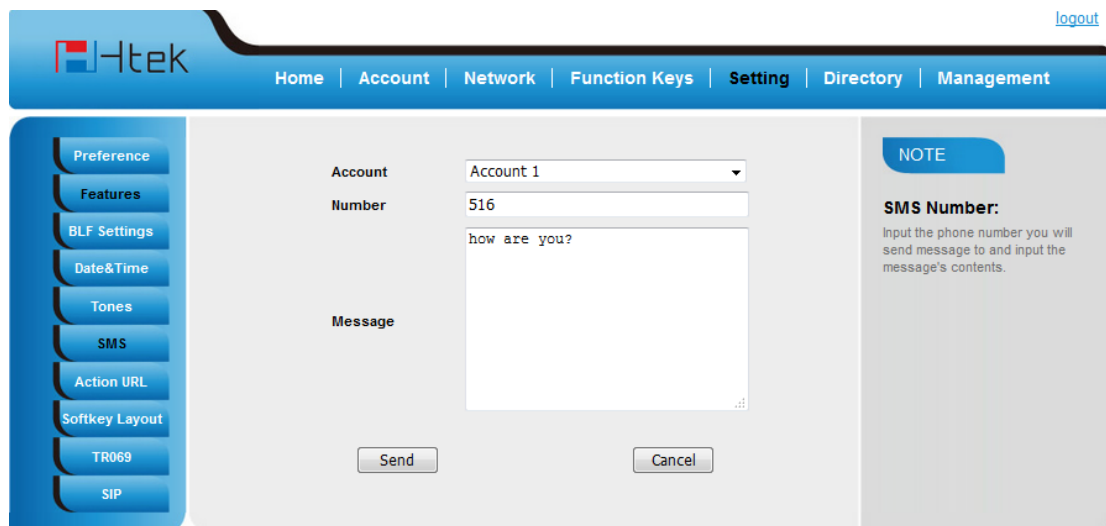




To send SMS via phone interface:


1. Click Menu → Message → Text Message → Set SMS
2. Enter the contents in the white field.
3. Press the save button
4. Select the account (from which account the SMS sent)
5. Enter the target number (to which account the number sent)
6. Press the Send button.

Set SMS Line Key

To configure the SMS via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the SMS in the type field.
4. Press  or Save soft key to save the configuration




To configure SMS via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select SMS in the Type.
3. Click the  button to save the configuration.


Record

With record feature, you can record your calls by pressing the record key .

To configure the record via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press info soft key to select the Record.
4. Press  or Save soft key to save the configuration

To configure the record via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Record in the Type.
3. Click the  button to save the configuration.

[logout](#)

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

Line Page Indicator Disable ▾

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line ▾	Default ▾			Auto ▾	
Key2	Speed Dial ▾	Default ▾	863		Account 1 ▾	
Key3	Call Park ▾	Default ▾	70		Account 1 ▾	
Key4	Prefix ▾	Default ▾	8		Account 1 ▾	
Key5	Local Group ▾	Default ▾			Account 1 ▾	
Key6	XML Browser ▾	Default ▾	http://192.16		Account 1 ▾	
Key7	XML Group ▾	Default ▾			Account 1 ▾	
Key8	LDAP ▾	Default ▾			Account 1 ▾	
Key9	BroadSoft Gro	Default ▾			Account 1 ▾	
Key10	Record ▾	Default ▾			Account 1 ▾	
Key11	N/A ▾	Default ▾			Account 1 ▾	
Key12	N/A ▾	Default ▾			Account 1 ▾	

NOTE

Note:
Please contact the system administrator whether support this feature or not.

URL Record

The phone sends HTTP URL request to trigger a recording. Contact your system administrator for the predefined URL.

To configure the URL record via phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press and key to select the URL Record.
4. Press or Save soft key to save the configuration

To configure the record via Web Interface




1. Click Function keys → Line Key.
2. Select the desired Line or Line Key and select URL Record in the Type.

3. Click the  button to save the configuration.


Paging

With this feature, you can call a paging group directly.

To configure the paging via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press info soft key to select the Paging.
4. Enter the paging code followed the number.
5. Press  or Save soft key to save the configuration

To configure the Paging via Web interface

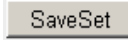1. Click Function keys → Line Key.
2. Select the desired Line Key and select Paging in the Type.
3. Enter the paging code followed the number.
4. Click the  button to save the configuration.

Share Line

Htek IP Phone supports “Share Call Appearance” by Broadsoft and XCast standard. This feature allows members of the SCA group to shared SIP lines and provides status monitoring (idle, active, progressing, hold) of the shared line. When there is an incoming call designated for the SCA group, all of the members of the group will be notified of an incoming call and will be able to answer the call from the phone with the SCA extension registered in the group.

All the users that belong to the same SCA group will be notified by visual indicator when a






user seizes the line and places an outgoing call, and all the users of this group will not be able to seize the line until the line goes back to an idle state or when the call is placed on hold (with the exception of when multiple call appearances are enabled on the server side).

In the middle of the conversation, there are two types of hold: Public Hold and Private Hold. When a member of the group places the call on public hold, the other users of the SCA group will be notified of this by the red-flashing button and they will be able to resume the call from their phone by pressing the line button. However, if this call is placed on private-hold, no other member of the SCA group will be able to resume that call.


To enable share call appearance, the user would need to register the share line account on the phone. In addition, they would need to navigate to “Account” -> “Advanced” on the webpage and set the line to “Share Line” and “SIP Server Type”, and configure the line key or Line Key as “line” type with the desired account on webpage or LCD. If the user requires more share call appearances, the user can configure multiple line keys (Function keys->Line key) to be “line” type associated with the account.

This feature is very useful in the boss and secretary scenario. For example, the secretary can share the boss' extension number on her phone. When there is an incoming call to the extension number of the boss, both the phones of the boss and the secretary will ring simultaneously. Either the boss or the secretary can answer the call. Calls on share line can be placed on hold or barged in.

To configure the line key as line via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Line in the type field.
4. Press  and  key to select the Account ID.
5. Enter the Label
6. Enter the Value
7. Press  or Save soft key to save the configuration

To configure the line key as line via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Line in the Type.
3. Enter the Value.
4. Enter the Label.
5. Select the Account ID
6. Click the  button to save the configuration and then restart.




Note :

This feature is not available on all servers. For more information, contact your system administrator.

Public Hold


The key can be configured as a public hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold or resume a call.


To configure the Public hold via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Public Hold.
4. Press  or Save soft key to save the configuration

To configure public hold via Web Interface

1. Click Function keys → Line Key.

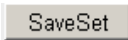

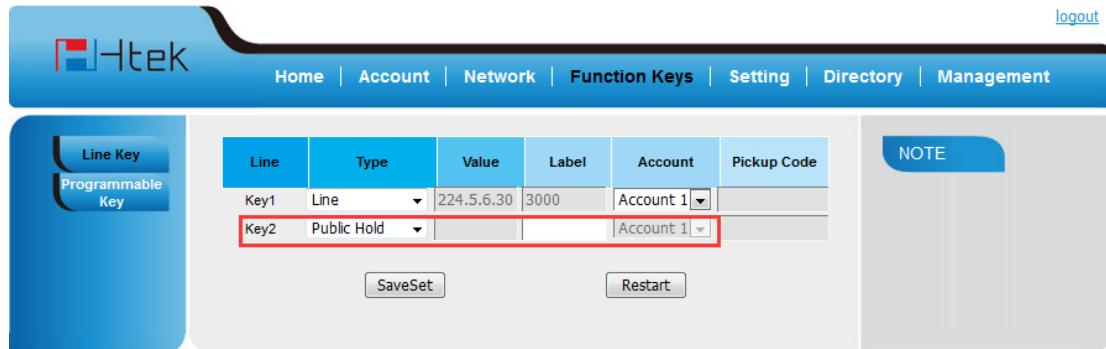
2. Select the desired Key and select public hold in the Type.
3. Click the  button to save the configuration.




Private Hold

The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can resume the call.

To configure the Private hold via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Private Hold.
4. Press  or Save soft key to save the configuration

To configure private hold via Web Interface

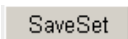1. Click Function keys → Line Key.
2. Select the desired Key and select private hold in the Type.
3. Click the  button to save the configuration.

Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Private Hold			Account 1	

Hot Desking

Hot Desking originates from the definition of being the temporary physical occupant of a work station or surface by a particular employee. A primary motivation for Hot Desking is cost reduction. This feature is regularly used in places where all employees are not in the office at the same time, or not in the office for a very long time, which means their personal offices are often vacant, consuming valuable space and resources.


You can use Hot Desking on the IP phone to logout the existing accounts and then log in a new account, which allows many users to share the phone resource in different times. To use this feature, first you need to configure a Hot Desking key in the advance settings. This feature is supported on the version 1.0.3.82 or later

To configure the hot desking via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press and or press key to select the hot desking.
4. Enter the display name in the value field.
5. Press or Save soft key to save the configuration

To configure the hot desking via web interface:

1. Click Function keys → Line Key.

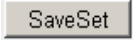2. Select the desired Key and select hot desking in the Type.
3. Enter the number in the value field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.

To use the Hot desking feature on the user interface:

1. Press the Hot desking key when the IP Phone is idle.
2. Enter the Extension number and password

```
1.User Name:532
2.Password:*****
Cancel abc Delete Save
```

3. Click Save softkey

You can see the account information which has changed.

Note :





This feature is not available on all servers. For more information, contact your system administrator.

ACD


ACD feature is often used in offices for customer service, such as call center. The ACD system handles large volumes of incoming calls from callers who have no need to talk to a specific person but who require assistance from any of the different personnel at the earliest point. The ACD feature on the Htek IP Phone allows the ACD system to distribute calls from large volumes of incoming calls to the registered IP phone users. To use this feature, first you should configure an ACD key in the advance settings.

To configure the ACD via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.

3. Press  and  or press  key to select the ACD.
4. Enter the label in the label field.
5. Select the desired account in the Account field.
6. Press  or Save soft key to save the configuration

To configure the ACD via web interface:

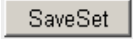1. Click Function keys →Line Key.
2. Select the desired Key and select ACD in the Type.
3. Enter the label in the label field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.




Note :

This feature is not available on all servers. For more information, contact your system administrator.

Zero Touch


You can use this key feature to configure auto provision and network parameters quickly. This feature is supported on the version 1.0.3.82 or later

To configure the zero touch via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press  key to select the zero touch

4. Press  or Save soft key to save the configuration

To configure the zero touch via web interface:

1. Click Function keys →Line Key.
2. Select the desired Key and select zero touch in the Type.
3. Click the  button to save the configuration.

To use the zero touch feature on the user interface:

1. Press the zero touch key when the IP Phone is idle.
2. The IP Phone will enter the WAN Port interface, you can change the WAN Type by pressing the Navigation keys.
3. Press the Next softkey to enter Network interface, then you can configure some information.
4. Press the Next softkey again, you can configure auto provision information.
5. When you finish the setting, you can press the OK to accept the changes.

Note :




This feature is not available on all servers. For more information, contact your system administrator.

Multicast Paging


You can use multicast paging to quickly and easily forward out time sensitive announcements to people within the multicast group. You can configure a multicast paging key or a paging list key on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

Sending RTP Stream

To configure a multicast paging key via phone interface

1. Press Menu→Feature →line or Line Key→Line Key1 (e.g.)
2. Press  and  or switch key to select the multicast paging in the type field.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.
4. The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
5. Press  or Save soft key to save the configuration

To configure a multicast paging key via web interface

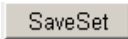1. Function keys->line key :
2. Select the desired Key and select multicast paging in the Type.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.
The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
4. Click the  button to save the configuration.

Sending RTP Stream :

Press the multicast paging key when the phone is idle.

The phone sends RTP to a preconfigured multicast address (IP: Port). Any phone in the local network then listens to the RTP on the preconfigured multicast address (IP:Port). For both sending and receiving of the multicast RTP, there is no SIP signaling involved.

The multicast paging key LED illuminates solid green.

Receiving RTP Stream

You can configure the phone to receive a Real Time Transport Protocol (RTP) stream from the pre-configured multicast address(es) without involving SIP signaling. You can specify up to 10 multicast addresses that the phone listens to on the network.

How the phone handles incoming multicast paging calls depends on Paging Barge and Paging Priority Active parameters configured via web user interface.

Paging Barge

The paging barge parameter defines the priority of the voice call in progress. If the priority of an incoming multicast paging call is lower than that of the active call, it will be ignored automatically. If Disabled is selected from the pull-down list of Paging Barge, the voice call in progress will take precedence over all incoming multicast paging calls.

Valid values in the Paging Barge field:

- 1 to 10: Define the priority of the active call, 1 with the highest priority, 10 with the lowest.
- Disabled: The voice call in progress will take precedence over all incoming paging calls.


Paging Priority Active

The paging priority active parameter decides how the phone handles incoming multicast paging calls when there is already a multicast paging call on the phone. If enabled, the phone will ignore incoming multicast paging calls with lower priorities, otherwise, the phone will answer incoming multicast paging calls automatically and place the previous multicast paging call on hold. If disabled, the phone will automatically ignore all incoming multicast paging calls.


Multicast Codec :

You can only configure the codec by web interface.

To configure multicast codec key via web interface

1. Click Directory ->Multicast Paging :
2. Select the desired codec from the pull-down list of Multicast Codec
3. Click the  button to save the configuration.

To configure multicast listening addresses via web interface :

1. Click Directory->Multicast paging.
2. Select the desired value from the pull-down list of Paging Barge.
3. Select the desired value from the pull-down list of Paging Priority Active.
4. Enter the multicast IP address(es) and port number (e.g., 224.5.6.20:2000) which the phone listens to for incoming RTP multicast in the Listening Address field.
5. Enter the label in the Label field.
6. Click  button to save the configuration.

[logout](#)

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Directory](#)
[Remote Phone Book](#)
[Call History](#)
[LDAP](#)
[Network Directory](#)
[MultiCast](#)
[Paging](#)

Paging Barge

Paging Priority Active

Multicast Codec

Index	Listening Address	Label	Multi Priority
IP Address 1	224.5.6.20:2000	2000	1
IP Address 2	<input type="text"/>	<input type="text"/>	2
IP Address 3	<input type="text"/>	<input type="text"/>	3
IP Address 4	<input type="text"/>	<input type="text"/>	4
IP Address 5	<input type="text"/>	<input type="text"/>	5
IP Address 6	<input type="text"/>	<input type="text"/>	6
IP Address 7	<input type="text"/>	<input type="text"/>	7
IP Address 8	<input type="text"/>	<input type="text"/>	8
IP Address 9	<input type="text"/>	<input type="text"/>	9
IP Address 10	<input type="text"/>	<input type="text"/>	10

NOTE

Note:

The priorities of listening to multicasting addresses can be predefined: 1 being the highest priority, 10 with the lowest in priority order. Both the multicast paging sender and receiver's phones play a warning tone when establishing a multicast paging call. Listening to Multicasting addresses can be configurable via web interface only.


Upgrade

Factory Reset

To set Factory Reset by phone interface

1. Press Menu → Setting → Advanced Setting(default password: admin) → Phone Setting → Factory Reset
2. Press OK soft key in the warning page.

To Reset to Factory via web interface

1. Click Management → Upgrade
2. Click  and then confirm the setting.



The screenshot shows the Htek web interface. The top navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. A sidebar on the left lists various management options: Password, Upgrade, Auto Provision, Configuration, Trusted CA, Server CA, Tools, Restart, and Reboot. The main content area is titled 'Image Version' and contains the following information:

- Image Version
 - Major Version: IMG--1.0.3.74(2014-12-27 11:40:00)
 - Minor Version: IMG--1.0.3.75(2015-01-13 10:44:00)
- **Reset To Factory**
- ROM Firmware Upgrade 未选择文件。


A 'NOTE' section on the right provides additional information:

- Image Version:** Show the information of the two system image version .
- Reset To Factory :** Reset all the settings of the phone to default configurations.
- Restart:** one simple operation for restart the voip application.

Pcap Feature

To use pcap via web interface :

1. Click Management → Tools
2. Click Start and then operation the phone
3. When finish the operation, click stop and then click Export.
4. Then you'll get the Pcap captures.

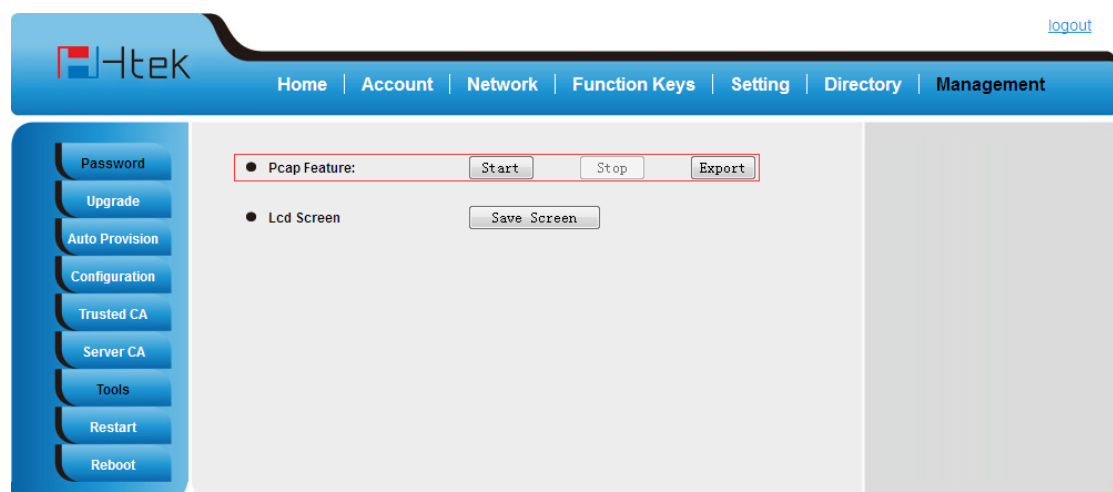


The screenshot shows the Htek web interface with the 'Tools' menu item selected in the sidebar. The main content area displays the 'Pcap Feature' section, which includes the following controls:

- **Pcap Feature:**
- Lcd Screen

System Log

To download system log via web interface:

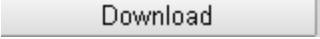1. Click Management→Configuration
2. Click  of the system Log
3. Then you'll get a txt file: syslog.txt.



Upgrade

To upgrade via HTTP, the “Management”->“auto provision” ->” Firmware Upgrade”-> “Upgrade Mode” field needs to be set to HTTP, respectively. “Firmware Server Path” needs to be set to a valid URL of a HTTP server, server name can be in either FQDN or IP address format. Here are examples of some valid URL.

- e.g. firmware.mycompany.com:5688/Htek
- e.g. www.mycompany.com:5688/fm/Htek
- e.g. 218.2.83.110

Instructions for firmware upgrade via HTTP:

(1) End users can choose to download the free HTTP server from <http://httpd.apache.org/> or use

Microsoft IIS web server. Then setup HTTP server.

(2) Unzip the firmware file and put all of them under the *root/fm* directory of the HTTP server.

(3) Visiting “HTTP:\\192.168.0.254\fm\fw903.rom on localhost by browser” to verify the HTTP Server. If visiting “HTTP: \\192.168.0.254\fm\fw903.rom on another computer and it not prompted to download fw926.rom file on this computer, please check if the firewall is on or off (Suggest you turn off the firewall).

To configure the server path via web interface:


1. Click Management→Auto provision:
2. Select the upgrade mode in the upgrade mode field
3. Enter the Firmware server path and config server path (192.168.0.254 is HTTP server).
4. Enter the HTTP server’s username and password (optional).


5. Click the button to save the configuration.
6. Restart the UC903, IP Phone will restart and auto-get firmware files from HTTP server.

NOTES:

- Htek recommends end-user use the Htek HTTP server. For large companies, we recommend to maintain their own TFTP/HTTP/FTP/HTTPS server for upgrade and provisioning procedures.
- Once a “Firmware Server Path” is set, user needs to update the settings and restart the IP Phone. If the configured firmware server is found and a new code image is available, the UC902 will attempt to retrieve the new image files by downloading them into the UC902’s SDRAM. During this stage, the UC902’s LEDs will blink fastly until the checking/downloading process is completed. Upon verification of checksum, the new code image will then be saved into the Flash. If TFTP/HTTP/FTP/HTTPS fails for any reason (e.g. TFTP/HTTP/FTP/HTTPS server is not responding, there are no code image files available for upgrade, or checksum test fails, etc), the UC902 will stop the TFTP/HTTP/FTP/HTTPS process and simply boot using the existing code image in the flash.
- Firmware upgrade may take as long as 3 to 8 minutes over Internet, or just 1 minutes if it is performed on a LAN. It is recommended to conduct firmware upgrade in a controlled LAN environment if possible. For users who do not have a local firmware upgrade server.
- Htek’s latest firmware is available at <http://www.htek.com> →Support→Firmware Download.
- Oversea users are strongly recommended to download the binary files and upgrade firmware locally in a controlled LAN environment.

To upgrade manually via the Web configuration interface

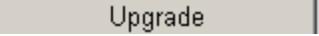
1. Click Management → Upgrade
2. Click Brower or the blank.
3. Select the firmware (fw903.rom)and then click .

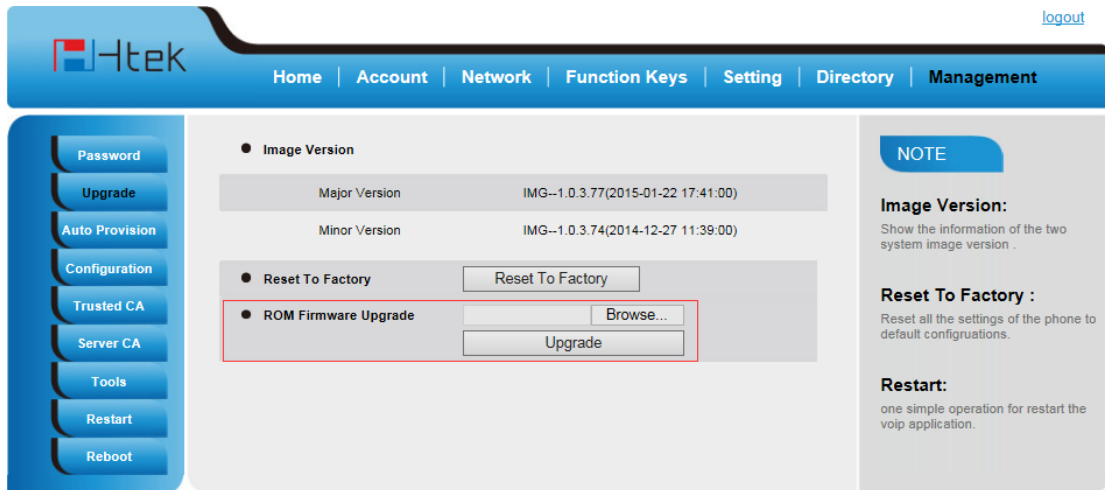

Configuration File

To download configuration file:


1. Click Management → Configuration →Download Device Configuration
2. Then you can get a file: cfg.bin or cfg.xml

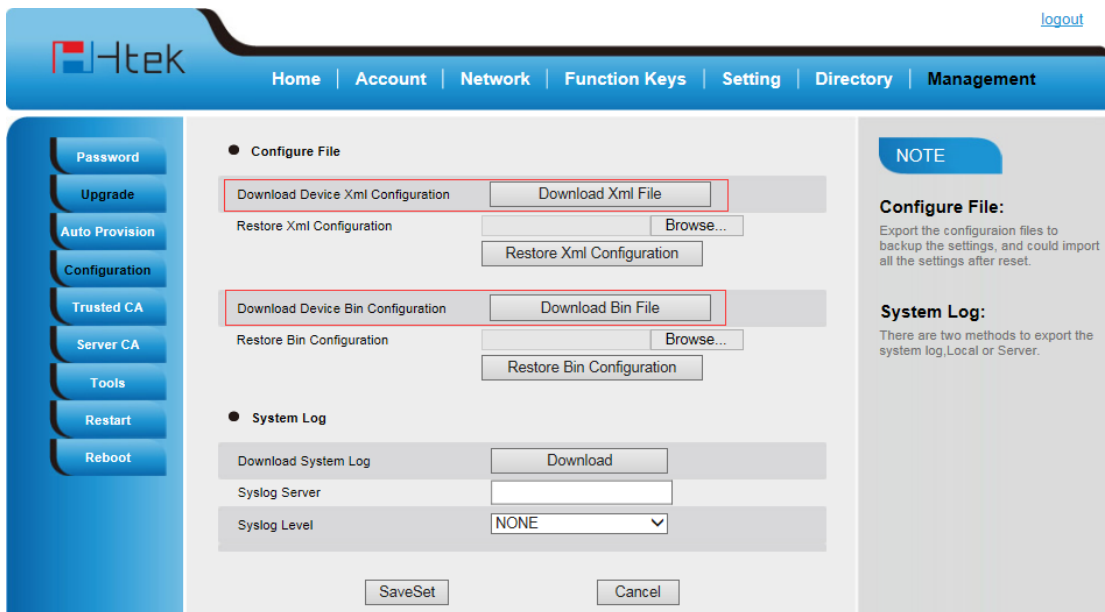

To Restore a configuration file:

1. Click Management → Configuration → Restore configuration

2. Select the xxx.bin or xxx.xml file, and then Click the **Restore Bin Configuration**, then IP Phone will reboot.

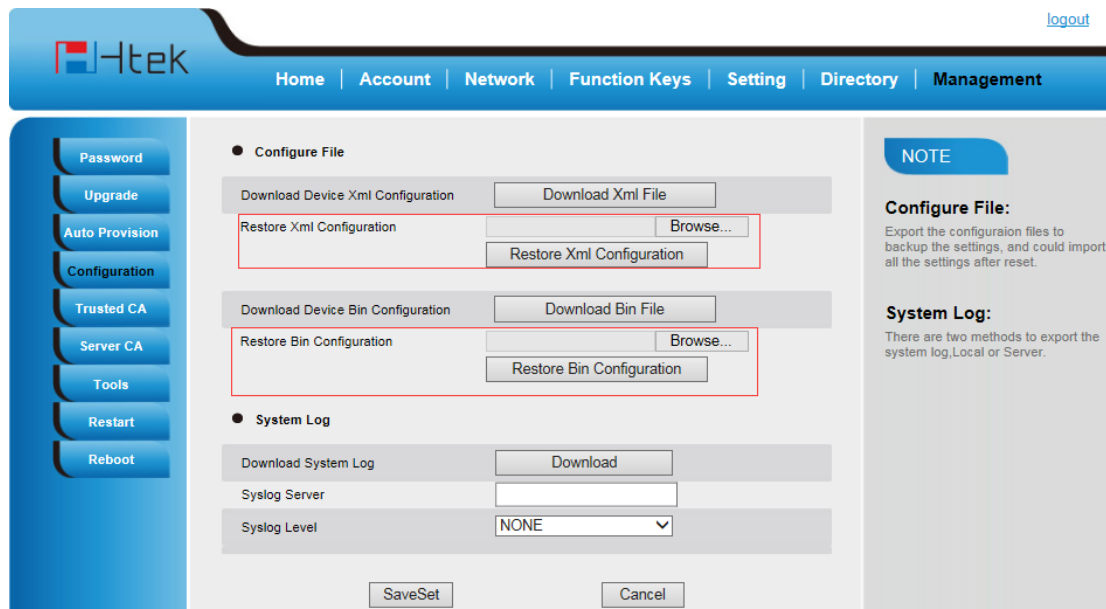

Troubleshooting

Why is the phone LCD screen blank?

1. Ensure your phone is properly plugged into a functional AC outlet.
2. Ensure that the phone isn't plugged into a plug controlled by a switch that is off.
3. If the phone is plugged into a power strip, try plugging it directly into a wall outlet instead.
4. If your phone is powered from PoE, ensure you use a PoE compliant switch or hub, or contact your system administrator for more information.
5. Check if the power LED is on to ensure that the phone is powered on.

Why does the phone display "Network Unavailable"?

To resolve:

- Ensure that the Ethernet cable is plugged into the Internet port on the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is functioning well.
- If the problem still persists, contact your system administrator for more information.

Why can't I get a dial tone?

To resolve:

- Check for any loose connections and that the phone has been installed properly. For the Installation instructions, refer to the phone installation section.
- Check whether dial tone is present on one of the audio modes.
- Switch between the Handset, Headset (if you have) or Hands-Free Speakerphone to check whether dial tone is present for one of the audio modes.
- If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.

Where to set the tone?

You can set the tone on web interface:

- Click Setting→Tones
- Define the dial tone, ringing, busy tone...
- For the tones, you can check with your system administrator.
- For more Click [Tone Notes](#).

How to download XML Configuration?

- Click Management→Configuration→

How to Import Trusted CA certificate?

- Click Management→Trusted CA

The screenshot shows the Htek Management interface. The top navigation bar includes Home, Account, Network, Function Keys, Setting, Directory, and Management. A sidebar on the left contains menu items: Password, Upgrade, Auto Provision, Configuration, Trusted CA (highlighted), Server CA, Tools, Restart, and Reboot. The main content area features a table with columns: Index, Issued TO, Issued By, and Expiration. The table lists 10 entries, each with a checkbox in the Expiration column. Below the table is a 'Delete' button. Further down, there is a section for 'Import Trusted Certificate Files' with a 'Browse...' button, an 'Import Trusted Certificates' button, and radio button options for 'Trusted Certificates': Default Certificates (selected), Custom Certificates, and All Certificates. 'SaveSet' and 'Cancel' buttons are at the bottom. A 'NOTE' box on the right contains instructions for password and trusted CA import.

How to Import Server CA certificate?

- Click Management → Server CA

The screenshot shows the Htek Management interface for the Server CA configuration page. The top navigation bar and sidebar are identical to the previous screenshot. The main content area features a table with columns: Issued TO, Issued By, and Expiration. Below the table is a 'Delete' button. Further down, there is a section for 'Import Server Certificate Files' with a 'Browse...' button, an 'Import Server Certificates' button, and radio button options for 'Device Certificates': Default Certificates (selected) and Custom Certificates. 'SaveSet' and 'Cancel' buttons are at the bottom. A 'NOTE' box on the right contains instructions for password and trusted CA import.

How to use Vlan?

- For Vlan information, please click [VLAN Note](#)

How to use LLDP?

- For LLDP information, please click [VLAN Note](#)
- VLAN Notes including:
 1. Voice VLAN
 2. Major Benefits of Using VLANs
 3. VLAN discovery method on Htek ip phones
 4. LLDP Feature on Htek IP Phones
 5. Supported TLVS of IP Phones
 6. Configuring LLDP Feature
 7. DHCP VLAN
 8. Open the DHCP VLAN on the Htek IP Phones
 9. VLAN under Bridge Mode
 10. VLAN under NAT Mode

How to Set LCD and Web GUI?

- Click [LCD and Web GUI custom Guide](#)

How to Upgrade via FTP?

- Click [How to Upgrade Note](#)

How to make Ringtone?

- Click [How to Make Ringtone](#)

How to use Open VPN?

- Click [Open VPN note](#)

Provisioning Guide on Free PBX

- Click [Set Auto Provision on FreePBX](#)

Redundancy Server

- Click [Redundancy Server](#)

How to Use Auto Provision Phonebook?

- Click [About AP Phonebook](#)

All Documents

- Click [Documents Guide](#), you can get all tech files.